



E-01 Fan Cover • Engine Shroud

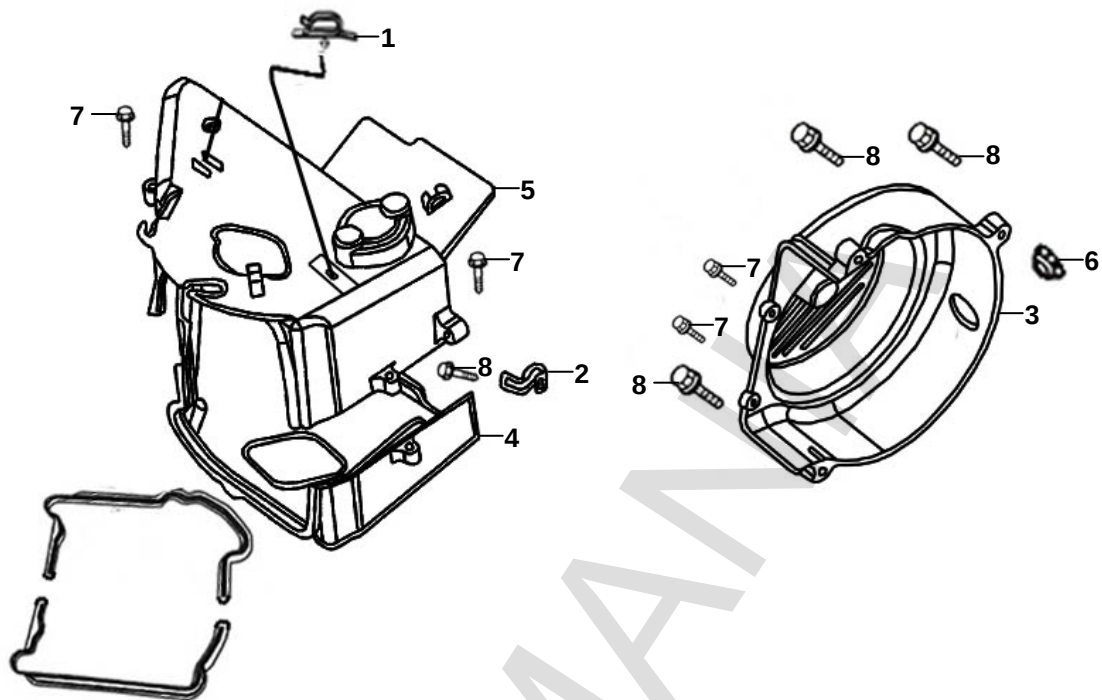


Ref. No	Part Number	Description	Reqd. No.
1	11383-GY6-A000	Breather tube clammer	1
2	11385-GY6-9000	CARB drain tube clammer	1
3	19610-GYB2-A000	Fan cover COMP	1
4	1962A-GYB2-A000	Shroud A COMP	1
5	1963A-GYB2-A000	Shroud B COMP	1
6	70529-657-6700	Side panel grommet B	1
7	93904-35380	Tapping screw 5X16	4
8	96001-06025-08	SH. flange bolt 6X25MM	4

E-02-1 Cylinder Head Cover • Carburetor

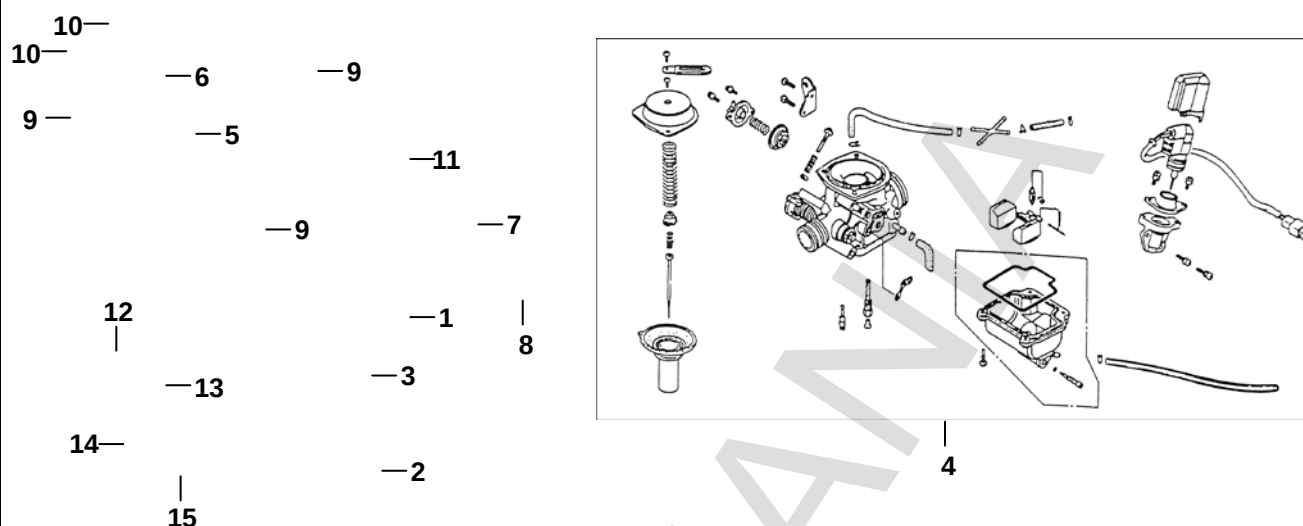


Ref.No	Part Number	Description	Reqd. No.
1	12301-GYB2-0000	Head cover COMP	1
2	12302-GYB2-A000	Breather cover	1
3	12391-GYB2-A000	Head cover gasket	1
4	16100-ANA-0100-02	Carburetor ASSY	1
5	18601-MJ1-7901	Reed valve COMP	1
6	18612-H6A-0001	Reed valve cover	1
7	18646-M9Q-0000	AI pipe gasket	1
8	18647-GYB3-A001	AI pipe	1
9	95701-06025-08	SH. flange bolt M6X25	4
10	50303-AAA-0000	UP STEEL BALLS AND	2
11	50304-AAA-0000	LOWER STEEL BALLS AND	1
12	18650-35A-0000	A.I.C.V. unit	1
13	18659-GYB3-A000	A.I.C.V. stay	1
14	18657-ARA-0101	A.I.C.V.-reed valve tube	1
15	18860-H6H-9103	AICV tube(IN)	1

E-03 Cylinder Head • Hold

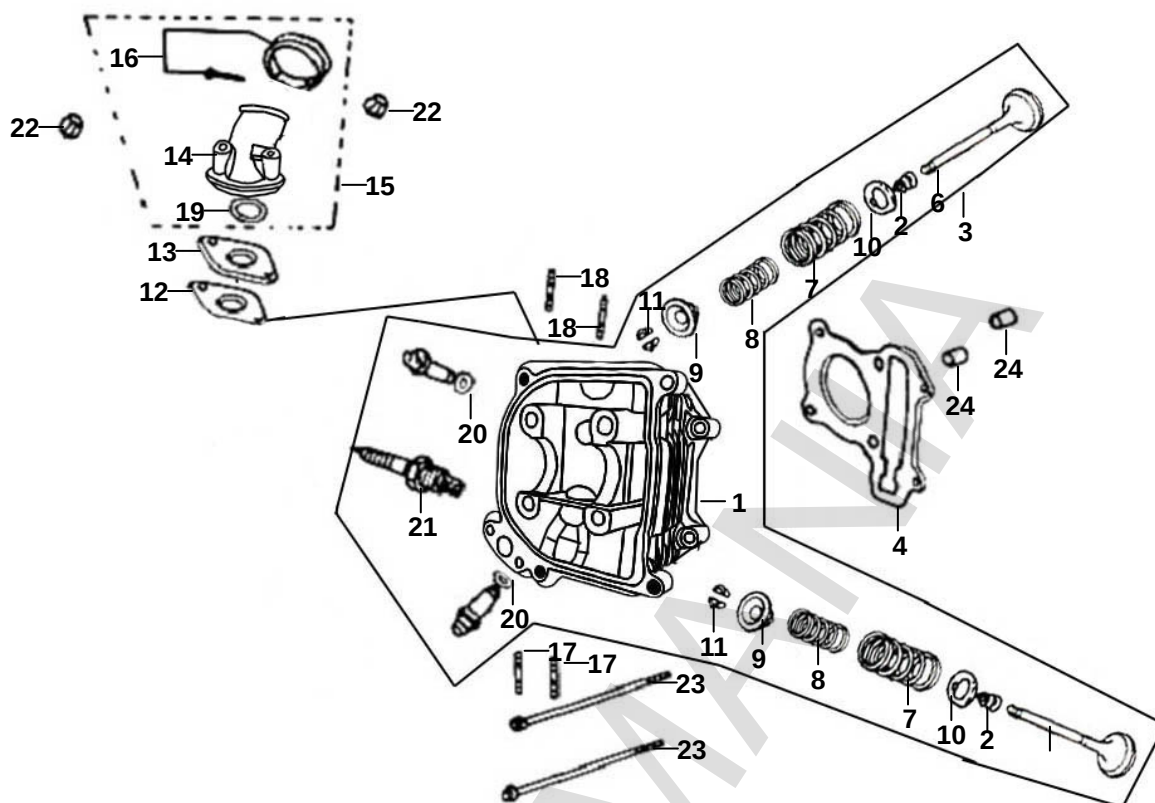


Ref. No	Part Number	Description	Reqd. No.
1	12200-GYB2-0001	Cylinder head COMP	1
2	12209-H6B-9000-M1	Valve stem seal	2
3	1220A-A2C-0007	Cylinder head ASSY	1
4	12251-GYB2-0000	Cylinder head gasket	1
5	14771-M8Q-0000=	IN. valve	1
6	14721-GYB2-A000	EX. valve	1
7	14751-GYB2-A100	Valve outer spring	2
8	14761-GYB2-A100	Valve inner spring	2
9	14771-GB4-6802	Valve spring retainer	2
10	14775-M9Q-0000	Valve spring seat outer	2
11	14781-A01-A000	Valve cotter	4
12	16201-M92-0002	Insulator gasket	1
13	16211-M92-0002=	Carburetor Insulator	1
14	17110-ANA-0000	IN. pipe COMP	1
15	1711A-ANA-0003	IN. pipe ASSY	1
16	17256-M9Q-0000	Insulator band	1
17	90033-M9Q-0000	Stud bolt 6x16	2
18	90033-M9Q-0000	Stud bolt 6x16	2
19	91301-028-0000	O-Ring 27x2	1
20	91305-M9Q-0001	O-Ring 9x1.6	2

E-03-1 Cylinder Head • Hold

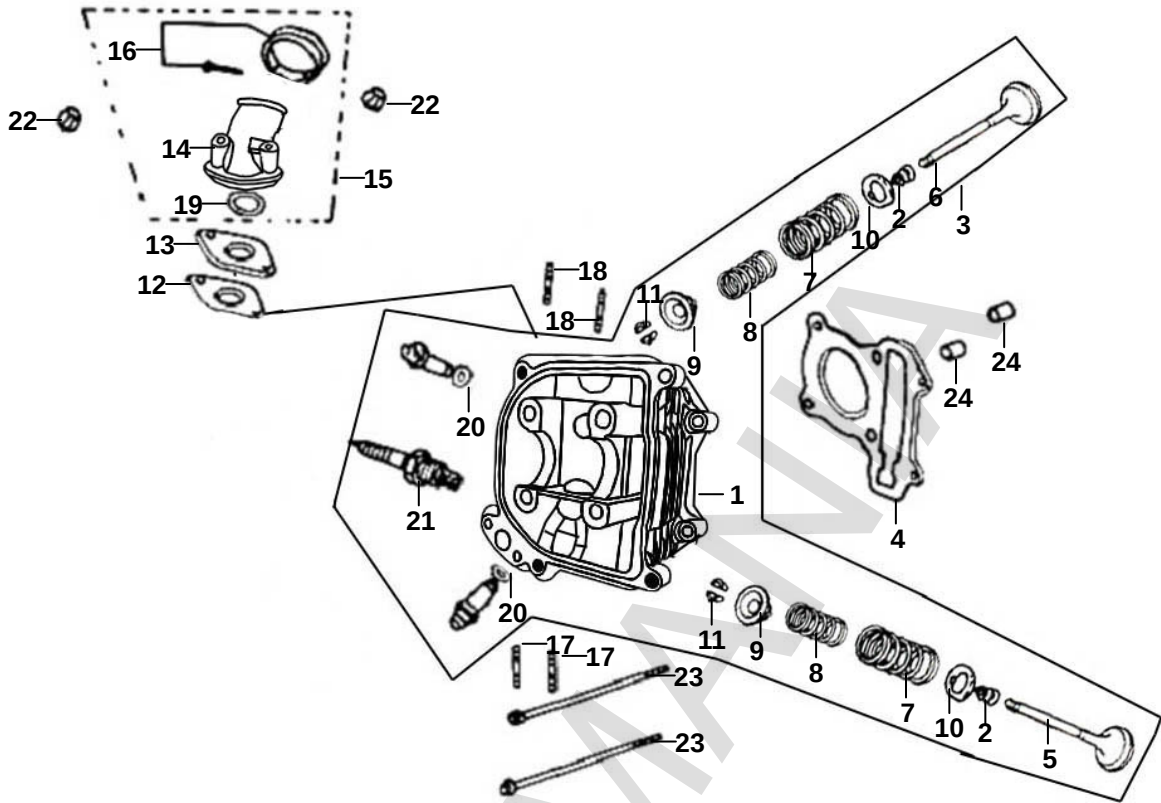


Ref. No	Part Number	Description	Reqd. No.
21	98056-57718	Spark plug (CR7HSA NGK)	1
22	94050-06080	Flange nut 6mm	2
23	96001-06100-08	SH. flange bolt 6x85	2
24	94301-08140	DOWEL PIN 8X14	2

E-04 Cam Shaft • Valve

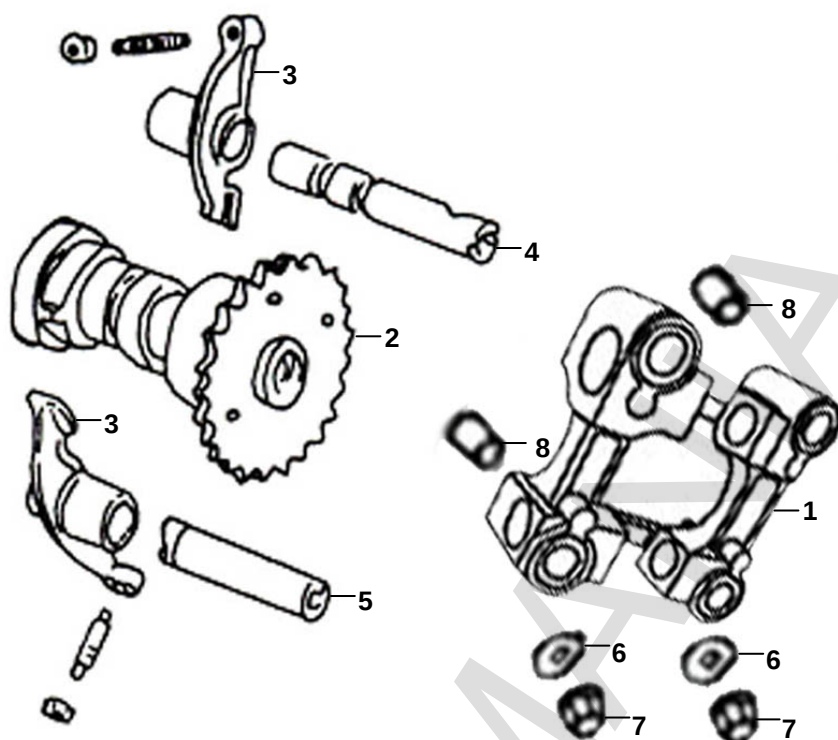


Ref. No	Part Number	Description	Reqd. No.
1	12211-GYB2-A000	Cam shaft holder	1
2	14100-GYB2-A000	Cam shaft COMP	1
3	14431-GYB2-A000	Valve rocker arm	2
4	14451-GY6-9000	IN. rocker arm shaft COMP	1
5	14452-GY6-9000	EX. rocker arm shaft COMP	1
6	90465-MC4-0000	Washer A	4
7	94050-08080	Flange nut 7mm	4
8	90703-HC4-0000	Dowel pin 10x14	2

E-05 Cam Chain • Tensioner

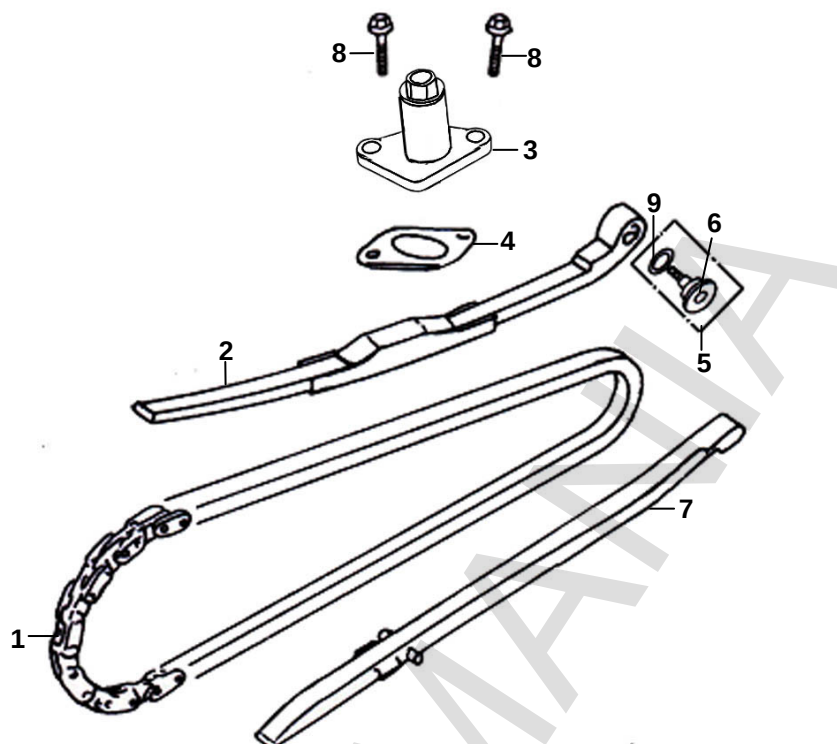


Ref. No	Part Number	Description	Reqd. No.
1	14401-M92-0030	Cam chain	1
2	14510-GY6-9000	Cam chain tensioner	1
3	14520-GYB2-A001	Tensioner lifter ASSY	1
4	14523-GY6-9000	Tensioner lifter gasket	1
5	1453A-V02-0001	Tensioner pivot ASSY	1
6	14531-GY6-A000	Tensioner pivot	1
7	14610-GY6-9000	Cam chain guide COMP	1
8	96001-06022-08	SH. flange bolt 6x22	2
9	91301-GRO-0030	O-Ring 15.2x1.5	1

E-06 Cylinder

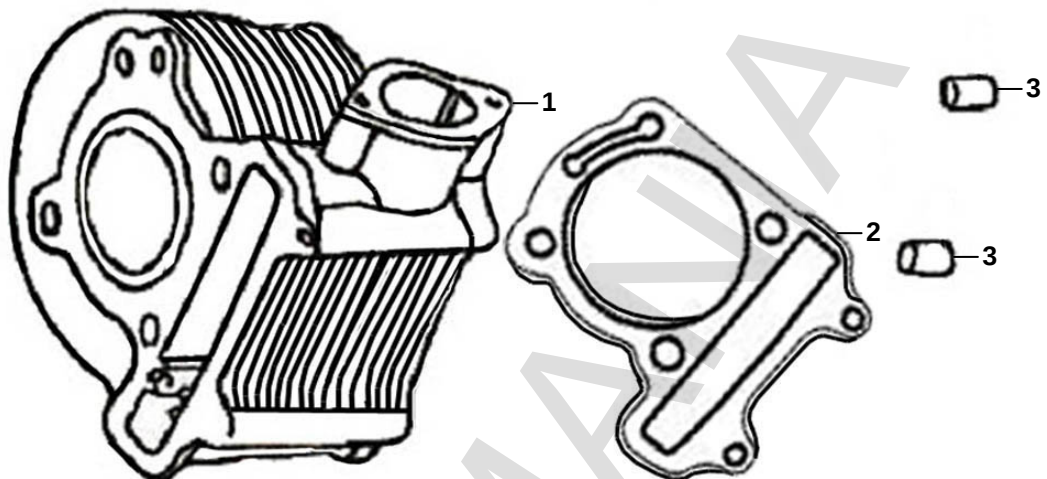


Ref. No	Part Number	Description	Reqd. No.
1	12101-GYB2-A000	Cylinder	1
2	12191-GYB2-A000	Cylinder gasket	1
3	90703-HC4-0000	Dowel pin 8X14	2

E-07 Right Crank Case Cover

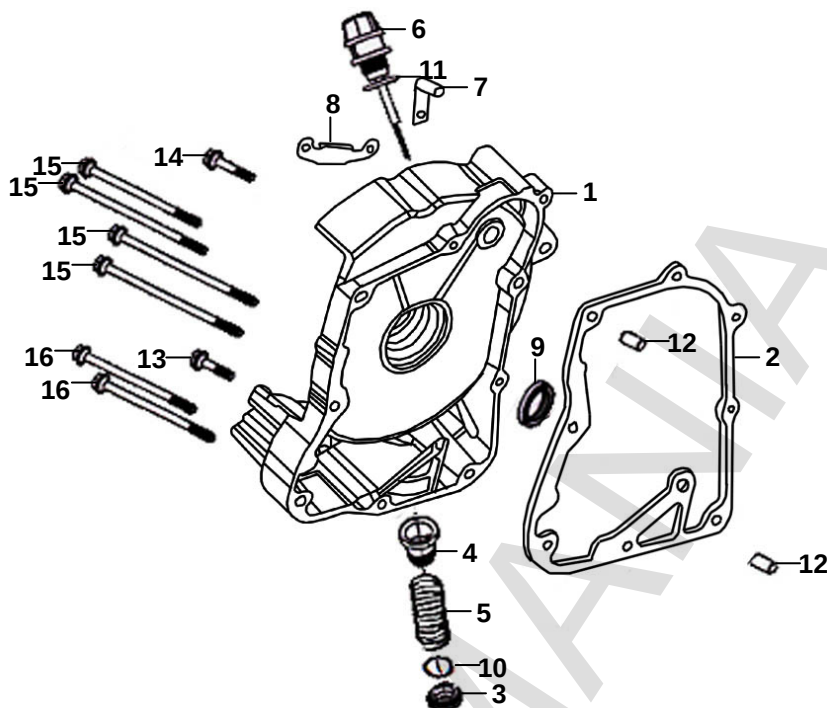


Ref. No	Part Number	Description	Reqd. No.
1	11331-GY6-0001	R. crank case cover	1
2	11394-GY6-9000	R. crank case cover gasket	1
3	12361-M9Q-0001	Tappet ADJ. HOLE CAP	1
4	15421-H66-0000	Oil filter screen	1
5	15426-M9Q-0000	Oil filter screen spring	1
6	15651-AAA-0000	Oil level gauge ASSY	1
7	19613-GY6-9000	Starter motor cord clampe	1
8	32961-GY6-9000	Clamper ACG cord	1
9	91201-GY6-9031	Oil seal 19.8X30X5	1
10	91302-M9Q-0000	O-RING 30.8MM	1
11	91307-035-0000	O-Ring 18x3	1
12	94301-08140	Dowel pin 8x14	2
13	96001-06032-08	SH. flange bolt 6x32	1
14	96001-06040-08	SH. flange bolt 6x40	1
15	96001-06095-08	SH. flange bolt 6x95	4
16	96001-06110-08	SH. flange bolt 6x110	2

E-08 Generator • Fly Wheel

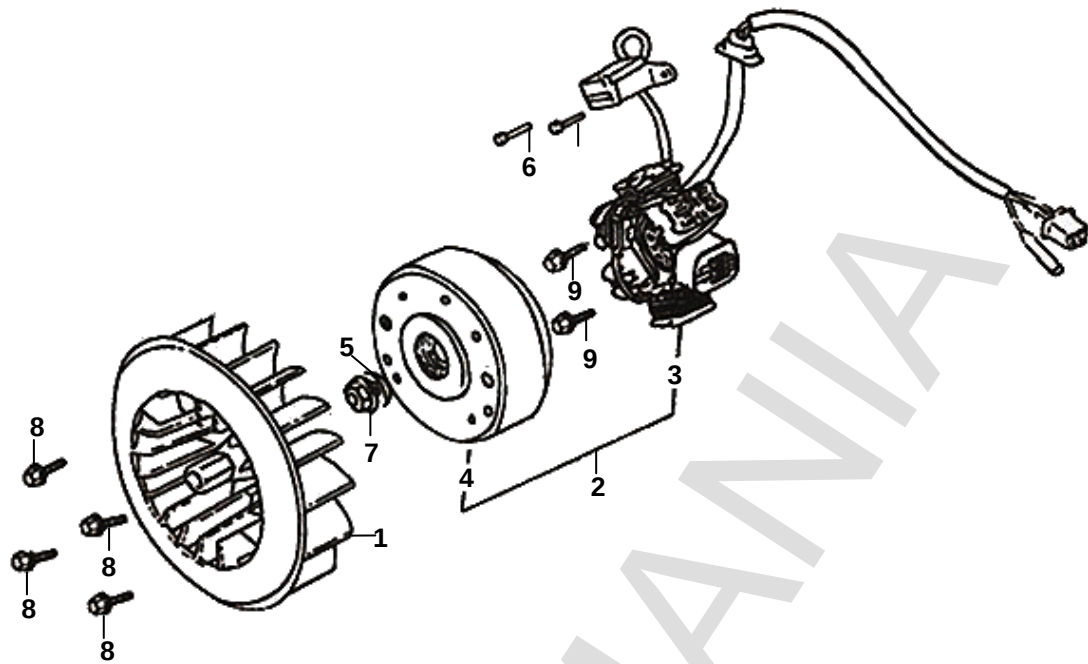


Ref. No	Part Number	Description	Reqd. No.
1	19510-GYB2-A000	Cooling fan COMP	1
2	31100-ABA-0000	A. C. G. ASSY (CDI)	1
3	31120-X1A-0000	A. C. G. stator	1
4	31110-ABA-0000	A. C. G. flywheel	1
5	90440-166-0000	Plain washer 12.2	1
6	92101-05012-0A	HEX. bolt 5 x12	2
7	94050-12080	Flange nut 12MM	1
8	96001-06018-08	SH. flange bolt 6x18	4
9	96001-06020-00	SH. flange bolt 6x20	2

E-09 Oil Pump

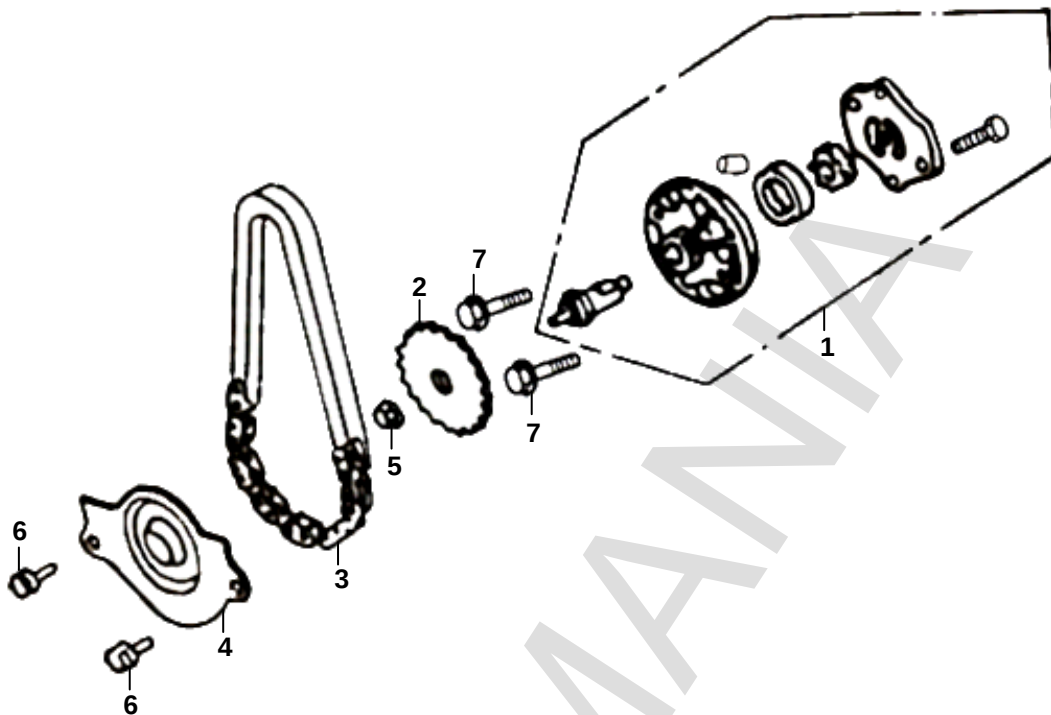


Ref. No	Part Number	Description	Reqd. No.
1	15100-H12-A000	Oil pump ASSY	1
2	15133-GY6-9000	Oil pump driven sprocket	1
3	15141-V02-0001-M1	Oil pump chain	1
4	15711-GY6-9000	Oil separator	1
5	94050-06080	Flange nut 6MM	1
6	96001-06012-08	SH. flange bolt 6x12	2
7	96001-06025-08	SH. flange bolt 6x25	2

E-10 Starter Motor • Clutch Outer

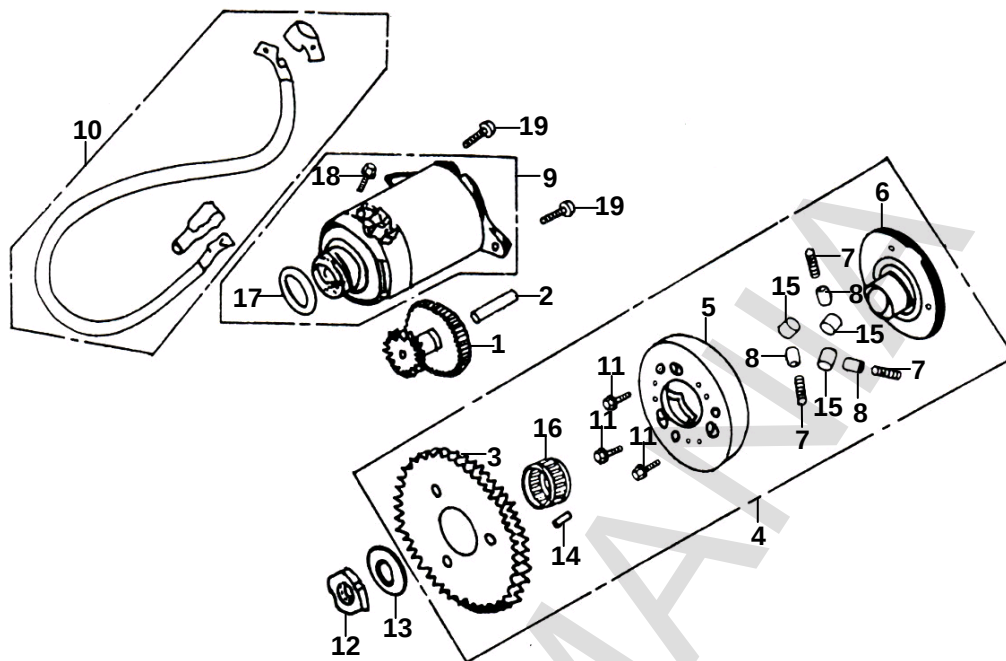


Ref. No	Part Number	Description	Reqd. No.
1	28101-GY6-9000	Starter reduction gear	1
2	28102-GY6-9000	Starter reduction gear shaft	1
3	28110-GY6-9000	Starter clutch gear COMP	1
4	2812A-V02-0005-TW	Starter clutch outer ASSY	1
5	28120-GY6-900E	Starter clutch outer COMP	1
6	28125-GY6-9000	Starter clutch flange	1
7	28124-H66-0000	Starter clutch roller spring	3
8	28126-323-0001	Starter clutch roller spring cap	3
9	31200-GY6-0000	Starter motor ASSY	1
10	32410-H2G-0000	Starter motor cable	1
11	90001-GY6-9000	Socket bolt 6x10	3
12	90201-GY6-9000	Lock nut 22MM	1
13	90403-GY6-9000	Thrust washer 22.2x31x2.5	1
14	90701-GY6-9000	Dowel pin 5x6	1
15	91101-179-7100	Roller 10x10	3
16	91104-GY6-9010-M1	Needle bearing 28x32x17	1
17	91309-425-0030	O-Ring 24.4x3.1	1
18	91981-KN7-6700	Washer screw 5x8	1
19	96001-06016-08	SH. flange bolt 6x16	2

E-11 Left Crank Case Cover

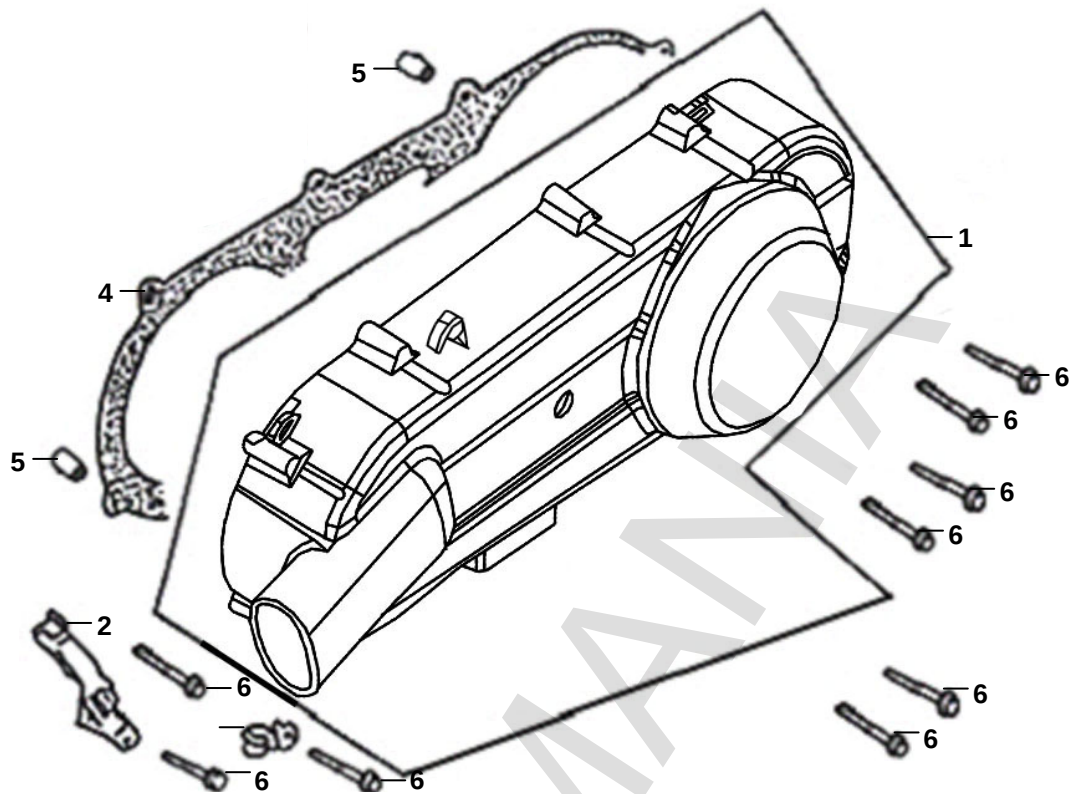


Ref. No	Part Number	Description	Reqd. No.
1	11341-ABA-0004	L. crank case cover	1
2	11381-ABA-0000	Throttle cable clammer	1
3	11383-GY6-A000	Breather drain tube clammer	1
4	11395-ABA-0000	L cover gasket	1
5	94301-08140	Dowel pin 8x14	2
6	96001-06040-08	SH. flange bolt6X40	9

E-12 Drive Face • Kick Starter Spindle

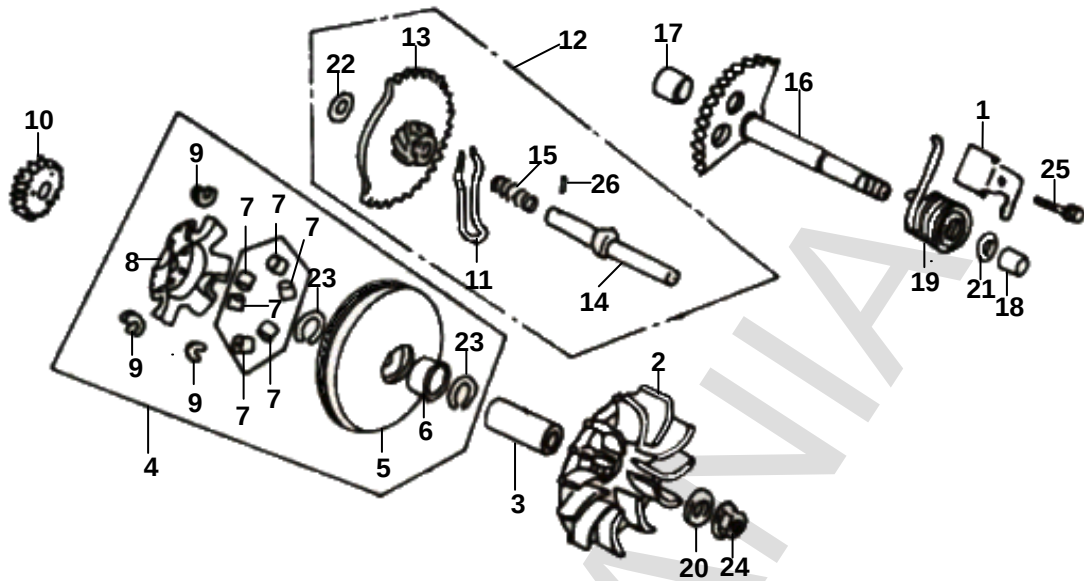


Ref. No	Part Number	Description	Reqd. No.
1	11206-GY6-9000	Kick return stopper plate	1
2	22102-GY6-9000	Drive face	1
3	22105-GY6-9001	Drive face boss	1
4	2211A-ABA-0000	Movable drive face ASSY	1
5	22110-H69-0000	Movable drive face COMP	1
6	22112-H69-3000	Bush 24x28x30	1
7	22121-M9B-0000	Weight roller COMP (13G)	6
8	22131-H69-0000	Ramp plate	1
9	22132-H69-0000	Slide piece	3
10	28221-GY6-9000	Kick starter driven gear	1
11	28223-KG8-0000	Starter gear friction spring	1
12	2823A-V02-9200	Starter idle gear ASSY	1
13	28230-GY6-9400	Starter idle gear COMP	1
14	28241-GY6-9400	Starter idle shaft	1
15	28242-GA7-0000	Starter idle spring	1
16	28250-GY6-900B	Kick starter spindle COMP	1
17	28254-GA7-003A	Bush 12x16x12	1
18	28254-KG8-910A	Kick spindle bush 14*18*16	1
19	28281-KG8-9011	Kick starter spring	1
20	90440-166-0000	Plain washer 12.2	1

E-12-1 Drive Face • Kick Starter Spindle

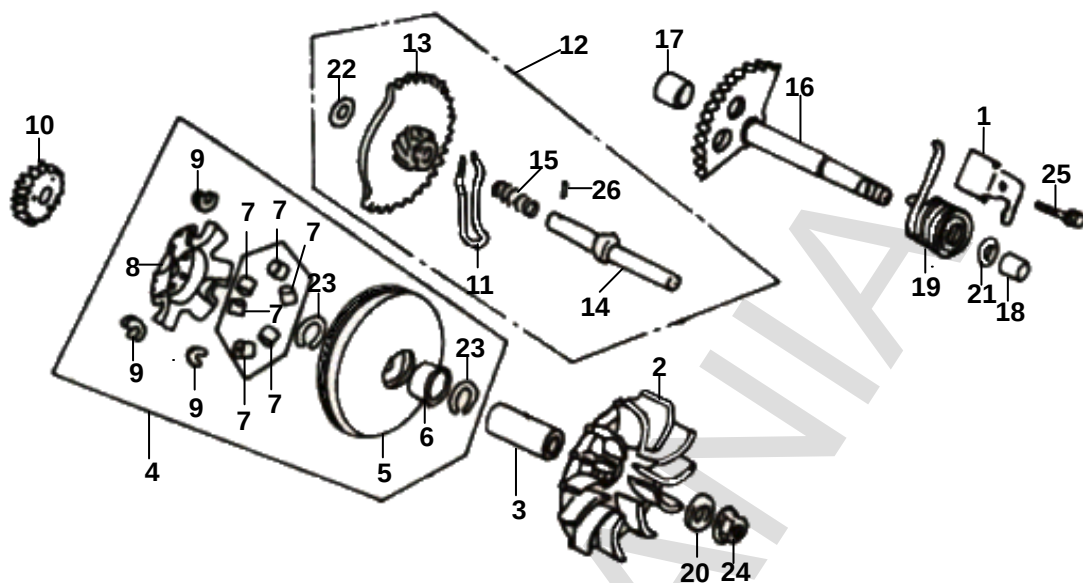


Ref. No	Part Number	Description	Reqd. No.
21	90451-155-0000	Washer 14MM	1
22	90452-KG8-0000	Washer 12.5MM	1
23	90601-M9Q-9000	Clip 28MM	2
24	94050-12080	Flange nut 12MM	1
25	96001-06014-08	SH. flange bolt 6x14	1
26	96220-30085	Roller 3x8.5	1

E-13 Driven Pulley

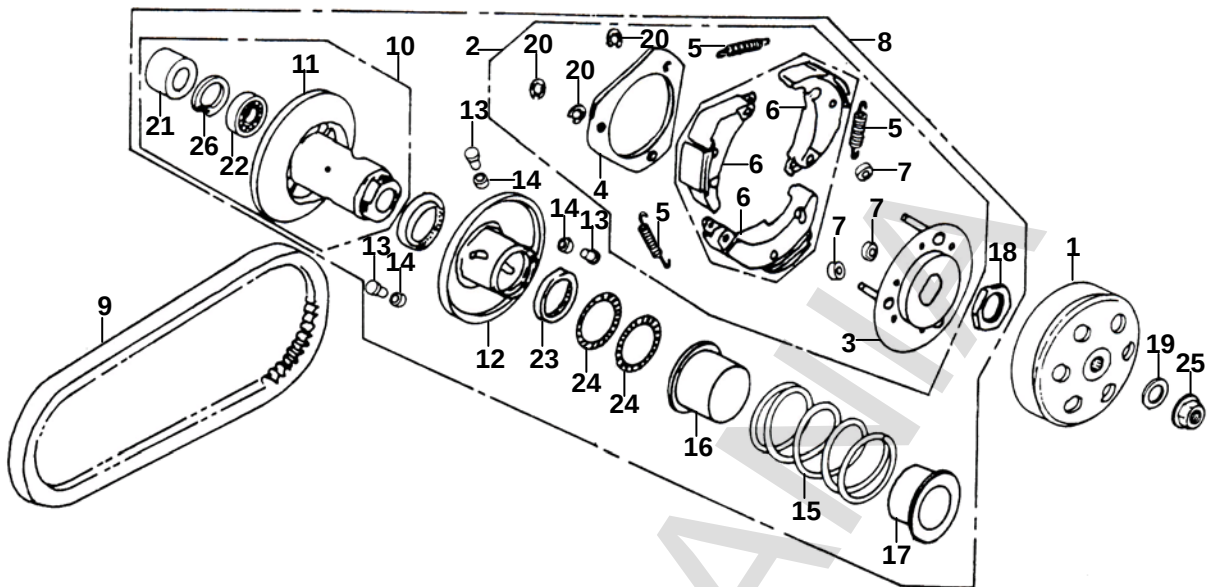


Ref. No	Part Number	Description	Reqd. No.
1	22101-GY6-9400	Clutch outer	1
2	22300-ABA-0000	Drive plate ASSY	1
3	22350-H69-0000	Drive plate COMP	1
4	22361-H69-0000	Clutch side plate	1
5	22401-H69-0000	Clutch spring	3
6	22530-ABA-0000	Clutch weight COMP	3
7	22804-H69-0000	Clutch damper rubber	3
8	23010-ABA-0000	Driven pulley ASSY	1
9	23100-A2E-0000	Drive belt	1
10	23200-H69-0000	Driven face ASSY	1
11	23210-H69-0000	Driven face COMP	1
12	23220-H69-0000	Movable driven face COMP	1
13	23225-H69-0000	Roller guide pin	3
14	23226-H69-0000	Guide roller	3
15	23233-M92-0000	Driven face spring	1
16	23237-H69-0000	Seal collar	1
17	23238-H69-0000	Spring collar	1
18	90202-M9Q-0000	Special nut 28MM	1
19	90440-166-0000	Plain washer 10.2X20X2.0	1
20	94540-07010	Cir clip 7MM	3

E-13-1 Driven Pulley

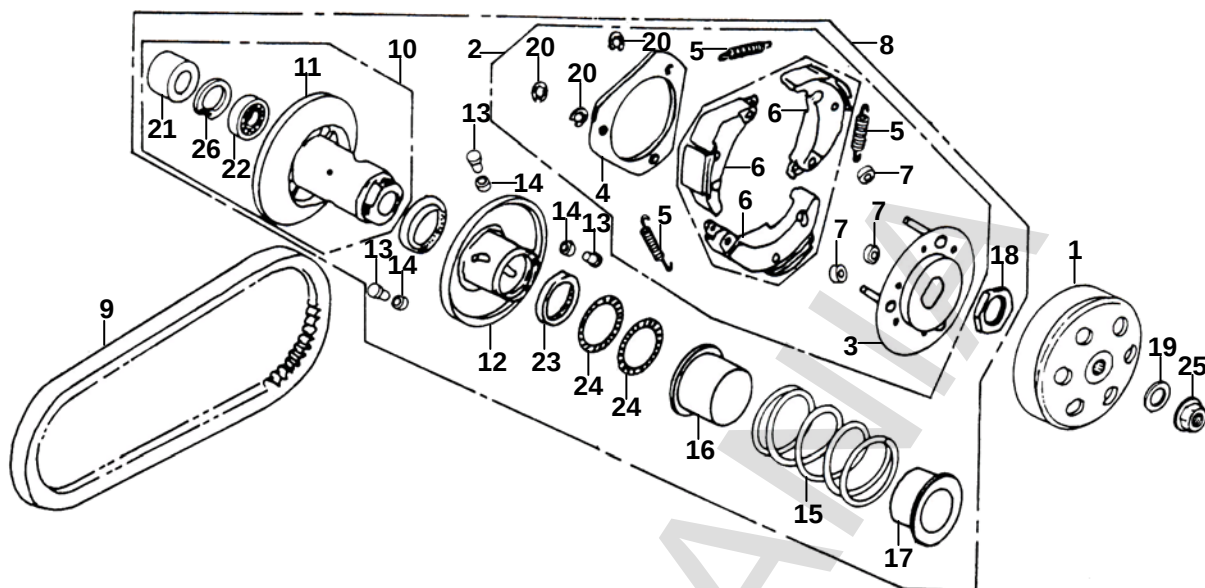


Ref. No	Part Number	Description	Reqd. No.
21	91001-GY6-901A-M1	Needle bearing 17X25X18	1
22	91002-H6B-3001	Radial ball bearing 6902U	1
23	91211-V02-0000	Driven face seal 34x41x4	2
24	91384-M92-0002	O-Ring 38.8x1.9	2
25	94050-12080	Flange nut 10MM	1
26	94520-28000	Cir clip 28MM	1

E-14 Transmission

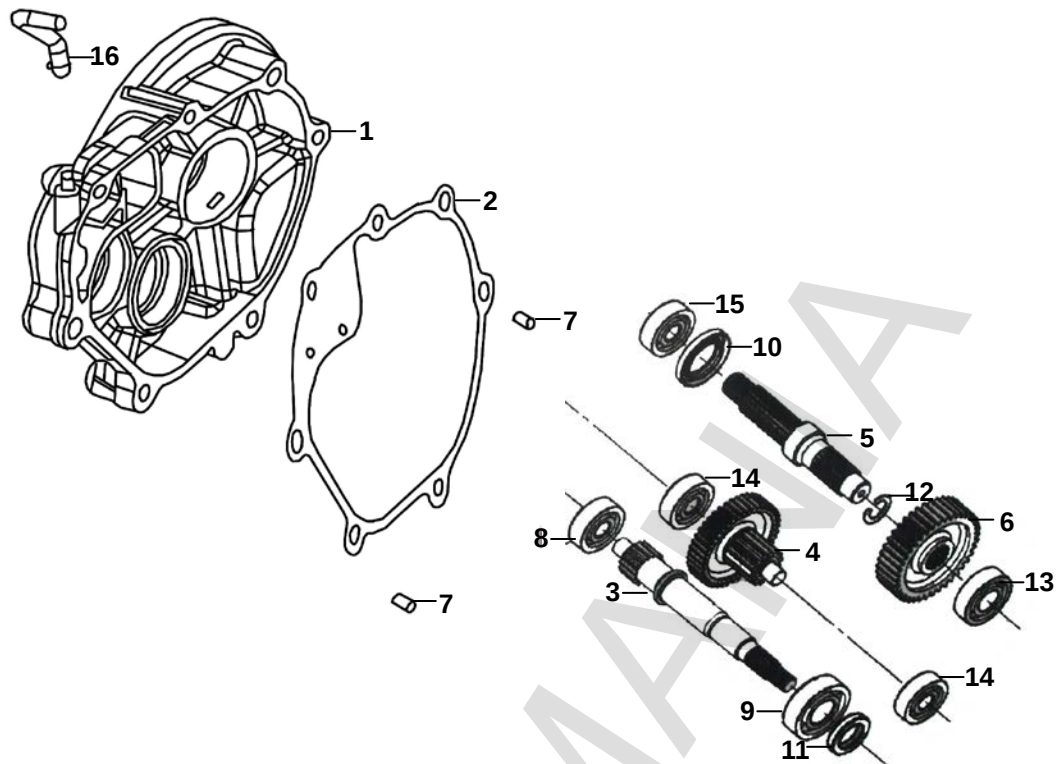


Ref. No	Part Number	Description	Reqd. No.
1	21200-AFA-0001	Mission case COMP	1
2	21395-ABA-0000	Mission cover gasket	1
3	23411-ABA-0001	Drive shaft	1
4	23420-HHA-0100	Counter shaft COMP.	1
5	23431-ABA-0000	Final shaft	1
6	23432-HHA-0100	Final gear 43T	1
7	90703-HC4-0000	Dowel pin 10*14	2
8	91003-M8Q-0000	Radial ball BRG. CSB301	1
9	91104-KN7-6700-M2	Radial ball BRG. CSB204	1
10	91201-HHA-3001	Oil seal 32*47*7	1
11	91202-KJ9-0030-M1	Oil seal 20*32*6	1
12	94510-22000	EX. cir-clip 22MM	1
13	96100-62030-00	Radial ball BRG. 6203	1
14	96100-63013-00	Radial ball BRG 6301	2
15	96100-62043-00	Ball radial bearing 6204	1
16	11221-ABA-0000	Mission breather tube	1

E-15 Crank Case

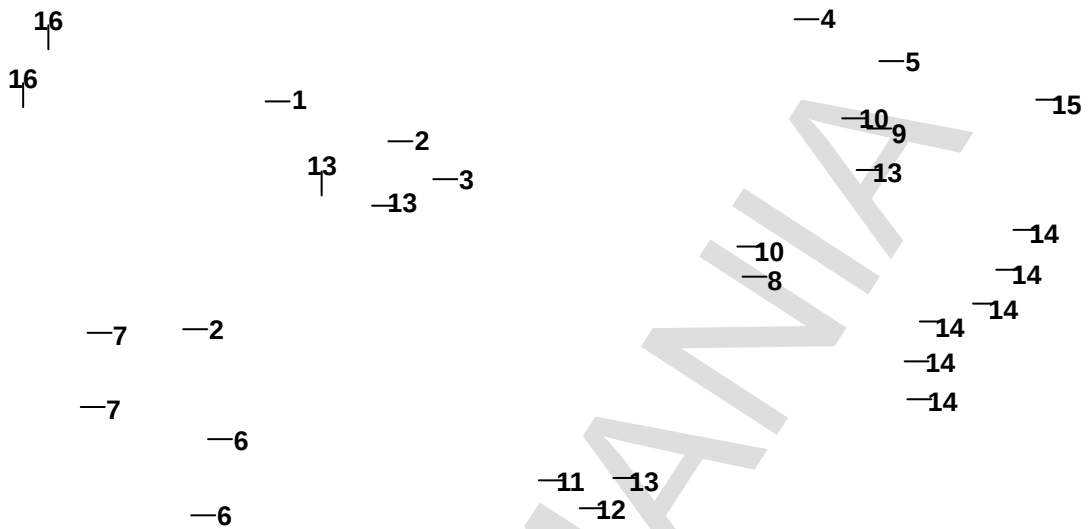


Ref. No	Part Number	Description	Reqd. No.
1	11100-A2C-0000	R. crank case COMP	1
2	11102-M8Q-3000	ENG. hanger rubber bush	2
3	11192-GY6-A000	Crank case gasket	1
4	11200-A2C-0100	L. crank case COMP	1
5	11203-M9Q-3000	RR. cushion under rubber bush	1
6	90031-GYB2-A000	Stud bolt 8X187.5	2
7	90032-GYB2-A000	Stud bolt 8X195.5	2
8	90103-H68-0002	Special bolt 8MM	1
9	90103-H68-0000	Special bolt 8MM	1
10	94109-12000	Washer 8MM	2
11	92800-1200A	Drain plug bolt 12MM	1
12	94109-12000	Drain plug washer 12MM	1
13	94301-08140	Dowel pin 8X14	4
14	95701-08055-00	SH. flange bolt 8X55	6
15	95701-08060-00	SH. flange bolt 8X60	1
16	96001-06050-00	Flange sh. bolt 6X50	2

E-16 Crank Shaft • Piston

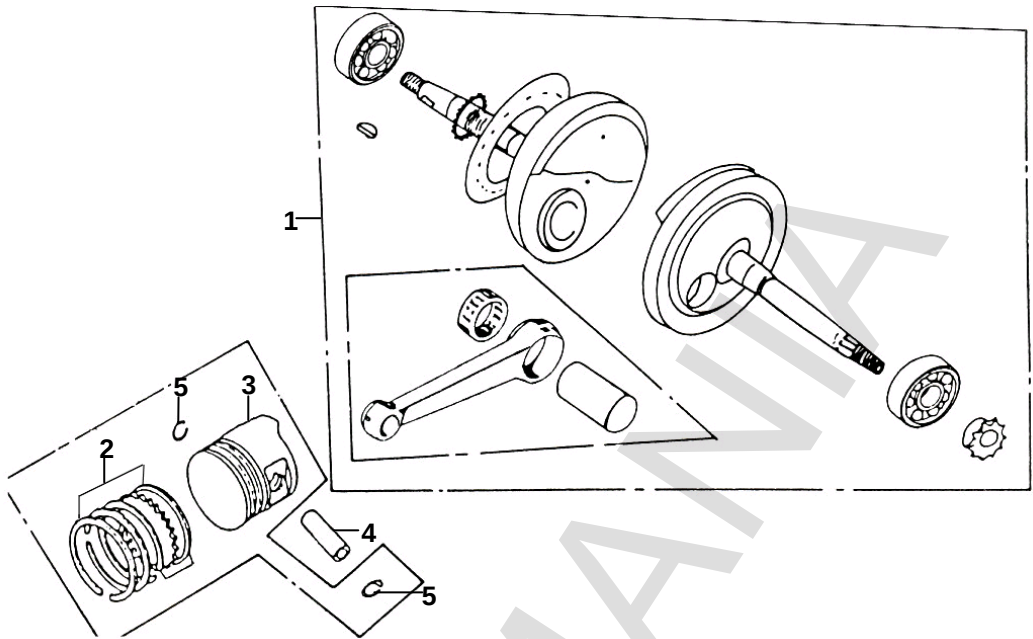


Ref. No	Part Number	Description	Reqd. No.
1	13000-ABA-0004	Crank shaft COMP	1
2	13010-GYB2-A000	Piston ring set	1
3	13101-GYB2-A000	Piston	1
4	13111-GYB2-A000	Piston pin	1
5	94601-15000	Piston pin clip 15	2

F-01Head Light

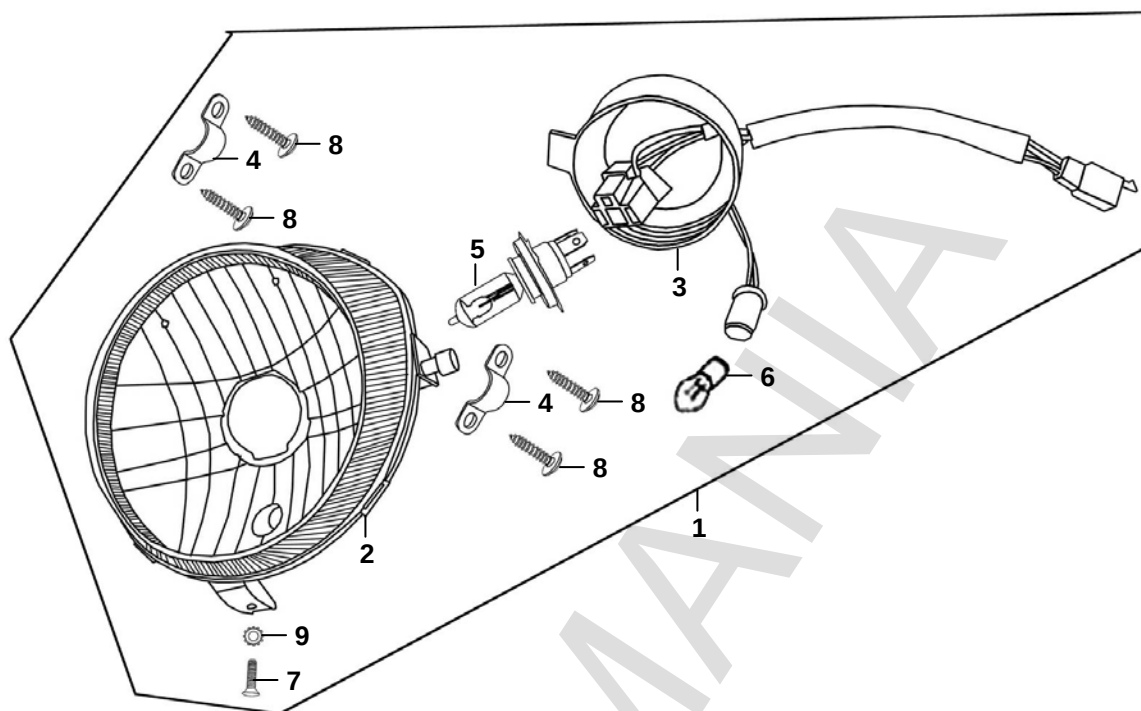


Ref. No	Part Number	Description	Reqd. No
1	33100-ALA-0001	Head light ASSY	1
2	33101-ALA-0000	Head light lens	1
3	33103-ALA-0000	Head light base	1
4	33107-A7A-0000	Head light plate	2
5	34901-X06-0000	Head light bulb	1
6	34908-M9Q-2000	Wedge base bulb	1
7	90101-KAA-0000	Adjust bolt	1
8	90109-42128	Tapping screw 4.2X12	4
9	90307-M9Q-0000	Lock washer 6MM	1

F-02 Speed Meter

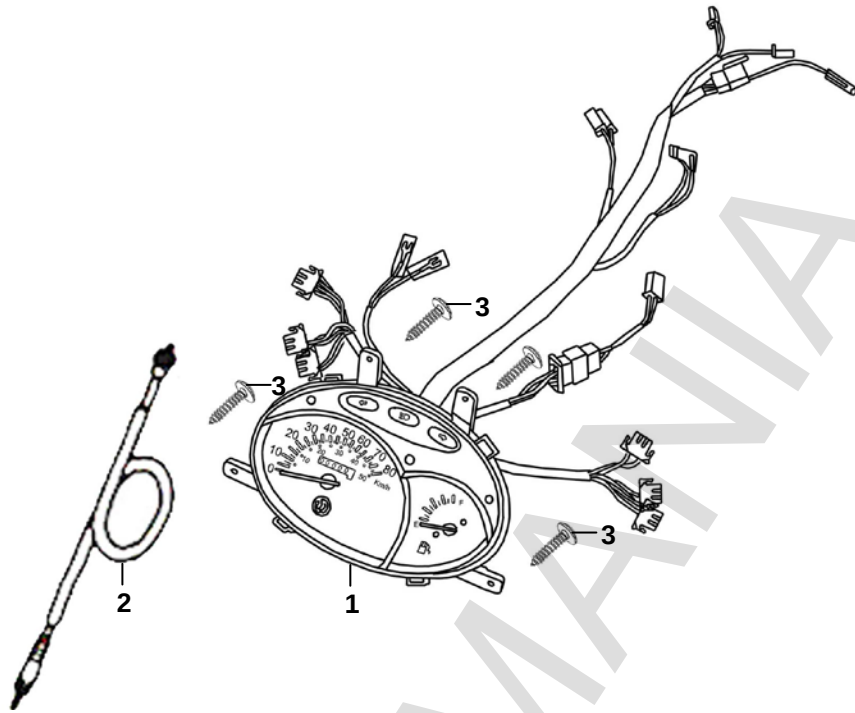


Ref. No	Part Number	Description	Reqd. No
1	37200-A2E-0100	Speedometer ASSY	1
2	44830-ABA-0001	Speedometer cable COMP	1
3	90109-48168	Tapping screw 4.8X16	4

F-03 Cable • Switch • Handle Lever

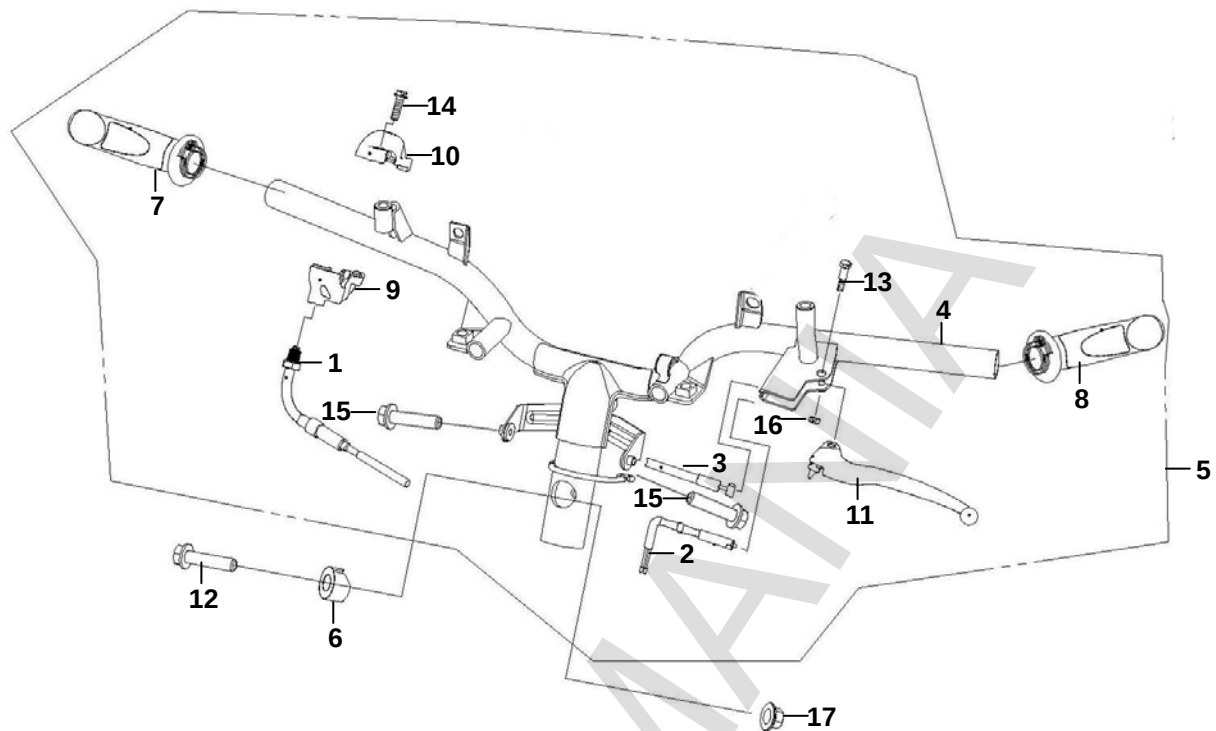


Ref. No	Part Number	Description	Reqd. No
1	17910-ABA-0003	Throt cable COMP	1
2	35340-M92-0001	FR. Stop SW. ASSY	1
3	43450-A2E-0000	RR. brake cable COMP	1
4	53100-ALA-0003	STRG. handle	1
5	5310A-A2E-0007	Handle set	1
6	53125-M9Q-0000	HNDL. set collar	1
7	53140-S1F-H001	RH. HNDL. grip	1
8	53166-S1F-H001	LH. HNDL. grip (黑色)	1
9	53167-H09-9001	THROT. UND. housing	1
10	53168-H09-0001	Up thort housing	1
11	5317A-GAK-V000	L. STRG. handle lever	1
12	90106-TAA-0001	Flange bolt 10X50	1
13	90115-M9Q-0000	Screw handle lever pivot	1
14	93500-05025-08	Screw bolt	1
15	90118-HAA-0000	Washer bolt 5X14	2
16	94001-05070-0S	Hex nut 5MM	1
17	90304-M9Q-0000	Flange nut 10MM	1

F-04 Front Brake Master Cylinder

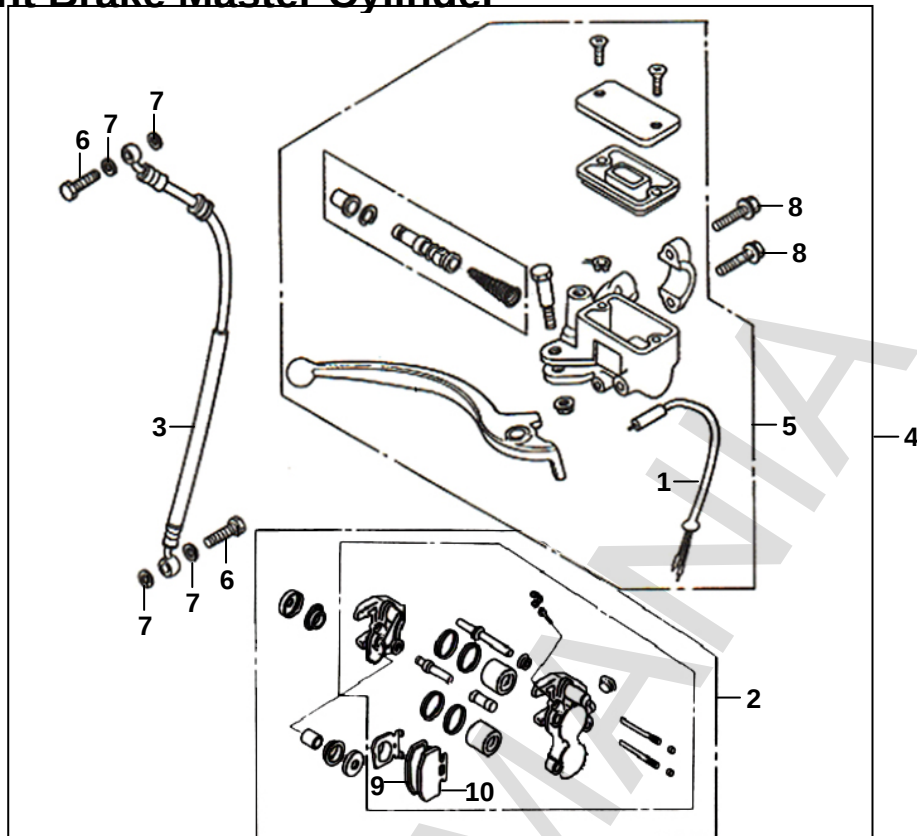


Ref. No	Part Number	Description	Reqd. No
1	35340-M92-0001	FR. stop SW. ASSY	1
2	45100-T6R-9001	Caliper ASSY	1
3	45126-ALA-0000	FR. brake hose ASSY	1
4	4550A-ALA-0000	FR. master cylinder ASSY	1
5	45500-AAA-0000	FR. M/C ASSY	1
6	90145-M9Q-0000	Oil bolt M10x22	2
7	90545-M9Q-0000	Oil bolt washer	4
8	95801-06022-07	Flange bolt 6*22	2
9	45105-G22-9000	Pad A COMP	1
10	45106-G22-9000	Pad B COMP	1

F-05 Handle Pipe • Handle Cover

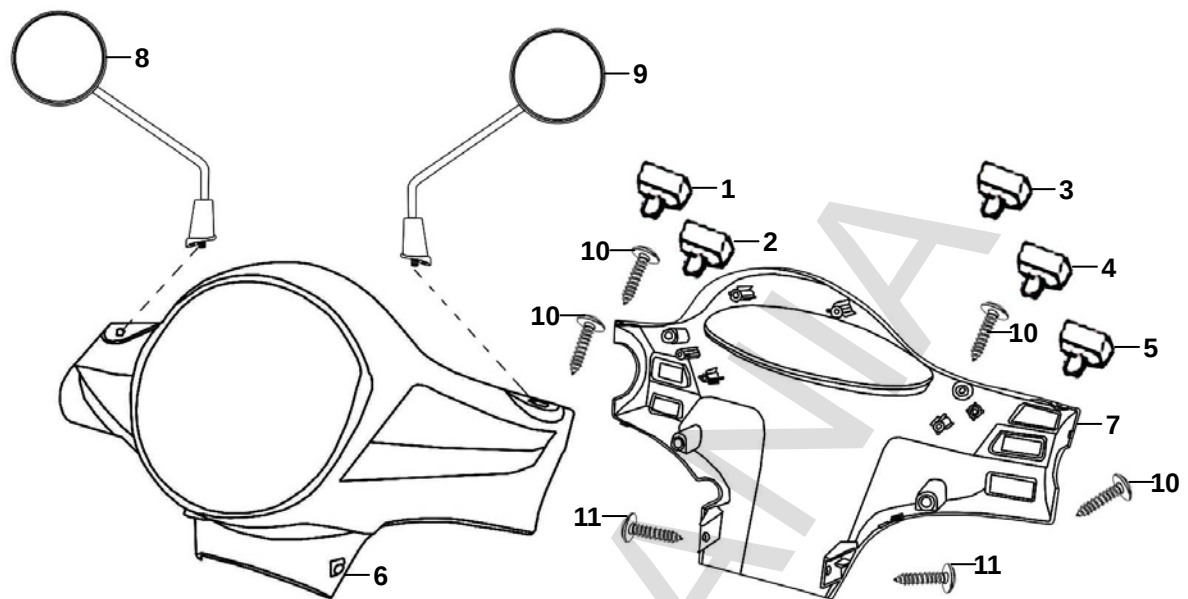


Ref. No	Part Number	Description	Reqd. No
1	36150-AAG-A000	ENG. STOP SW. UNIT	1
2	35160-M9Q-0002=	Start SW. UNIT	1
3	35170-A45-0003	Dimmer&seat open SW. UNIT	1
4	35180-M9Q-0002	Horn SW. UNIT	1
5	35200-M9Q-0001	Winker SW. UNIT	1
6	53205-ALA-0001	FR. handle cover	1
7	53206-ALA-0002	RR. handle cover (黑色)	1
8	88110-ALA-0001	R back mirror ASSY	1
9	88120-ALA-0001	L back mirror ASSY	1
10	90109-42128	Tapping screw 4.2X12	4
11	90118-HAA-0000	Washer bolt 5*14	2

F-06 Front Cover • Front Inner Box

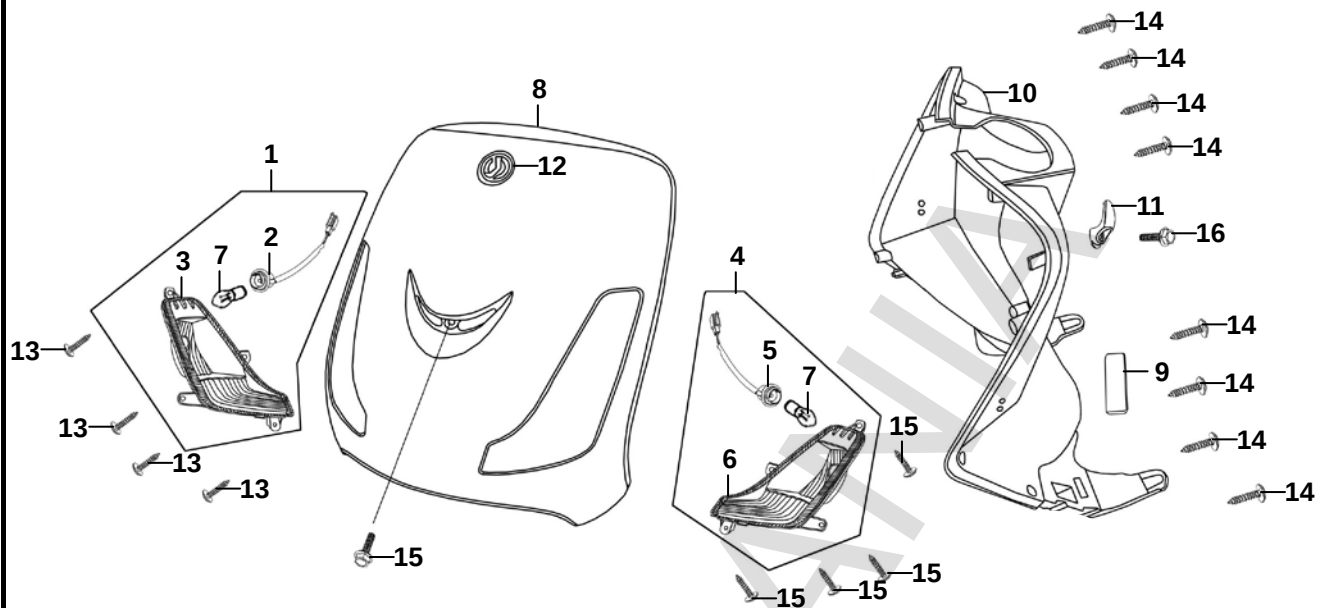


Ref. No	Part Number	Description	Reqd. No
1	33400-ALA-0000	FR. R. winker ASSY	1
2	33401-ALA-0000	FR. R. WINKER BASE	1
3	33402-ALA-0000	FR. R. winker lens	1
4	33450-ALA-0000	FR. L. winker ASSY	1
5	33451-ALA-0000	FR. L. winker base	1
6	33452-ALA-0000	FR. L. winker lens	1
7	34905-A8D-0000	Winker bulb (12V 10W)	2
8	64301-ALA-0000	FR. cover	1
9	64318-ALA-0000	Frame number lid	1
9	64318-ALA-0000-BR	Frame number lid	1
10	81131-ALA-0001	Inner cover	1
10	81131-ALA-0001	Inner cover	1
11	81132-M7Q-0001	Luggage hook	1
11	81132-M7Q-0001-BR	Luggage hook	1
12	87123-H85-0000	S logo (40POLY)	1
13	90109-48128	Tapping screw 4.8X12	8
14	90109-48168	Tapping screw 4.8X16	8
15	90118-HAA-0000	Washer bolt 5X14	1
16	90115-M9Q-0000	Bolt 6X16	1

F-07 Floor Panel • Center Cover

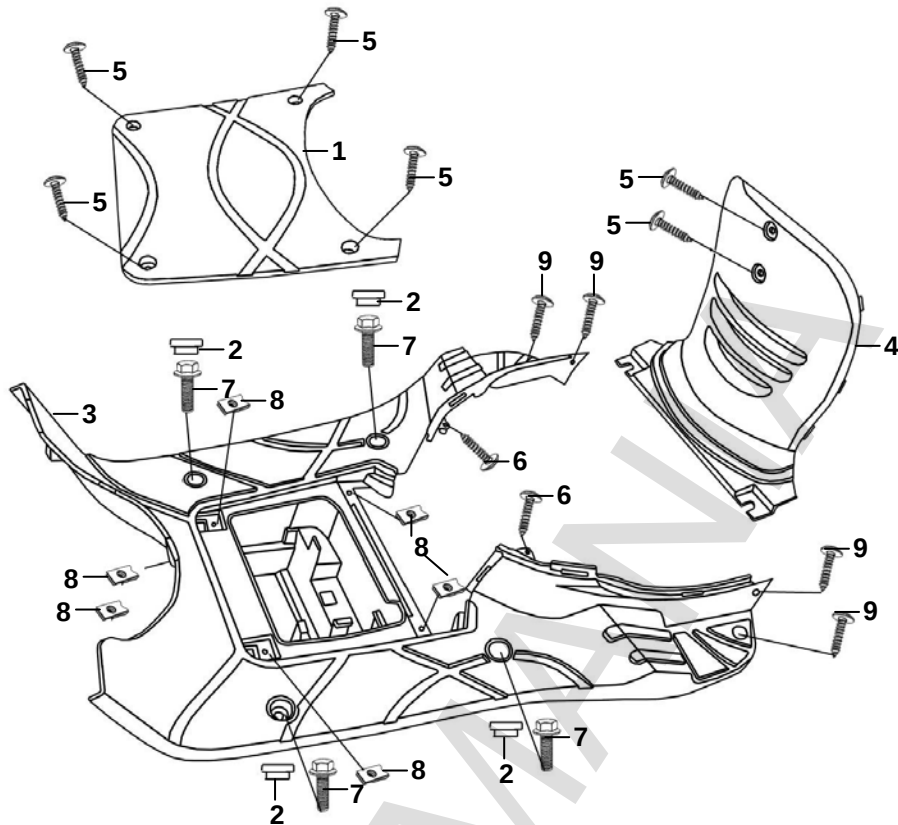


Ref. No	Part Number	Description	Reqd. No
1	50326-AAA-0000	Battery cover	1
1	50326-AAA-0000-BR	Battery cover	1
2	50612-ABA-3000	LH. stand bar	4
2	50612-APA-0000	Floor step cap A	4
3	64310-AKA-0002	Floor panel	1
3	64310-ALA-A000-BR	Floor panel	1
4	80151-X1A-0000	Center cover	1
4	80151-X1A-0000	Center cover	1
5	90109-42168	Tapping screw 4.2X16	6
6	90109-48168	Tapping screw 4.8X16	2
7	90111-AAA-0000	Flange bolt 6MM	4
8	90308-X04-0000	Spring nut	6
9	90109-42128	Tapping screw 4.2x12	4

F-08 Body Cover

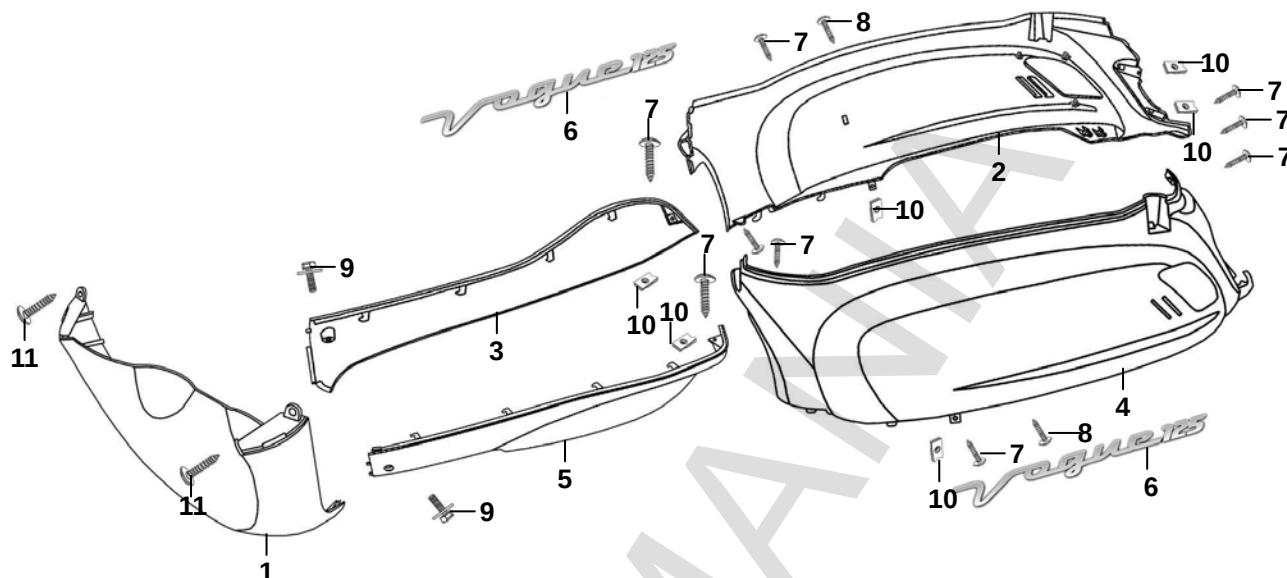


Ref. No	Part Number	Description	Reqd. No
1	64300-ALA-0000	FR. spoiler	1
2	83500-X1A-0002	RH. body cover	1
3	83520-ALA-A000	R. side cover	1
4	83600-X1A-0002	LH. body cover	1
5	83620-ALA-A000	L. side cover	1
6	87127-ALA-0100	R/L body stripe	2
7	90109-42128	Tapping screw 4.2X12	9
8	90109-48128	Tapping screw 4.8X12	2
9	90118-HAA-0000	Washer bolt 5X14	2
10	90302-M92-0000	Spring nut M4	6
11	90109-48168	Tapping screw 4.8x16	2

F-09 Steering Stem • Front Cushion

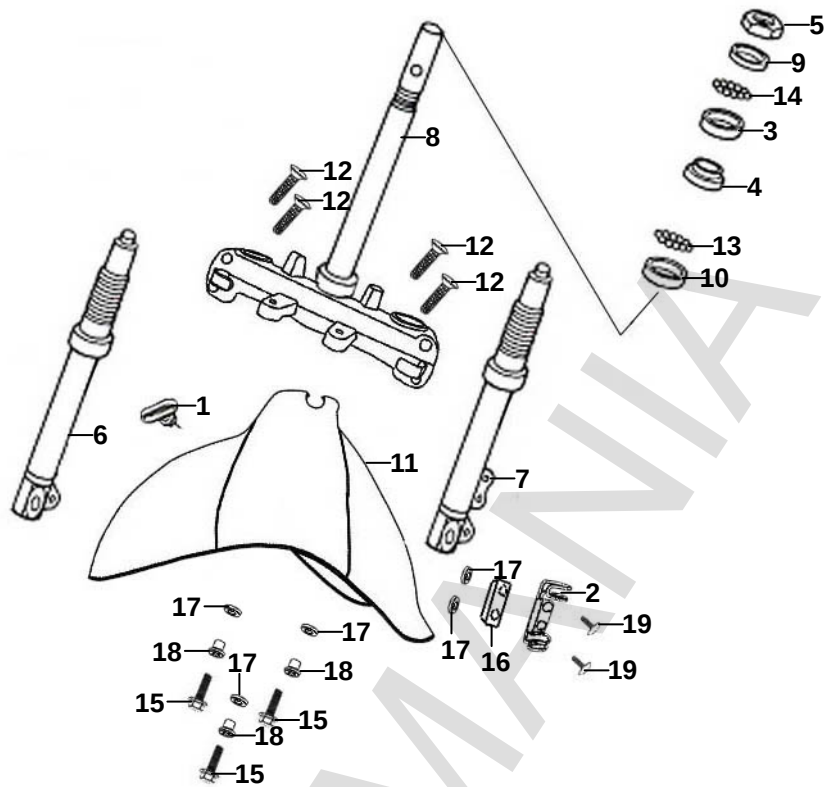


Ref. No	Part Number	Description	Reqd. No
1	45451-N02-0003	Cable guide	1
2	45156-ALA-0000	FR. brake hose clamp	1
3	50301-M9Q-0002	STRG.up ball race	1
4	50302-M9Q-0000	Race STRG.bot ball	1
5	50306-M9Q-0000	STRG. stem lock nut	1
6	51400-AYA-0001	R.FR. cushion	1
7	51500-AYA-0001	L.FR. cushion	1
8	53200-ALA-0001	Steeting stem	1
9	53211-M9Q-0000	STRG. top cone	1
10	53212-M9Q-0000	Cone STRG. bottom	1
11	61100-ALA-0000	FR. fender	1
12	95801-08040-00	Flange bolt 8X40	4
13	96211-05000	Steel ball 5#	1
14	96211-08000	Steel ball 8#	1
15	95801-06020-08	Flange bolt 6*20	3
16	45159-ALA-0000	FR. brake hose stay	1
17	77226-M3F-0000	Damping rubber	5
18	90104-X04-0002	FR. fork cover collar	3
19	90110-H6T-0001	Special screw 6*14	3

F-10 Front Wheel

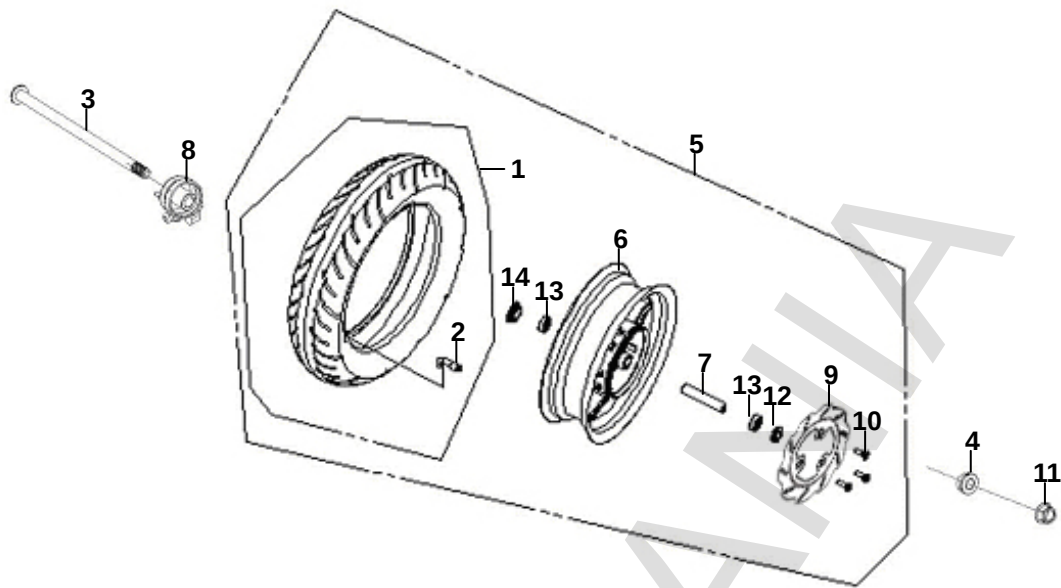


Ref. No	Part Number	Description	Reqd. No
1	42710-ALA-0000	Tire ASS'Y	1
2	42753-ABA-0000	Rim valve	1
3	44301-H3F-0001	FR. wheel axle	1
4	44311-GW0-9100	Collar fr wheel side	1
5	44600-ALA-0104	FR. wheel ASS'Y	1
6	44601-AAA-0003	FR. cast wheel	1
7	44620-AAA-0000	FR. axle dist collar	1
8	44800-ALA-0001	SPDMT gear box ASS'Y	1
9	45121-AAA-0000	FR. brake disk	1
10	90106-N02-0002	FR. disk bolt 8*26	3
11	90306-M9Q-0001	Self-lock nut 12MM	1
12	90754-M9Q-0000-M1	Dust seal 20*32*5	1
13	90912-M9Q-0000-M1	Bearing 6201(U) (NTN)	2
14	91258-M9Q-0000	SPDMT. gear box seal	1

F-11 Rear Wheel

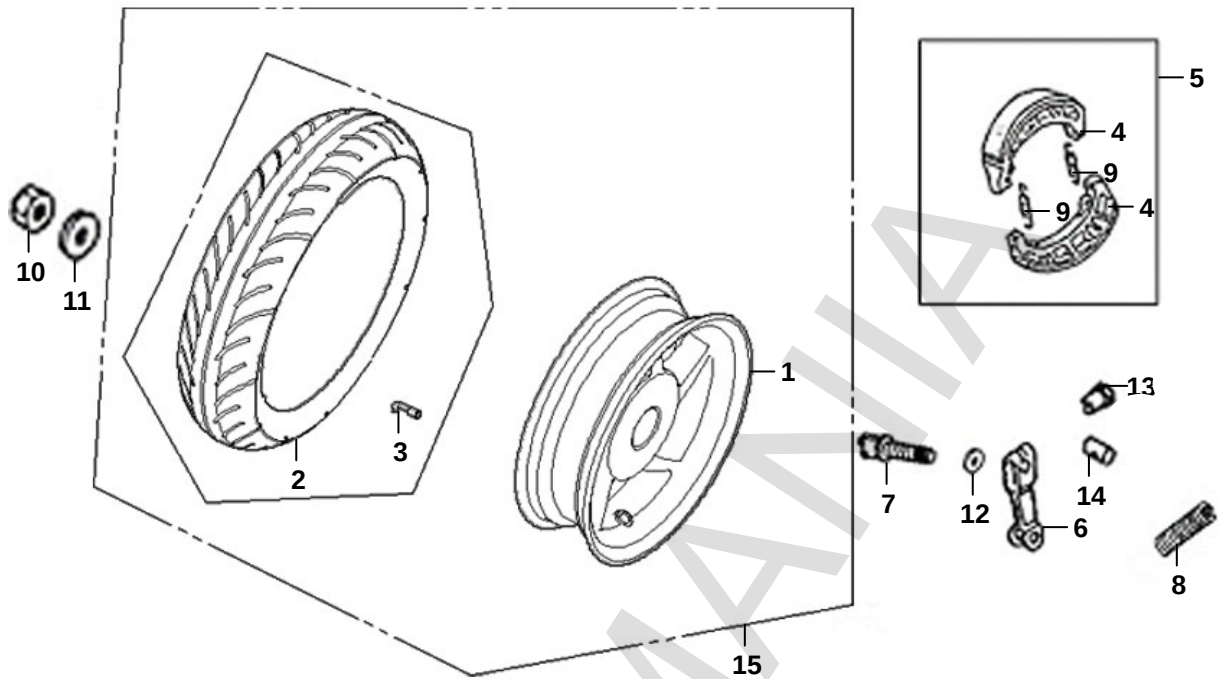


Ref. No	Part Number	Description	Reqd. No
1	42601-ABA-0002	RR. wheel hub COMP	1
2	42710-X1A-0000	RR. tire ASSY	1
3	42753-ABA-0000	Rim valve	1
4	43120-E18-0002	Brake shoe COMP	1
5	4312A-H1A-0000	RR. brake shoe ASSY	1
6	43410-ALG-0000	RR. brake arm	1
7	43141-KAA-0001	RR. brake cam	1
8	43472-ABA-0000	RR. BRK. Arm return SRG.	1
9	45133-B08-0005	Brake shoe spring	2
10	90305-M9Q-9001	Self-lock nut 16MM	1
11	90501-M9Q-0000	16MM washer	1
12	91352-M9Q-0000-M1	O ring 11.3X1.3	1
13	95015-32001	Brake arm joint B	1
14	95015-42000	Adjust nut B	1
15	42600-ALA-0100	RR wheel ASSY	1

F-12 Seat • Rear Grip

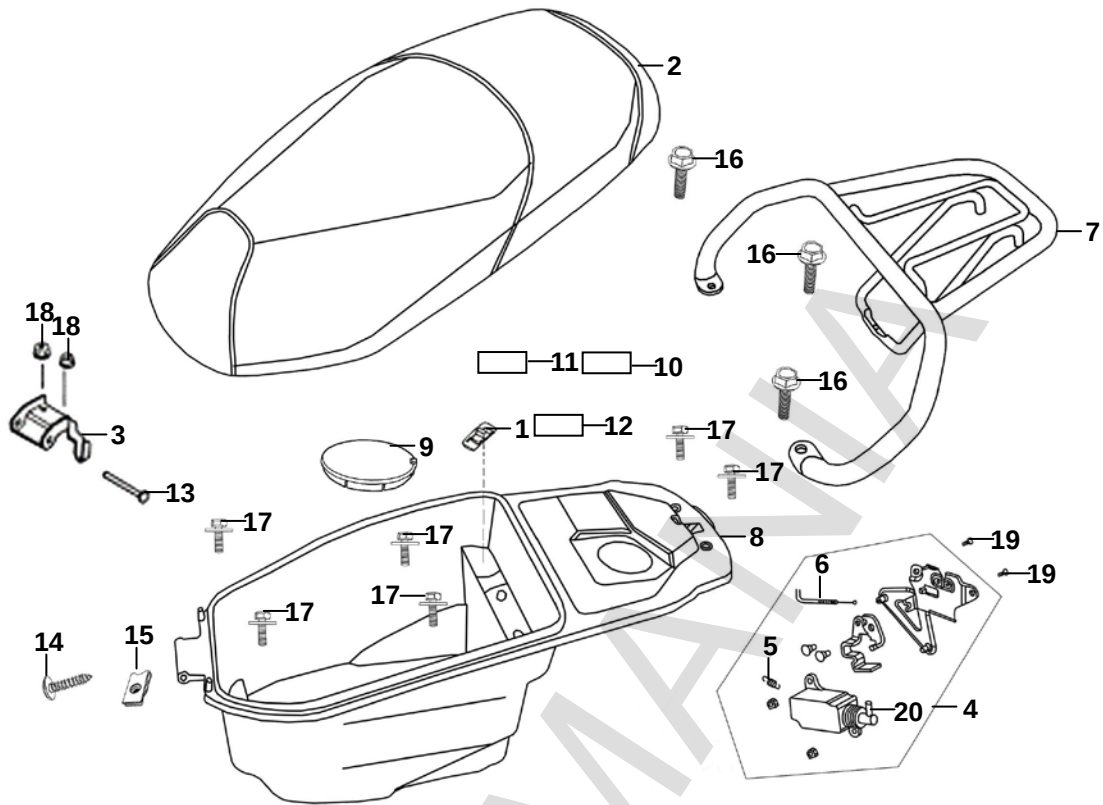


Ref. No	Part Number	Description	Reqd. No
1	36600-A1A-0101	ENG start control SW.	1
2	77200-A2E-1000	Double seat COMP	1
3	77201-AAA-0000	Seat hinge	1
4	77230-ALA-0001	Seat catch COMP	1
5	77234-M8Q-0000	Seat lock sping	1
6	77240-ABA-0000	Seat lock cable	1
7	81200-ALA-0002	RR carrier	1
8	81250-X1A-0000	Luggage box	1
9	81251-ALA-0000	CARB. maint cover	1
10	87500-ABA-0000	Anit-tampering control plate	1
11	87505-ALA-0000	Tire lable	1
12	87560-E21-0000	Drive caution mark	1
13	90105-T36-0000	Hinge pin	1
14	90109-42168	Tapping screw 4.2X16	1
15	90308-X04-0000	Spring nut 5MM	1
16	93401-08020-00	Washer bolt 8X20	3
17	93404-06016-00	Washer bolt 6X16	6
18	94050-06080	Nut flange 6MM	2
19	95801-06012-08	Flange bolt 6X12	2
20	35870-HLA-0001	Dc solenoid ASS'Y	1

F-13 Fuel Tank

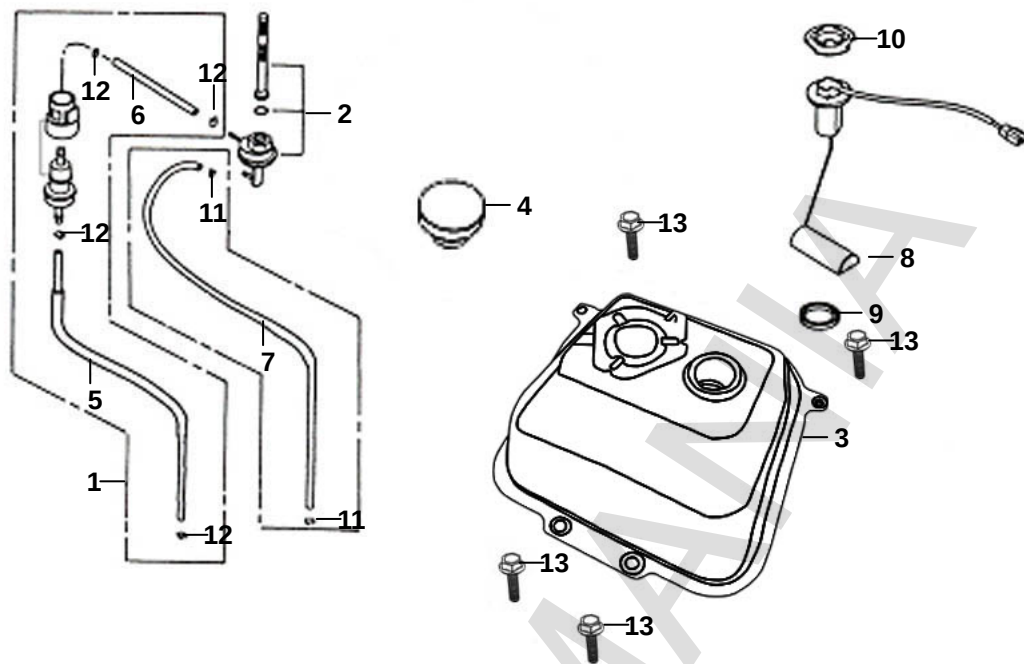


Ref. No	Part Number	Description	Reqd. No
1	16910-M9Q-0001	Fuel strainer ASSY	1
2	16950-M9Q-0001	Fuel cock ASSY	1
3	17500-AAA-0005	Fuel tank COMP	1
4	17620-CT1C-A000	Fuel filler cap COMP	1
5	17682-ABA-0002	Fuel tube (400MM)	1
6	17683-AAA-0001	Fuel tube (170MM)	1
7	95001-35215-40	Vacuum tube	1
8	37800-ABA-0001	Fuel unit	1
9	37801-M9Q-0001	Base packing	1
10	37802-M9Q-0000	Ret fuel unit	1
11	95002-02070	Tube clip B7	2
12	95002-02080	Tube clip B8	4
13	95801-06012-08	Flange bolt 6X12	4

F-14 Battery • Tool Box

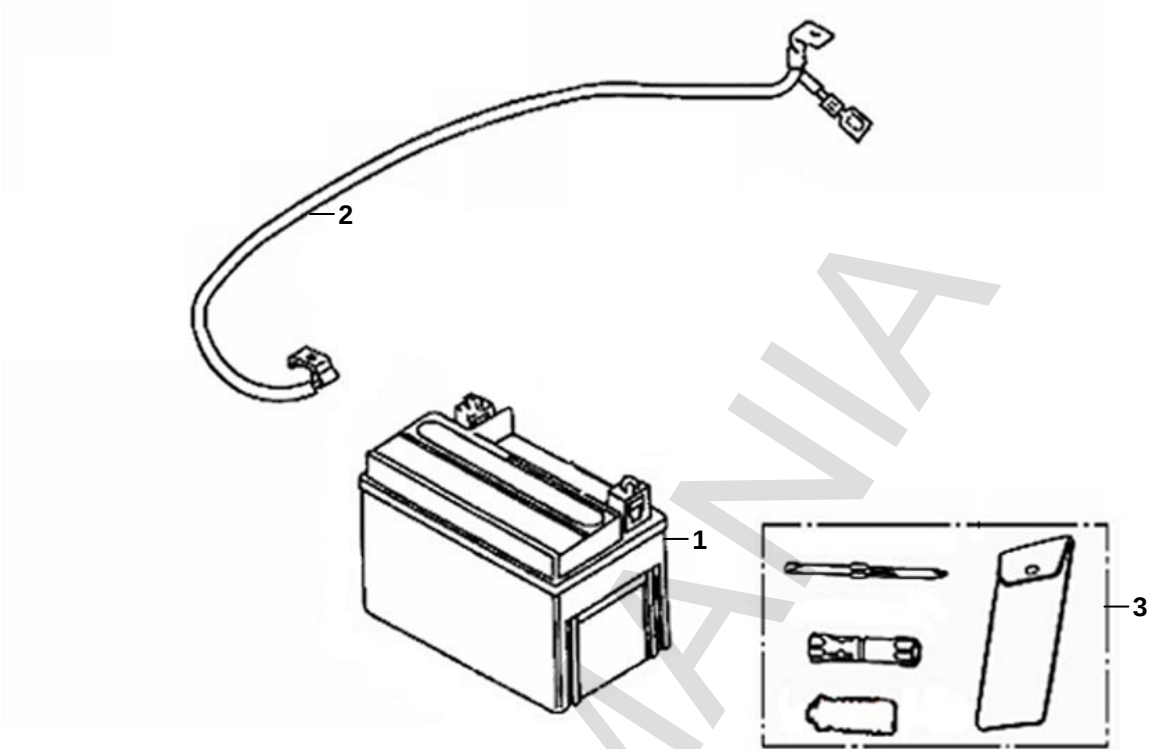


Ref. No	Part Number	Description	Reqd. No
1	31500-EG13- P000	Battery ASSY	1
2	32411-ABA-0100	Battery cable	1
3	89010-V1F-A001	Tool set	1

F-15 Air Cleaner

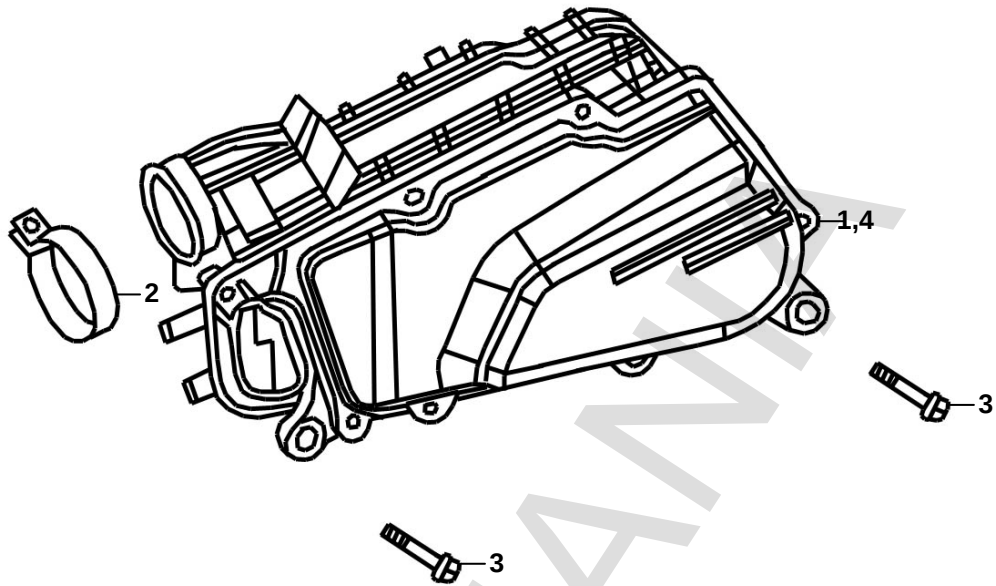


Ref. No	Part Number	Description	Reqd. No
1	17200-ALA-0001	AIR/C ASSY	1
2	90652-G03-0000	Band 48 AIR/C conn tube	1
3	95701-06025-07	Flange bolt 6X25	2
4	17211-M9Q-0001	AIR/C ELEMENT COMP	1

F-16 Exhaust Muffler

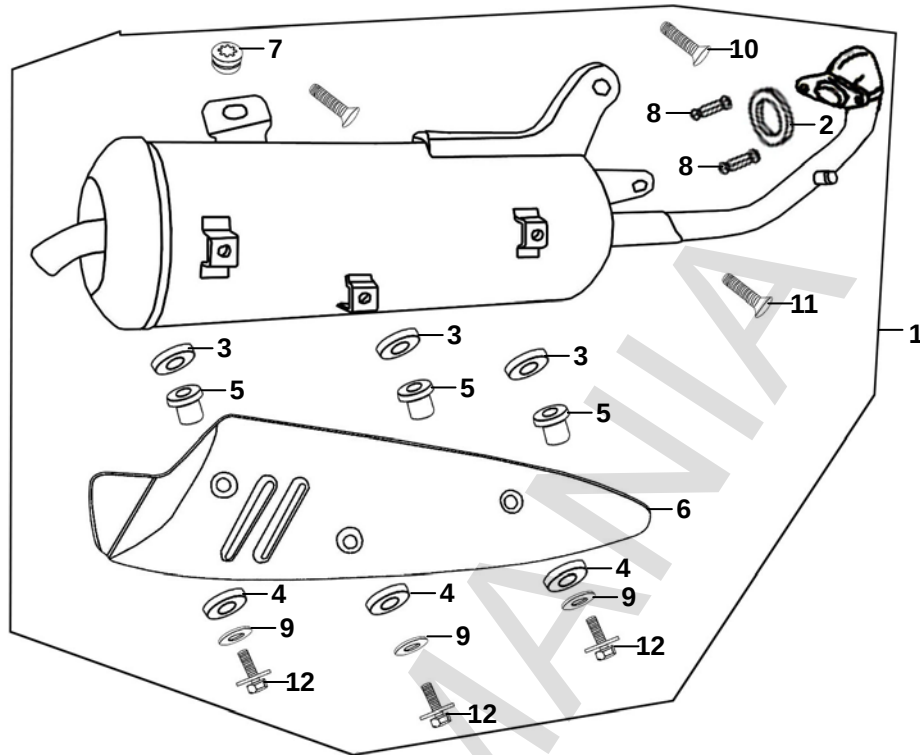


Ref. No	Part Number	Description	Reqd. No
1	18000-A2E-0100	Exhaust muffler ASSY	1
2	18291-H80-A000	EXH. pipe gasket	1
3	18292-A6A-0000	Protector packing A	3
4	18293-F3E-0000	Protector packing B	3
5	18295-F3E-0001	Collar M6	3
6	18318-ALA-0000	Muffler protector COMP	1
7	18321-ADB-0000	RR. mudguard stay rubber	1
8	90301-V1F-A000	HEX. cap nut 6MM	2
9	90555-T3A-A000	Washer	3
10	95801-08045-07	Flange bolt M8X45	1
11	95801-08055-07	Flange bolt 8X55	1
12	96001-06022-49	SH. flange bolt 6X22	3

F-17 Main Stand • Kick Starter Arm

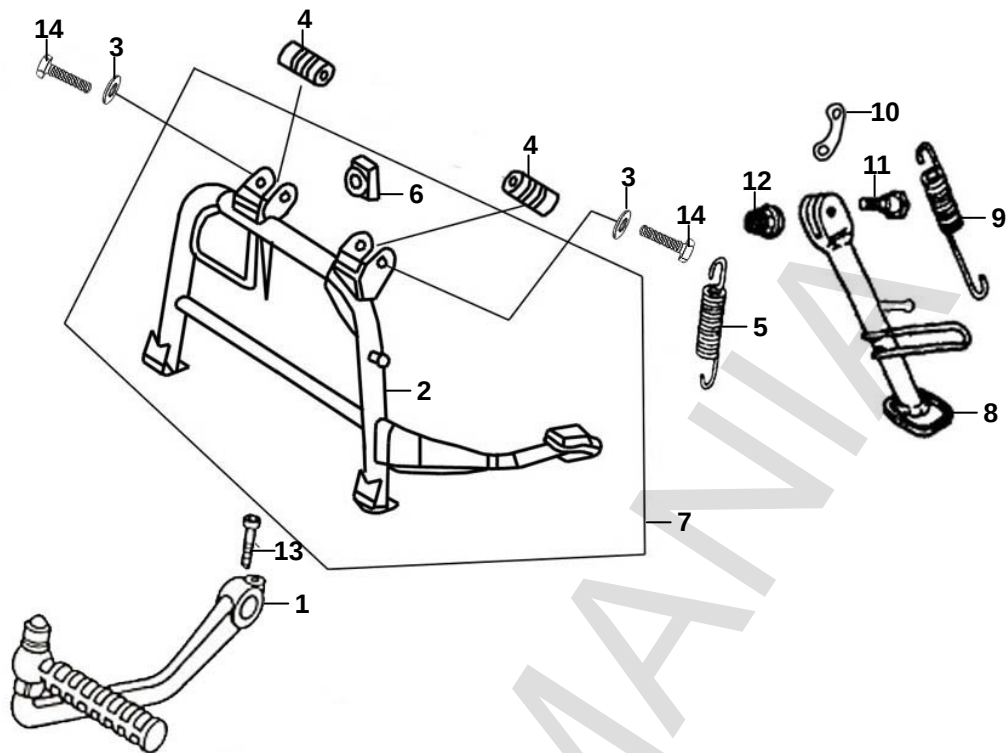


Ref. No	Part Number	Description	Reqd. No
1	28300-GY6-900A	Kick starter arm ASSY	1
2	50500-ABC-0002	Main stand COMP	1
3	50503-A5C-0000	Main stand washer	2
4	50504-KAA-0000	Main stand collar	2
5	50505-E60-0001	Main stand SPG.ASSY	1
6	50506-A31-0000	Stand stop rubber A	1
7	5050A-ABA-0005	Main stand ASSY	1
8	50530-ALA-0000	Side stand COMP	1
9	50535-APA-0000	Side stand SPG. ASSY	1
10	50542-AAA-0000	Spring plate hook	1
11	90108-G03-0001	Side stand pivot screw	1
12	94030-08000	HEX. nut 8MM	1
13	95701-06022-07	Flange bolt 6X22	1
14	95801-08045-00	Flange bolt 8X45	2

F-18 Tail Light • RR. Cushion

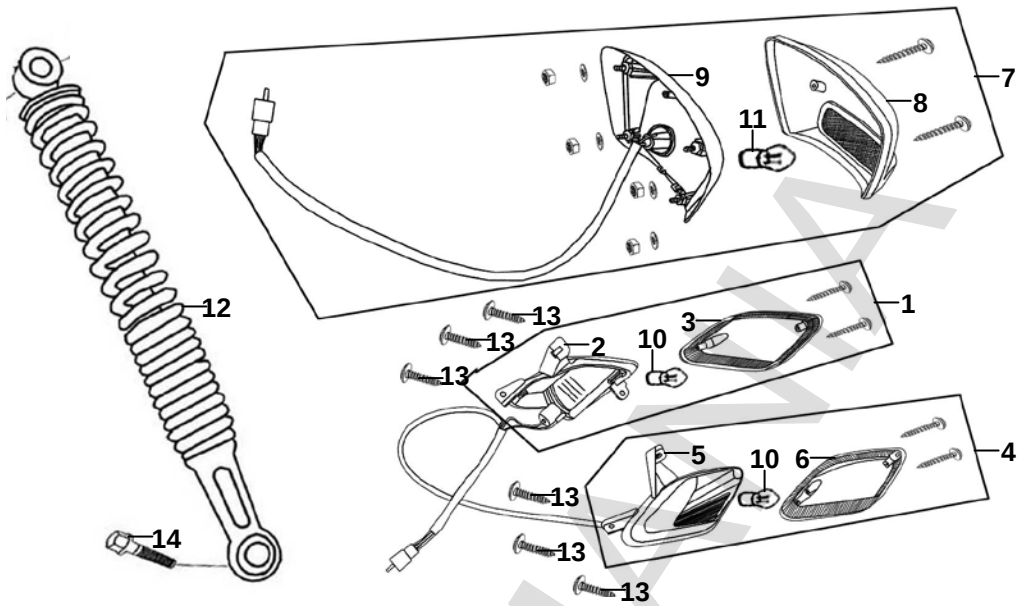


Ref. No	Part Number	Description	Reqd. No
1	33600-ALA-0002	RR. R. winker ASSY	1
2	33601-ALA-0000	RR. R. winker base	1
3	33602-ALA-0000	RR. R. winker lens	1
4	33650-ALA-0002	RR. L. winker ASSY	1
5	33651-ALA-0000	RR. L. winker base	1
6	33652-ALA-0000	RR. L. winker lens	1
7	33700-ALA-0001	Tail light COMP	1
8	33701-ALA-0000	Tail light lens	1
9	33702-ALA-0000	Tail light base	1
10	34905-A8D-0000	Winker bulb (12V,10W)	2
11	34906-M9Q-0001	Tail light bulb	1
12	52400-ABA-0101	RR. cushion ASSY	1
13	90109-48128	Tapping screw 4.8X12	6
14	95801-08035-00	Hex bolt 8X35	1

F-19 Rear Fender • Rear Inner Fender

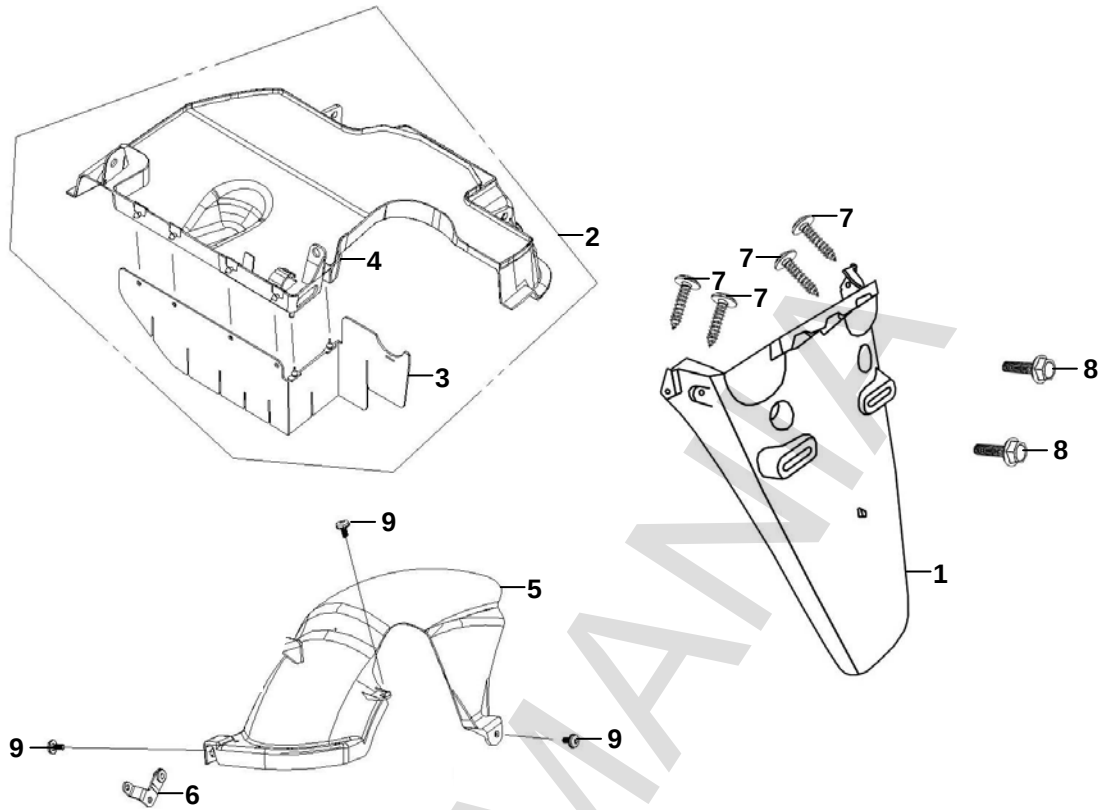


Ref. No	Part Number	Description	Reqd. No
1	80100-ALA-0001	RR. fender	1
2	8010B-ALA-0000	Inner fender ASSY	1
3	80104-ABA-0000	Splash board plate	1
4	80106-ALA-0000	RR. inn fender	1
5	80107-ANA-0002	RR. mudguard	1
6	80109-ABA-0100	RR. mudguard stay	1
7	90109-48128	Tapping screw 4.8X12	4
8	95801-06012-07	Flange bolt 6X12	2
9	95801-06012-07	Flange bolt 6X12	3

F-20 Wire Harness

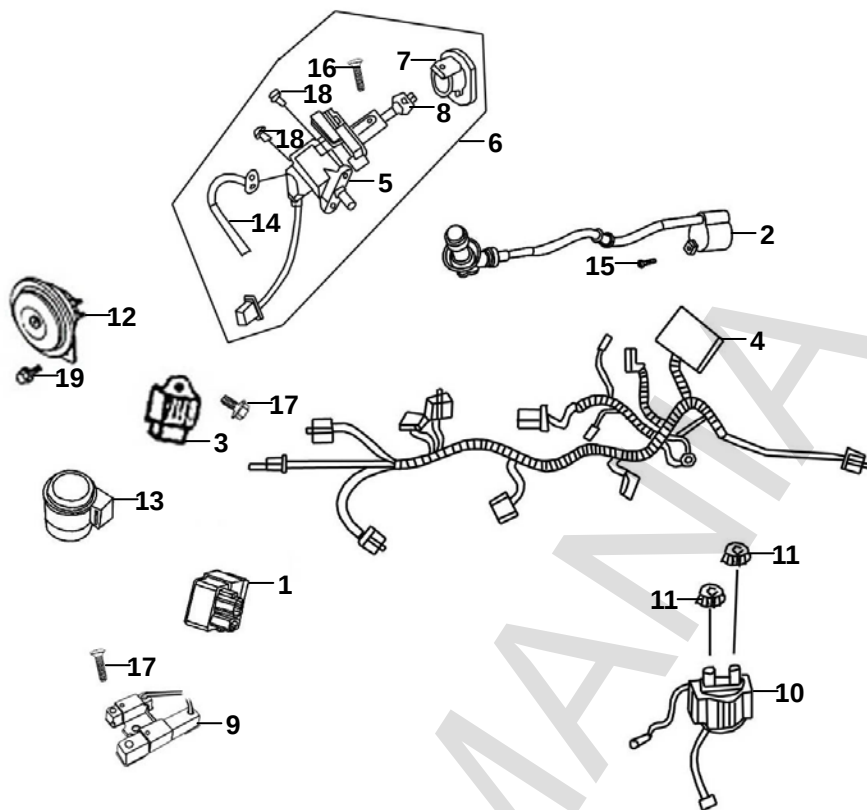


Ref. No	Part Number	Description	Reqd. No
1	30410-M92-0004	CDI. UNIT COMP	1
2	3051A-T3D-0000	IGN. COIL. ASSY	1
3	31600-ZDA-0001	REG. REC. COMP	1
4	32100-ALA-0101=	Wire harness	1
5	35010-ALA-0100	Key set	1
6	35100-ALA-0100	Comb sw and lock ASSY	1
7	35114-ALA-0000	Ring	1
8	35111-AA3-A000	Key	1
9	35400-M92-0004	Resistor COMP	1
10	35850-35A-A000	MAG. SW. COMP	1
11	35859-M9Q-0001	Start MAG. SW. NUT	2
12	38110-ABA-0001	Horn COMP	1
13	38300-T40-0101	Ap winker relay ASSY	1
14	77240-ABA-0000	Seat lock lable	1
15	90112-M9Q-0000	Flange bolt 5X22	1
16	93891-05080	Screw washer 5X8	1
17	95801-06012-08	Flange bolt 6X12	2
18	95801-06018-00	Flange bolt 6X18	2
19	95801-08012-08	Flange bolt 8X12	1

F-21 Frame Body • Engine Hanger

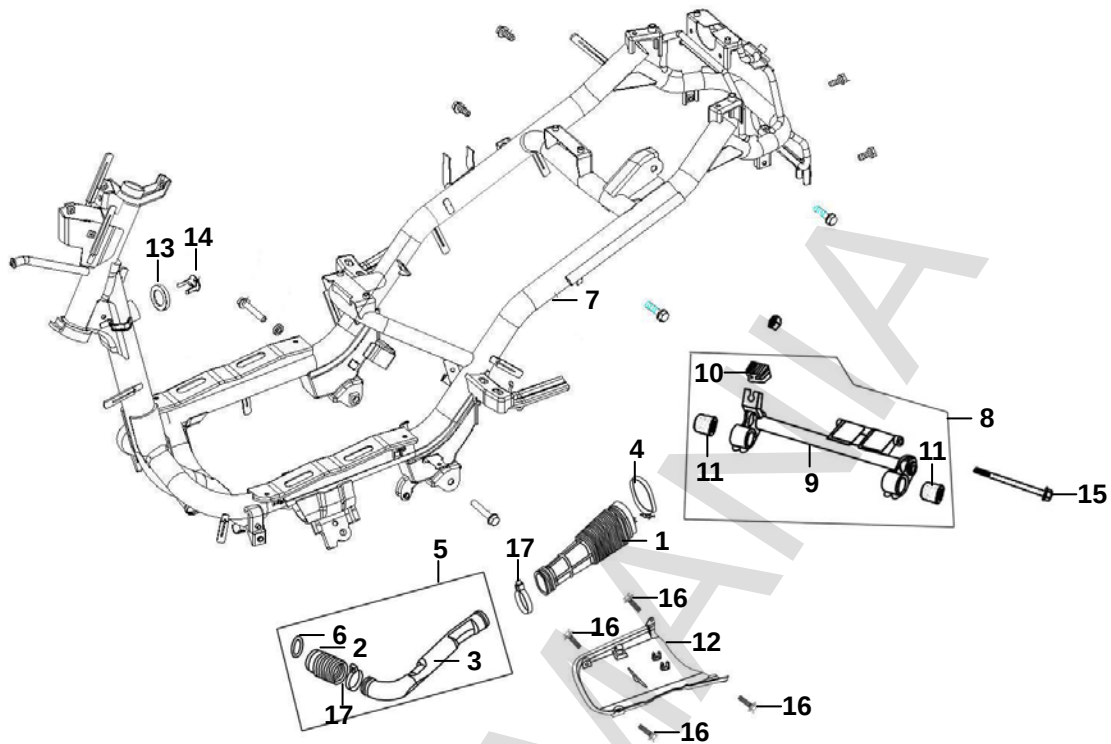

Ref. No	Part Number	Description	Reqd. No
1	11345-ABA-0005	L. cover duct	1
2	11347-VS1-0000	L. cover duct B	1
3	11348-VS1-0000	L. cover duct joint	1
4	11346-M9Q-0000	L. cover duct band	1
5	1134B-VS1-0002	L. cover duct ASSY	1
6	17242-H6T-0000	AIR/C duct band	1
7	50100-A2E-0005	Frame body COMP	1
8	50350-A2E-0100	ENG hanger link ASSY	1
9	50351-A2E-0100	ENG hanger link	1
10	50352-A1A-0000	Link stopper rubber	1
11	50353-M9Q-0000	Swing lock bush	2
12	50613-ALA-0000	Under cover	1
13	64306-H12-0203	Inner box sponge	1
14	64307-M9Q-8000	Pipe end cap	1
15	90105-M9Q-8002	Flange bolt 10X75	1
16	93404-06016-00	Washer bolt 6X16	4
17	95014-62200	Wire band B2	2

F-22 Handle visor

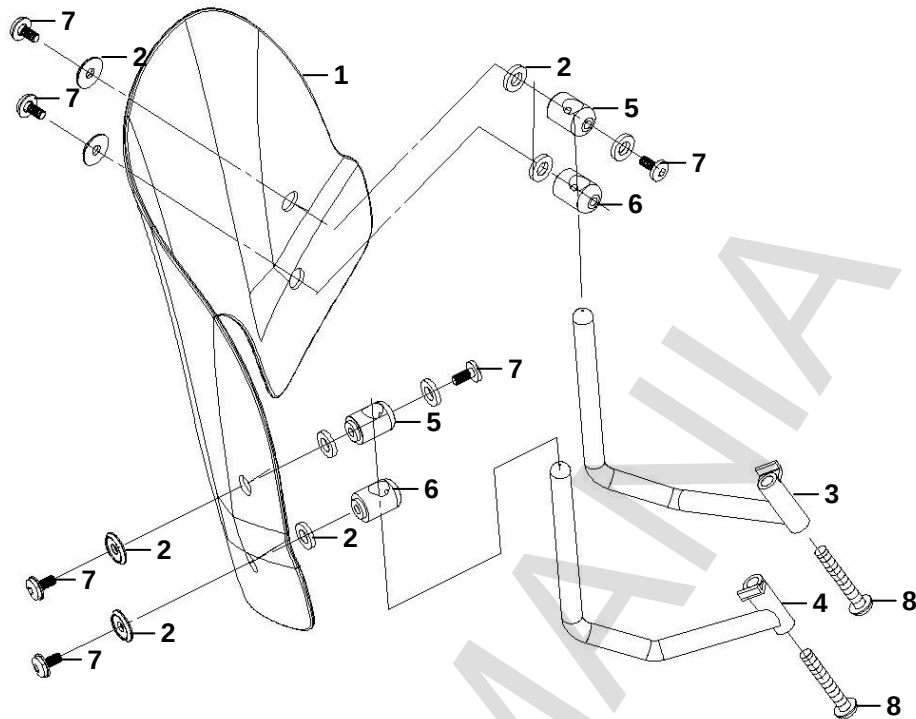

Ref. No	Part Number	Description	Reqd. No
1	53270-ALA-0000	Handle visor	1
2	53272-ALA-0000	Handle visor grommet	6
3	53273-ALA-1000	R. Handle visor bar	1
4	53274-ALA-1000	L. handle visor bar	1
5	53275-ALA-1000	Handle visor holder A	2
6	53276-ALA-0000	Handle visor holder B	2
7	90110-H6T-0001	Special screw 6*14	6
8	95801-08055-07	Flange bolt 8*55	2

MOTOMANIA