



E-01 SHROUD ASSY

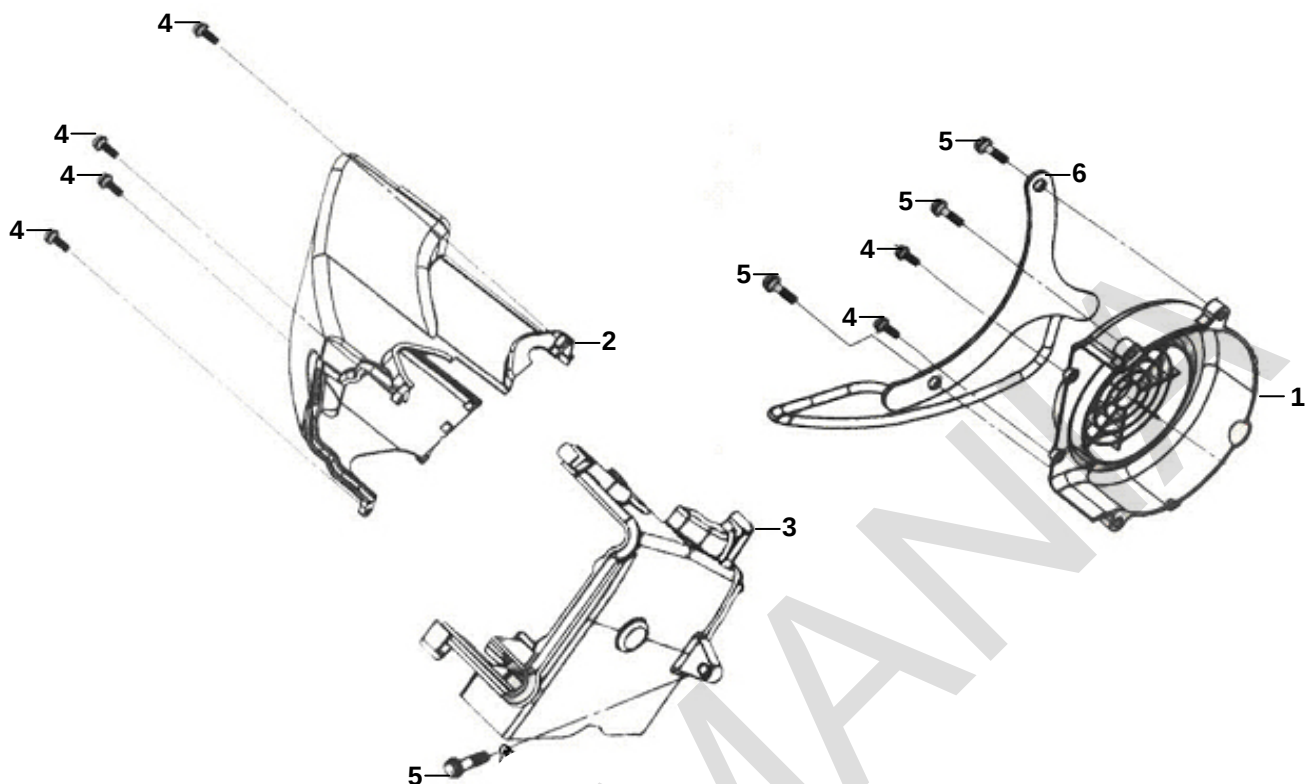


Ref. No	Part Number	Description		Reqd. No.
1	19610-F6A-0004	Fan cover COMP.	风扇罩组	1
2	1962A-AFA-0000	Shroud A ASSY.	罩盖 A 组	1
3	1963A-F6A-0001	Shroud B ASSY.	罩盖 B 组	1
4	93904-35380	Tapping screw 5*16	自攻螺丝 5*16	6
5	96001-06028-08	SH. flange bolt 6*28	缘面螺栓 6X28	4
6	18241-AEF-0001	EXH. pipe protector	排气管保护盖支架	1

E-02 CYLINDER HEAD

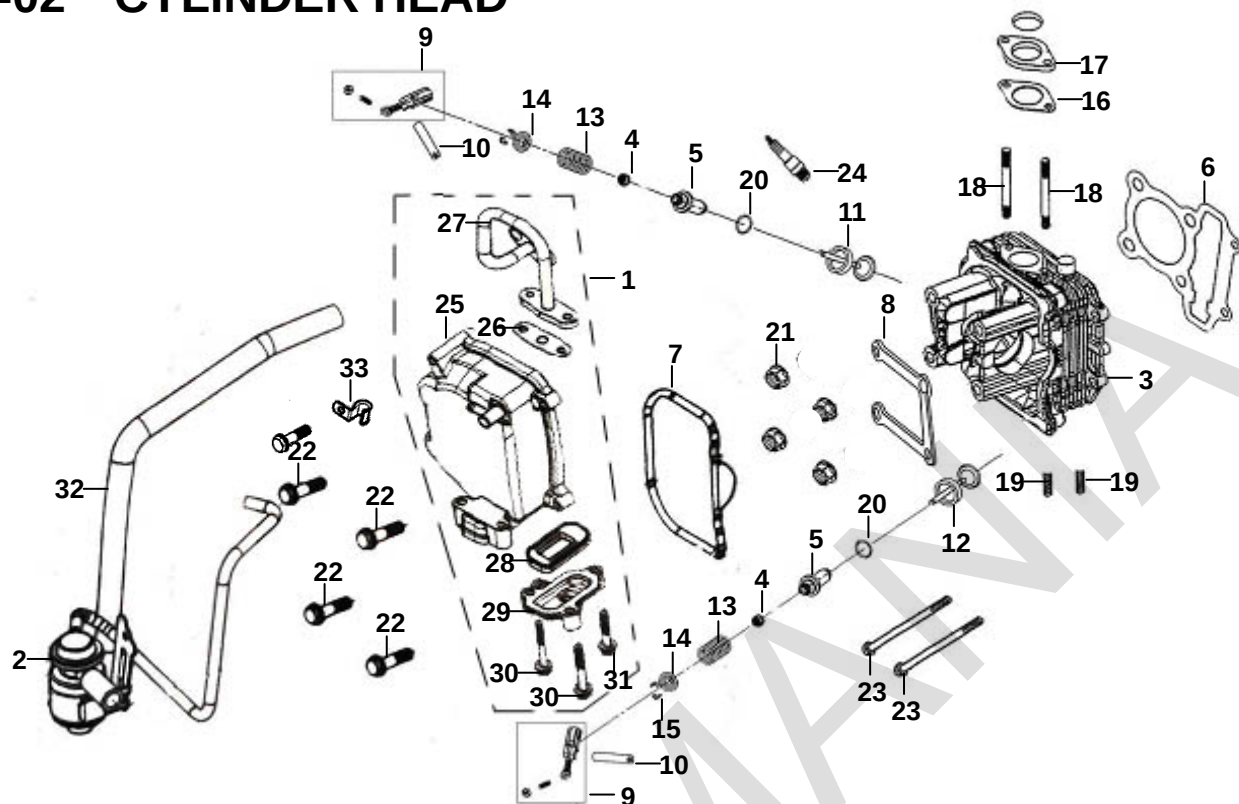


Ref.No	Part Number	Description	Reqd. No.
1	1230A-ARA-0012	Cylinder head cover ASSY.	1
2	1865A-ANA-0002	A.I.C.V. ASSY.	1
3	12200-ARA-0005	Cylinder head COMP.	1
4	12209-H6B-9000	Valve stem seal	2
5	12237-F6A-3000	Valve guide	2
6	12251-H6B-0002	Cylinder head gasket	1
7	12391-ARA-0100	Head cover packing	1
8	12392-ARA-0002	Cylinder head stay	1
9	1443A-F6A-0002	Valve rocker arm ASSY.	2
10	14451-H6B-0000	IN. rocker arm shaft	2
11	14711-F6A-0000	IN. valve	1
12	14721-F6A-0000	EXH. valve	1
13	14751-ARA-0000	Valve spring	2
14	14771-F6C-A000	Retainer valve spring	2
15	14781-A01-A000	Valve cotter	4
16	16201-M92-0002	CARB. insulator gasket	1
17	16211-M92-0002	CARB. insulator	1
18	90034-ABA-0000	Stud bolt 6*65	2
19	90034-HMA-0001	Special stud bolt 8*40	2

E-02-1 CYLINDER HEAD

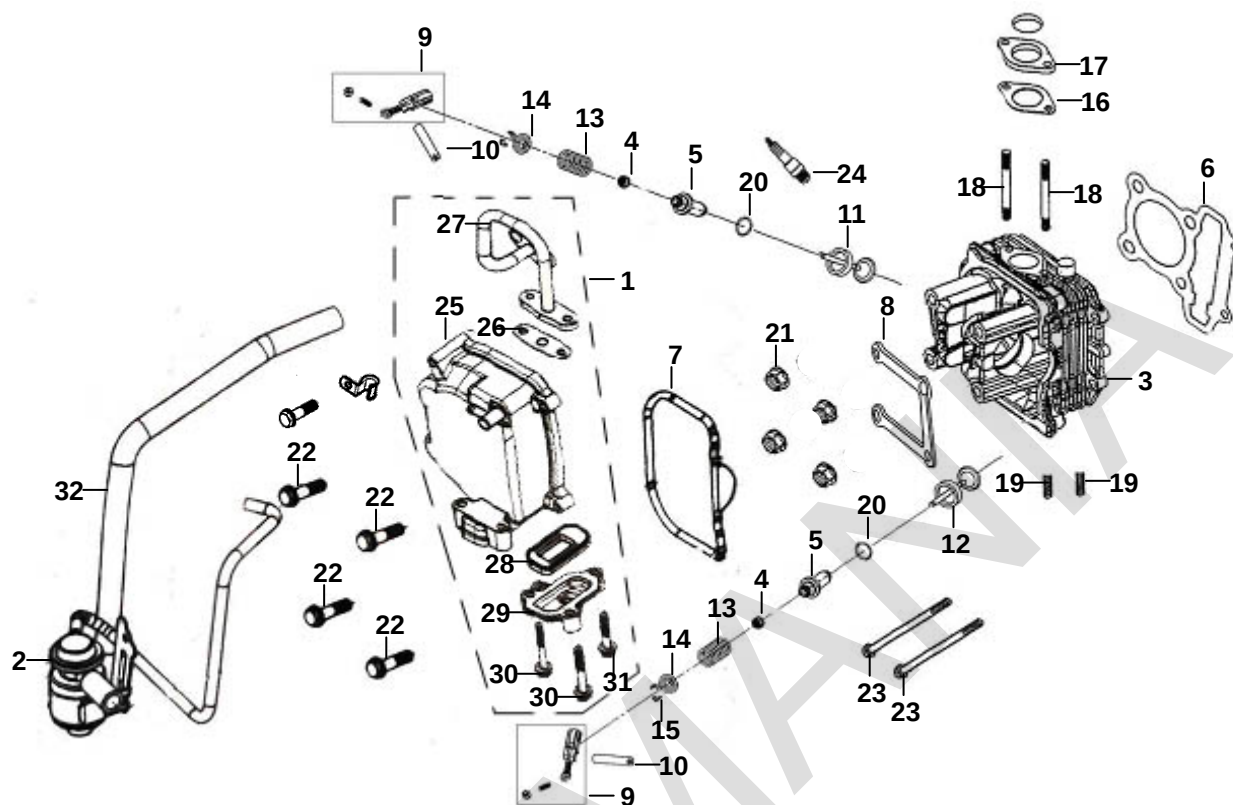


Ref.No	Part Number	Description		Reqd. No.
20	91305-M9Q-0001	O-ring 9*1.6	O 环 9*1.6	2
21	94050-08080	Nut flange 8MM	六角缘面螺帽 8MM	4
22	96001-06025-08	SH. flange bolt 6*25	六角缘面螺栓 6*25	4
23	96001-06095-08	Flange SH bolt 6*95	六角缘面螺栓 6*95	2
24	98056-57718-NGK	PLUG. spark(NGK CR7HSA)	火星塞	1
25	12310-ARA-0011	Cylinder head cover COMP	汽缸头盖组	1
26	18645-M9Q-0000	A/I pipe gasket	AI 管垫片	1
27	18647-ARA-0000	Air pipe COMP.	AI 管组	1
28	18601-MJ1-7901	Reed valve COMP.	簧片阀组	1
29	18612-H66-0002	Reed valve cover	簧片阀盖	1
30	95701-06045-00	Flange bolt 6*40	六角缘面螺栓 6*40	2
31	95701-06025-00	Flange bolt 6*25	六角缘面螺栓 6*25	1
32	18860-H6H-9103	Aicv tube ASSY	AICV 管总成	1

E-03 CAM SHAFT&CYL. HEAD L. SIDE COVER

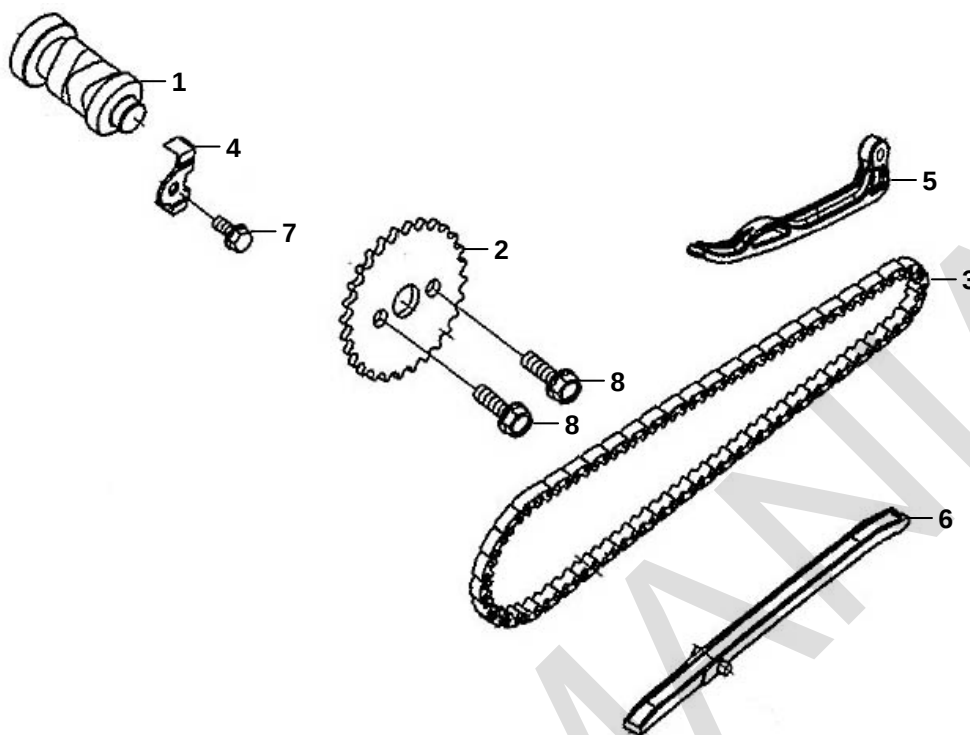


Ref. No	Part Number	Description	Reqd. No.
1	14100-ARA-0002	Cam shaft COMP.	1
2	14105-F6A-0000	Cam sprocket	1
3	14401-F6A-0000	Cam chain	1
4	14457-F6A-0000	Cam shaft setting plate	1
5	14510-F6A-0000	Cam chain tensioner	1
6	14610-F6A-0100	Cam chain guide	1
7	96001-06016-08	SH. flange bolt 6*16	1
8	90083-B12-0000	Knock bolt 6MM	2

E-04 R CRANK CASE&OIL PUMP ASSY

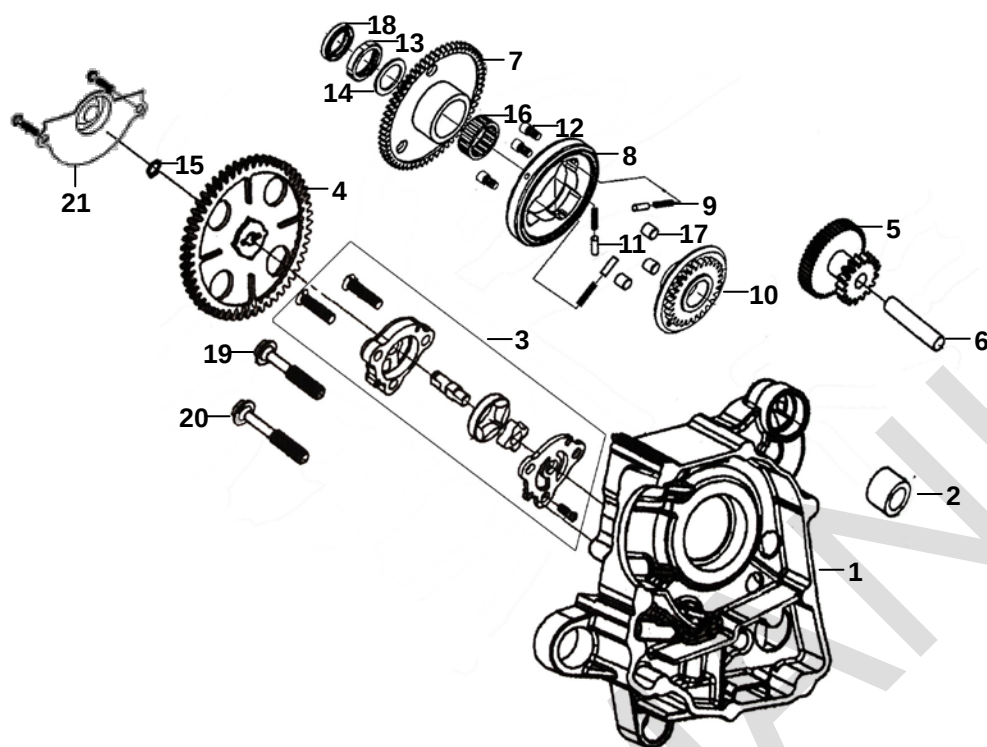


Ref. No	Part Number	Description		Reqd. No.
1	11100-ARA-0004	R. crank case COMP.	右曲轴箱盖组	1
2	11102-M9Q-3000	ENG. hanger rubber bush	引擎悬吊橡皮衬套	1
3	15100-F6C-0001	Oil pump ASSY.	油泵总成	1
4	15133-F6C-0001	Oil pump driven gear	油泵驱动齿轮	1
5	28101-GY6-9000	Starter reduction gear	起动减速齿轮	1
6	28102-GY6-9000	Start. red. gear shaft	起动减速齿轮轴	1
7	28110-M9Q-0002	Start. clutch gear COMP	起动离合器齿轮组	1
8	28120-M9Q-0007	Starting clutch outer COMP.	起动离合器外套组	1
9	28124-H6T-0000	Starter clutch roller spring	起动离合器滚子弹簧	3
10	28125-M92-0002	Starting clutch flange COMP.	起动离合器凸缘	1
11	28126-M9Q-0000	Starting roller spring cap	滚子弹簧盒	3
12	90002-M9Q-0001	Socket bolt 6*10	内六角螺栓 6*10	3
13	90201-GY6-9000	Lock nut 22MM	锁定螺帽 22MM	1
14	90403-M92-0000	Thrust washer 22.2*31*1.5	垫圈 22.2X31X1.5	1
15	90602-N01-0000	C-clip 8mm	外环夹 8MM	2
16	91104-M9Q-0000-M2	Needle bearing 28*32*17	滚针轴承 28X32X17	1
17	91105-M9Q-0002	Roller 10*10	滚珠 10*10	3
18	91201-GY6-9031	Oil seal 19.8*30*5R	油封 19.8*30.5R	1
19	96001-06045-08	Flange bolt 6*45	缘面螺栓 6*45	1
20	96001-06055-08	Flange bolt 6*55	缘面螺栓 6*55	1
21	15711-M92-0001	Oil pump separator	机油档板	1

E-05 CYLINDER

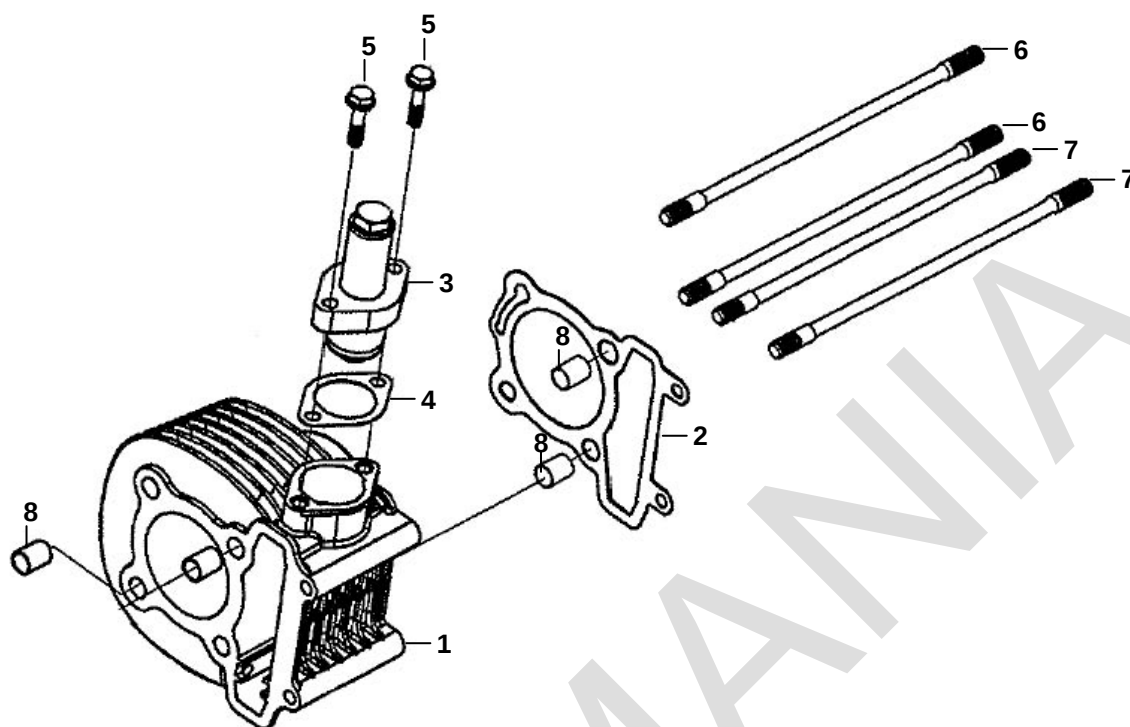


Ref. No	Part Number	Description		Reqd. No.
1	12101-ARB-0000	Cylinder	汽缸头	1
2	12191-F6C-0000	Cylinder gasket	汽缸头垫片	1
3	14520-GY6-9011-M1	Tensioner lifter ASSY.	链条调整器总成	1
4	14523-GY6-9000	Tensioner lifter gasket	链条调节器垫片	1
5	90001-M9Q-0000	SH. flange bolt 6*22	六角缘面螺栓 6*22	2
6	90031-M92-0001	Cylinder stud bolt A	汽缸头双头螺栓 A	2
7	90032-A6A-0000	Cylinder stud bolt B	汽缸头双头螺栓 B	2
8	90703-M8Q-0003	Dowel pin 10*14	定位销 10*14	4

E-06 R. CRANK CASE COVER

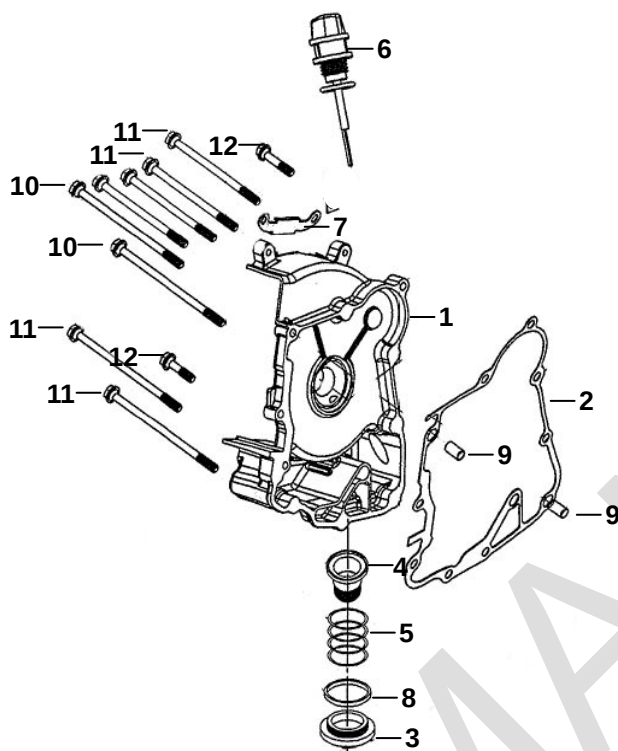


Ref. No	Part Number	Description	Reqd. No.
1	11331-ARB-0002	R. crank case cover	1
2	11394-F6C-0000	R. cover gasket	1
3	12361-M9Q-0001	Tappet adjusting hole cap	1
4	15421-H66-0000-CN1	Oil filter screen	1
5	15426-M9Q-0000	Oil filter screen SPG.	1
6	15651-F6A-0000	Oil level gauge	1
7	32961-ARA-0000	ACG cord clamper	1
8	91302-M9T-0002	O-ring 30.8MM	1
9	94301-08140	Dowel pin 8*14	2
10	96001-06100-08	SH flange bolt 6*100	2
11	96001-06095-08	Flange sh bolt 6*95	6
12	96001-06030-08	SH. flange bolt 6*30	2

E-07 AC GEN. ASSY

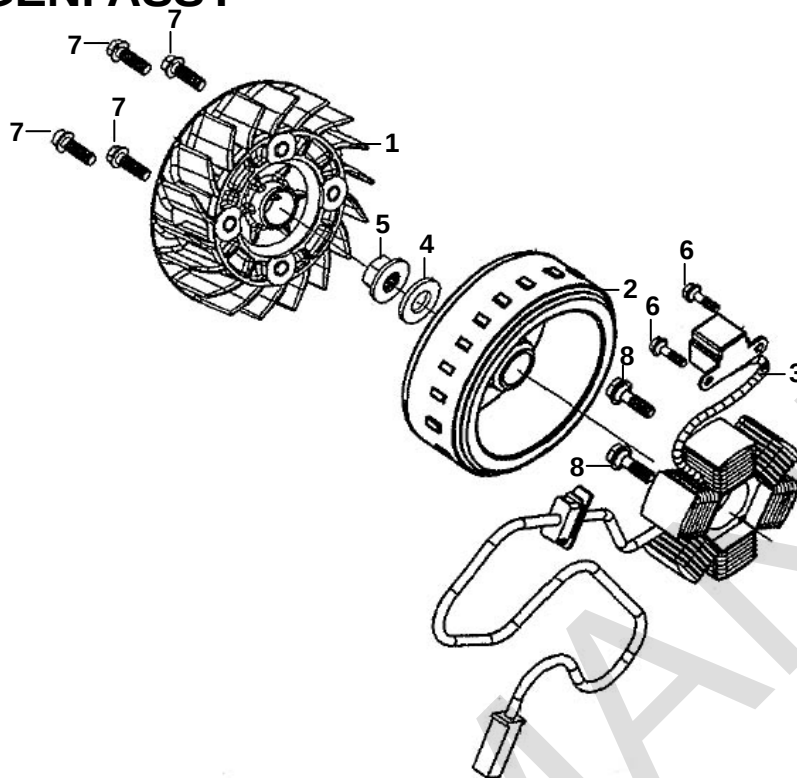


Ref. No	Part Number	Description		Reqd. No.
1	19510-F6A-0102	Cooling fan COMP.	冷却风扇组	1
2	31110-X1A-0000	Flywheel COMP	交流发电机总成	1
3	31120-X1A-0000	Stator COMP.	发电线圈	1
4	90440-166-0000	Plain washer 12MM	平面垫圈 12.2	1
5	94050-12000	Flange nut 12MM	六角缘面螺帽 12MM	1
6	92101-05012-0A	HEX bolt 5*12mm	六角缘面螺栓 5X12	2
7	96001-06018-08	Flange bolt 6*18	六角缘面螺栓 6x18	4
8	96001-06028-08	SH. flange bolt 6*28	六角缘面螺栓 6x28	2

E-08 L. CRANK CASE COVER

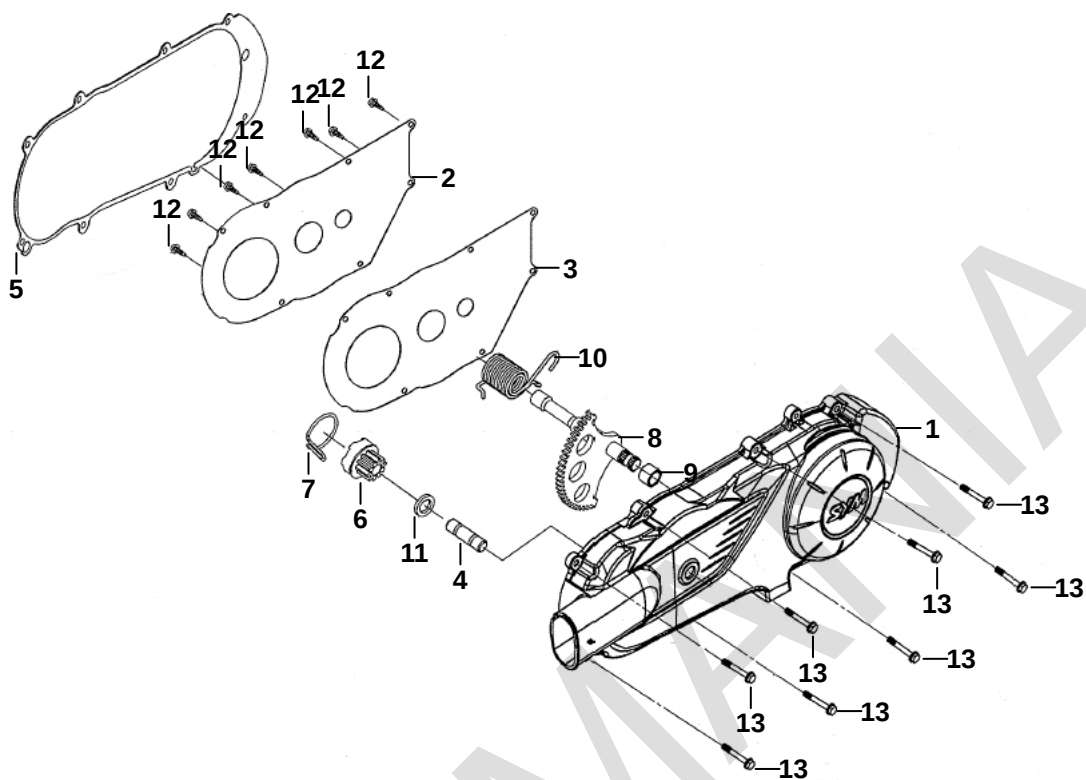


Ref. No	Part Number	Description	Reqd. No.
1	11341-ANA-0001	L. crank case cover	1
2	11342-ANA-0001	L. side cover plate	1
3	11343-ANA-0001	L. side cover plate gasket	1
4	11360-M92-3000	Kick starter driven shaft	1
5	11395-ANA-0000	L. cover gasket	1
6	28230-H6T-0000	Kick driven gear COMP.	1
7	28233-M92-0001	Kick starter friction SPG	1
8	28250-ARA-0000	Kick starter spindle COMP.	1
9	28254-KG8-910A	Kick spindle bush 14*18*16	1
10	28281-ARA-0000	Kick return spring	1
11	90452-M9Q-0000	Thrust washer 12MM	1
12	93500-05012-0H	Pan screw 5*12mm	7
13	96001-06028-00	Flange bolt SH 6*28	8

E-09 MOVABLE DRIVE FACE ASS'Y

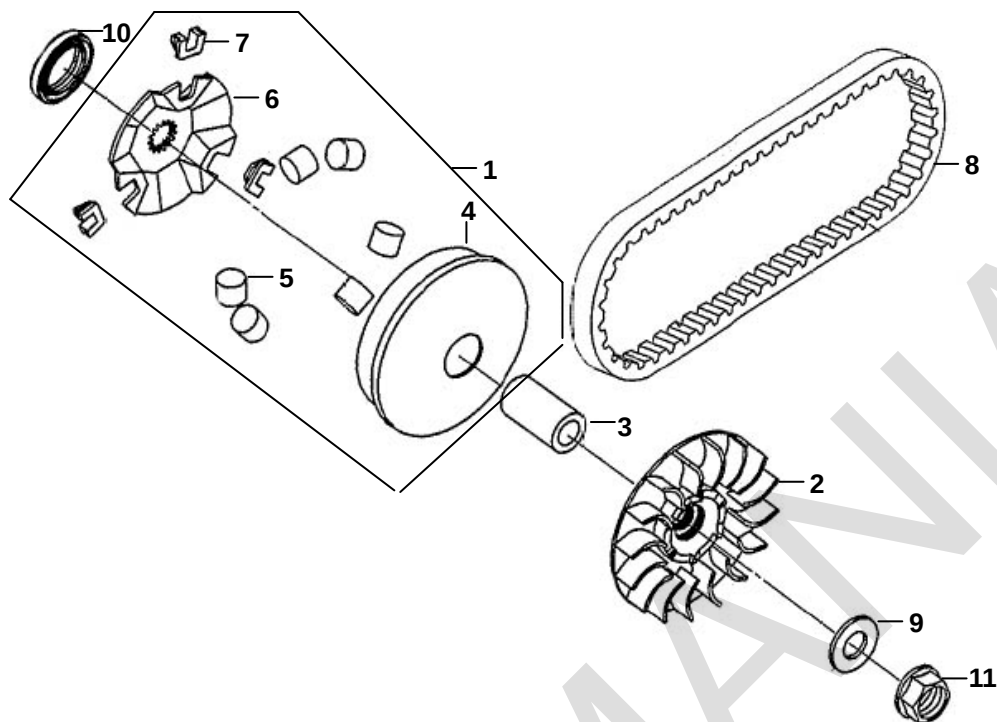


Ref. No	Part Number	Description	Reqd. No.
1	2211A-ARA-0000	Movable drive face ASSY.	1
2	22102-M92-0004	Drive face COMP.	1
3	22105-M92-0000	Drive face boss	1
4	22110-H5B-0001	Movable drive face COMP.	1
5	22121-HKE-0000	Weight roller COMP.	6
6	22131-M92-0002	Ramp plate	1
7	22132-ARA-0000	Slide piece	3
8	23100-AJC-0000	Drive belt	1
9	90440-166-0000	Plain washer 12MM	1
10	91202-A6A-0000	Oil seal 25*40*7	1
11	94050-12000	Flange nut 12MM	1

E-10 DRIVEN PULLEY ASS'Y

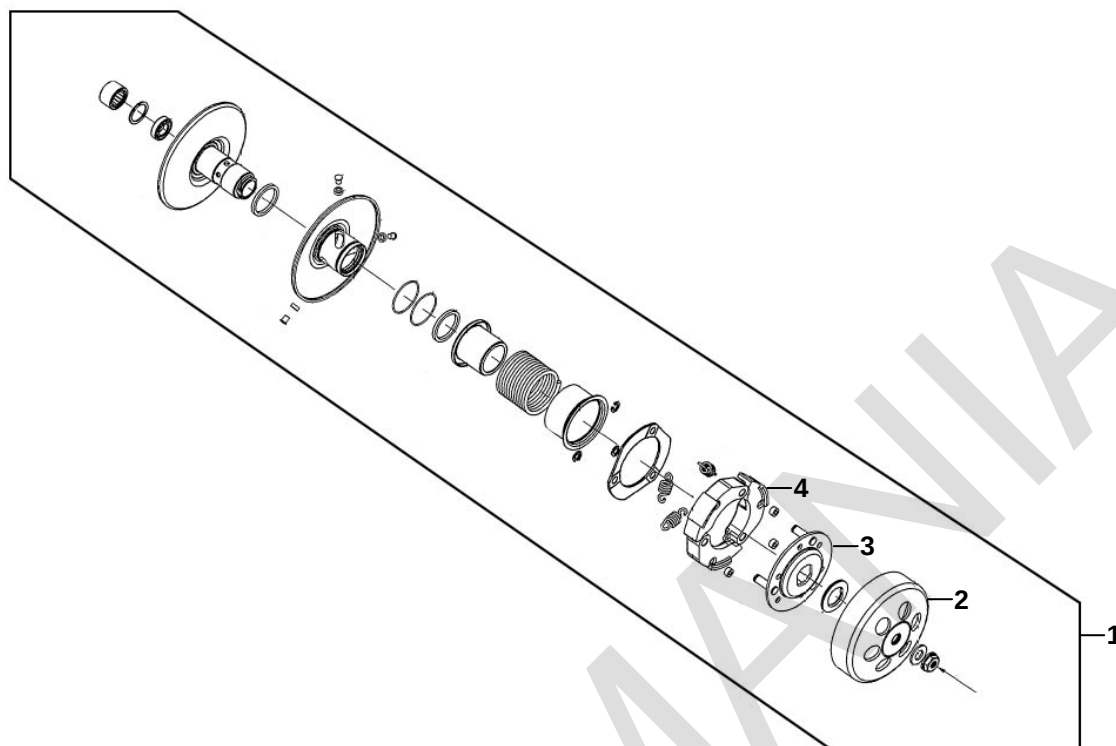


Ref. No	Part Number	Description		Reqd. No.
1	2301A-F6C-0000	Driven pulley set	传动皮带盘	1
2	22101-M9Q-0003	Clutch outer	离合器外套	1
3	22350-HKE-0001	Drive plate COMP.	驱动板组	1
4	22530-F6C-0000	Clutch weight	离合器片	1

E-11 MISSION CASE&DRIVE SHAFT

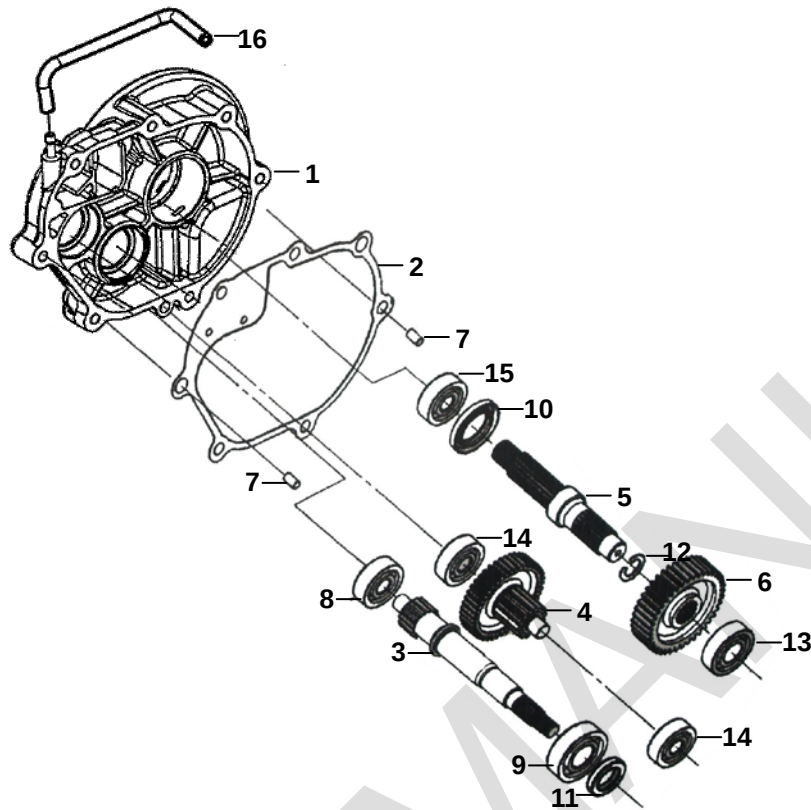


Ref. No	Part Number	Description		Reqd. No.
1	21200-AFA-0001	Mission case COMP.	變速箱蓋組	1
2	21395-ABA-0000	Mission cover gasket	變速箱蓋墊片	1
3	23411-ANA-0001	Drive shaft	起動曲軸	1
4	23420-HHA-0100	Counter shaft COMP.	副變速軸	1
5	23431-ARB-0001f	Final shaft	最終軸	1
6	23432-HHA-0100	Final gear 43T	最終齒輪	1
7	90703-M8Q-0003	Dowel pin 10*14	定位銷 10*14	2
8	91003-M8Q-0000	Radial ball BRG. CSB301	軸承 CSB301	1
9	91104-KN7-6700-M2	Radial ball BRG. CSB204	滾珠軸承	1
10	91201-HHA-3001	Oil seal 32*47*7	油封 32*47*7	1
11	91202-KJ9-0030-M1	Oil seal 20*32*6	油封 20*32*6	1
12	94510-22000	EX. cir-clip 22MM	外形夾 22MM	1
13	96100-62033-10	Radial ball BRG. 6203	滾珠軸承 6203C3	1
14	96100-63013-00	Radial ball BRG 6301	滾珠軸承 6301C3	2
15	96150-62043-10	Ball radial bearing 6204	滾珠軸承 6204UU	1
16	11221-ABA-0000	Mission breather tube	變速箱通氣管	1

E-12 L. CRANK CASE

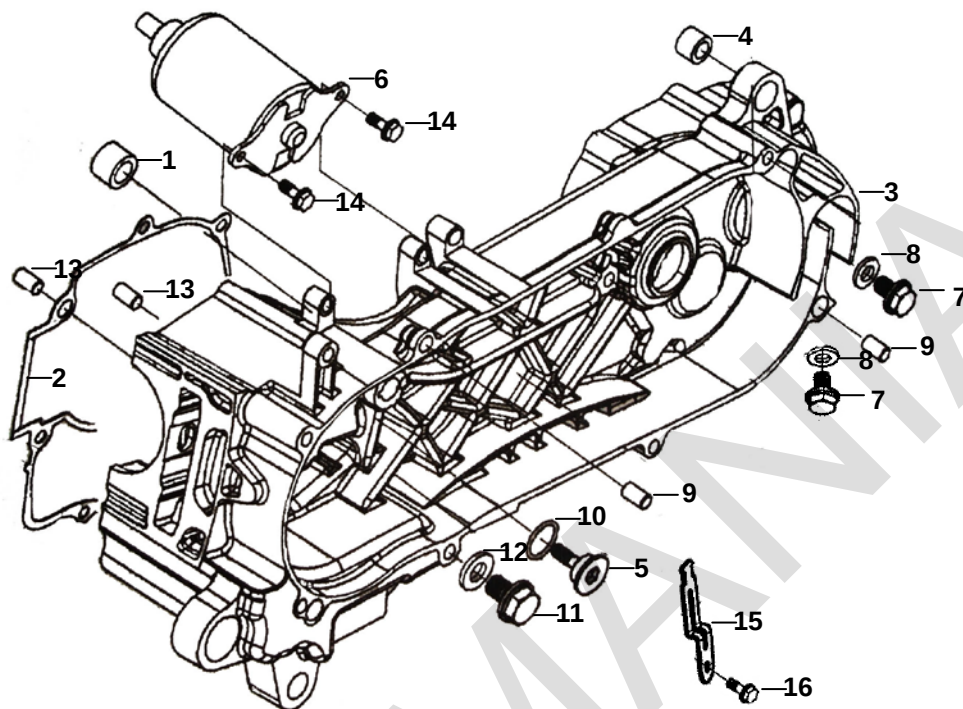


Ref. No	Part Number	Description		Reqd. No.
1	11102-M9Q-3000	ENG. hanger rubber bush	引擎悬吊橡皮衬套	1
2	11192-F6C-0000	R. crank case gasket	右曲轴箱垫片	1
3	11200-ANA-0100	L. crank case COMP.	左曲轴箱	1
4	11203-M9Q-3000	RR. CUSH. UN. rubber bush	刹车固定梢	1
5	14531-M9Q-0000	Cam chain tensioner pivot	张力器调整螺丝	1
6	31200-F6C-A000	Start motor ASSY.	起动马达	1
7	90103-ANA-0001	Special bolt 8MM	特殊螺栓 8MM	2
8	90474-333-0000	Washer 8MM	垫片 8MM	2
9	90703-M8Q-0003	Dowel pin 10*14	固定销 10*14	2
10	91304-M9Q-0000	O-ring 15.2*1.5	O 环 15.2*1.5	1
11	92800-12000	Drain plug bolt 12MM	泄油孔螺栓 12MM	1
12	94109-12000	Plug drain washer 12mm	泄油孔垫片 12MM	1
13	94301-08140	Dowel pin 8*14	定位销 8*14	2
14	96001-06016-08	SH. flange bolt 6*16	六角缘面螺栓 6*16	2
15	11225-ABA-0001	AIR/C duct stay	空滤器支架	1
16	96001-06012-08	SH. flange bolt 6X12	六角缘面螺栓 6*12	1

E-13 CRANK SHAFT

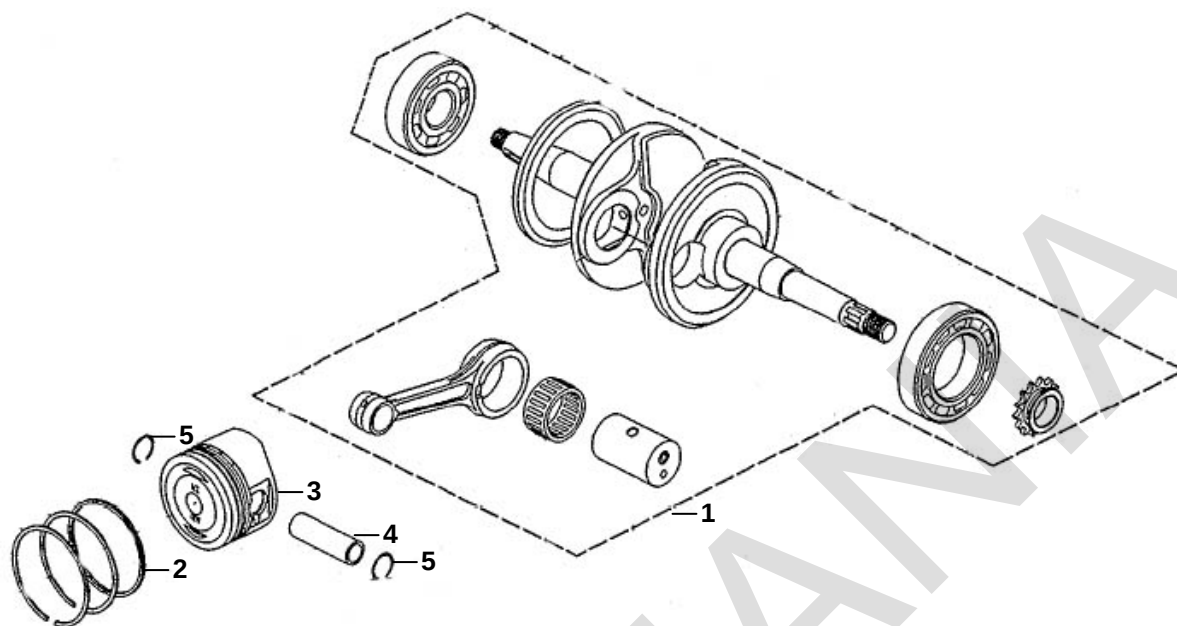


Ref. No	Part Number	Description		Reqd. No.
1	13000-ARA-0005	Crank shaft COMP	曲軸	1
2	13010-ADB-0000	Piston ring set	活塞環	1
3	13101-ARA-0000	Piston	活塞	1
4	13111-ARA-0000	Piston pin	活塞梢 7X10X29.2	1
5	94601-15000	Piston pin clip	活塞梢環夾	2

E-14 Carburetor

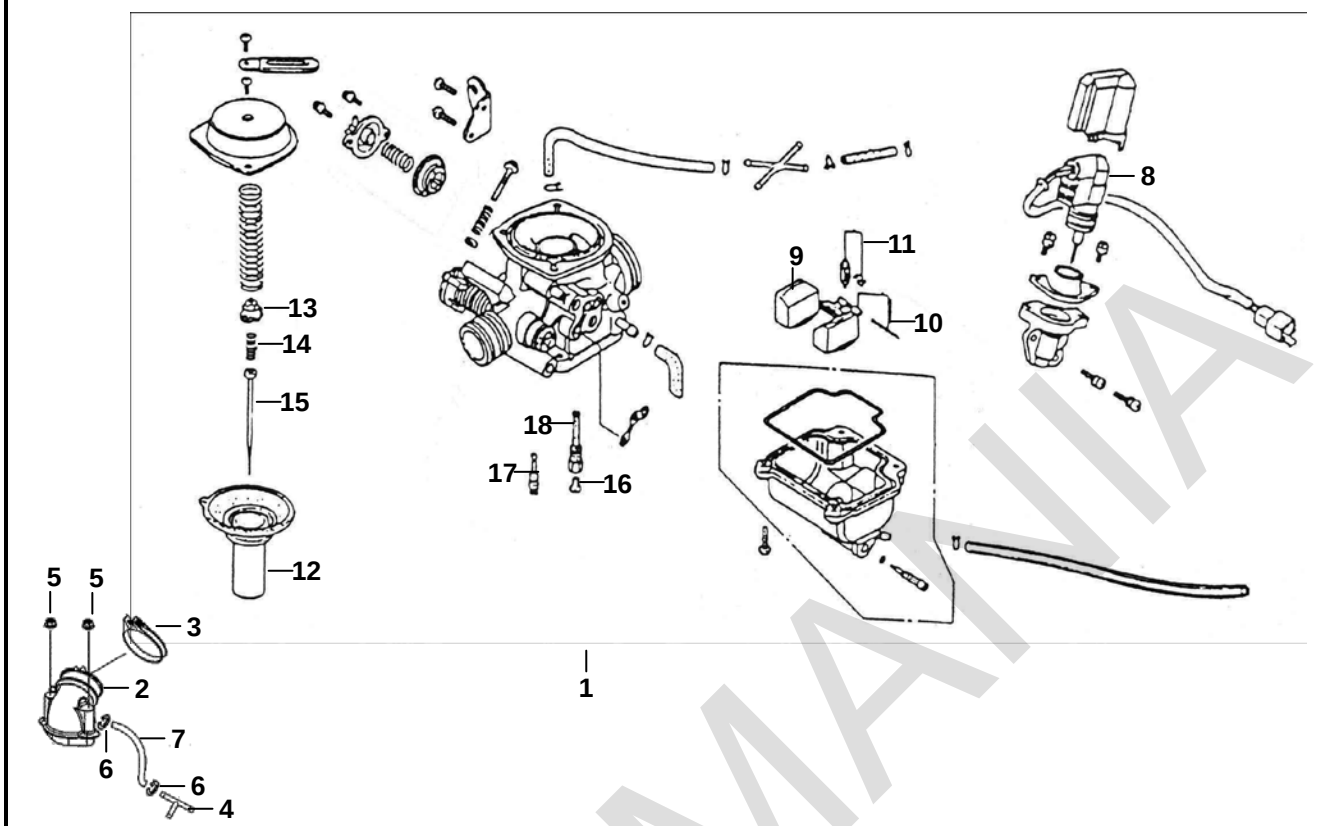


Ref. No	Part Number	Description	Reqd. No.
1	16100-ANA-0100	Carburetor ASS'Y	1
2	17110-ANA-0000	Inlet pipe COMP.	1
3	17256-M9Q-0000	Insulator band	1
4	18670-S6N-0000	3-way joint ASSY	1
5	94050-06000	Flange nut 6MM	2
6	95002-02070	Tube clip B7	2
7	95005-35110-50	Tube 3.5*110	1
8	16101-ANA-0000	Auto-by start	1
9	16120-ANA-0000	Float COMP.	1
10	16121-ANA-0000	Arm pin	1
11	16122-ANA-0000	Float valve COMP.	1
12	16142-ANA-0000	Vacuum piston COMP.	1
13	16143-ANA-0000	Valve plate	1
14	16144-ANA-0000	SPG. COMP	1
15	16145-ANA-0000	Needle jet	1
16	16180-ANA-0000	Main jet	1
17	16181-ANA-0000	Slow jet COMP.	1
18	16182-ANA-0000	Needle jet holder	1

F-01 Head Light

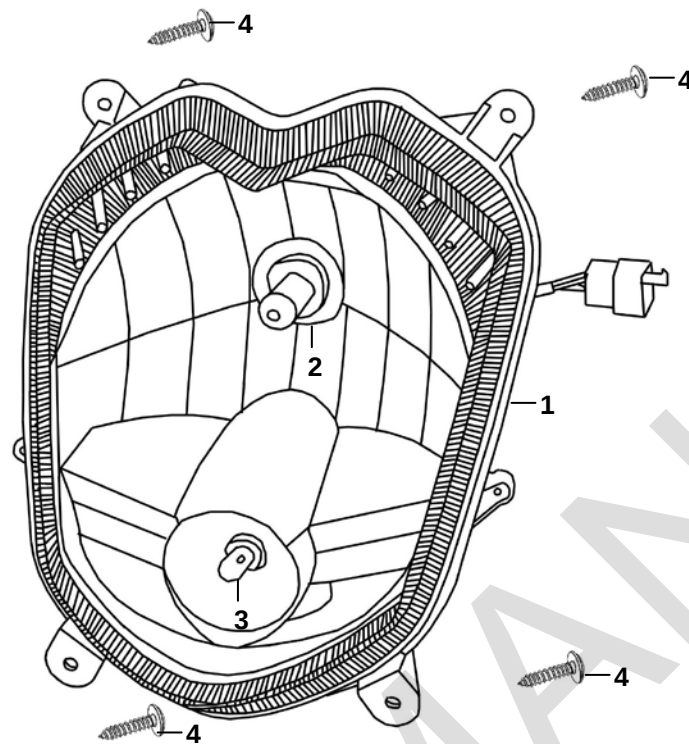


Ref. No	Part Number	Description		Reqd. No
1	33100-ABA-0001	Head light ASSY	头灯总成	1
2	34901-X06-0000	Head light bulb	头灯灯泡	1
3	34908-M9Q-2000	Wedge base bulb	定位灯总成	1
4	90109-48168	Tapping screw 4.8X16	螺丝 4.8X16	4

F-02 Speed Meter

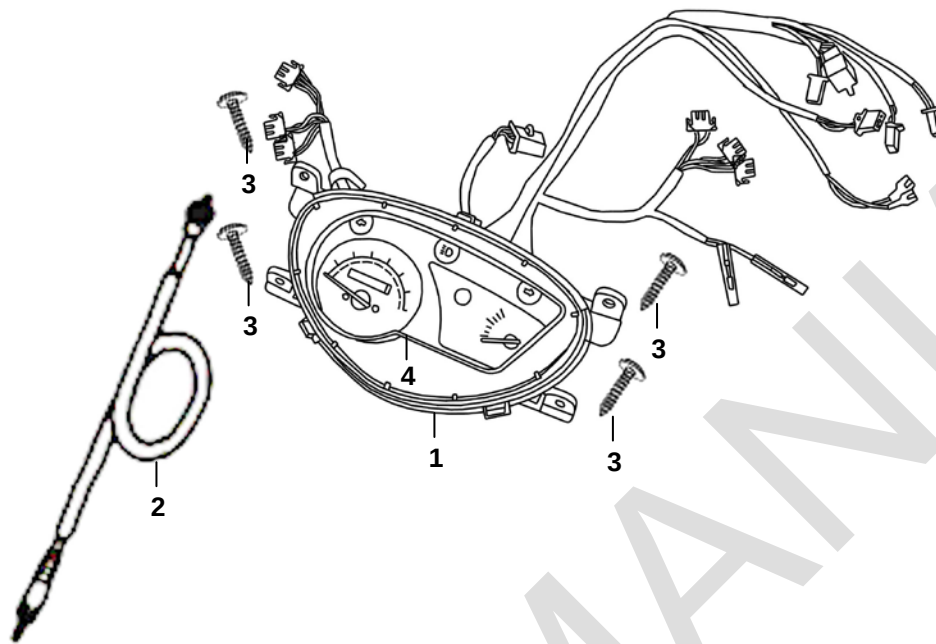


Ref. No	Part Number	Description		Reqd. No
1	37200-AEF-0101	Speedometer ASSY	速度表总成	1
2	44830-ABA-0001	Speedometer cable COMP	速度表导线总成	1
3	90109-48168	Tapping screw 4.8X16	攻丝螺钉 5X16	4
4	37203-ABA-0000	Meter case	仪表盖	1

F-03 Cable • Switch • Handle Lever

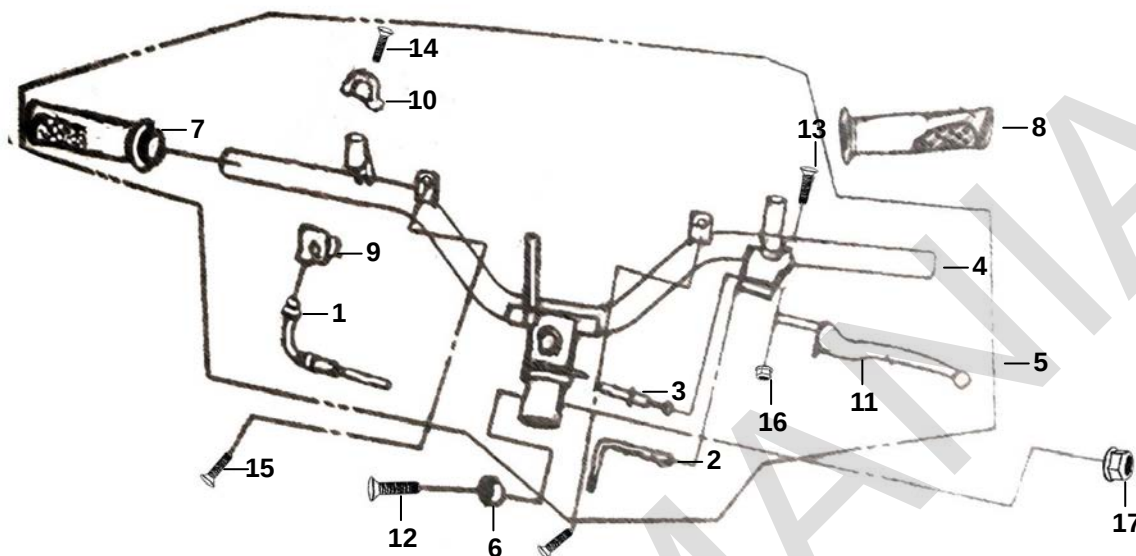


Ref. No	Part Number	Description	Reqd. No
1	17910-ABA-0003	Throt cable COMP	1
2	35340-M92-0001	FR. Stop SW. ASSY	1
3	43450-ANA-0000	RR. brake cable COMP	1
4	53100-AAA-0000	STRG. handle	1
5	5310A-AEF-0004	Handle set	1
6	53125-M9Q-0000	HNDL. set collar	1
7	53140-Z7C-0000	RH. HNDL. grip	1
8	53166-Z7C-0000	LH. HNDL. grip	1
9	53167-H09-9001	THROT. UND. housing	1
10	53168-H09-0001	Up throt housing	1
11	53178-T6V-0000	L. STRG. handle lever	1
12	90106-AAA-0000	Flange bolt 10X50	1
13	90115-M9Q-0000	Screw handle lever pivot	1
14	93500-05025-04	Hex nut 5MM	1
15	93903-35340	Tapping screw 5X16	2
16	94001-05070-0S	Hex nut 5MM	1
17	90304-M9Q-0000	Flange nut 10MM	1

F-04 Front Brake Master Cylinder

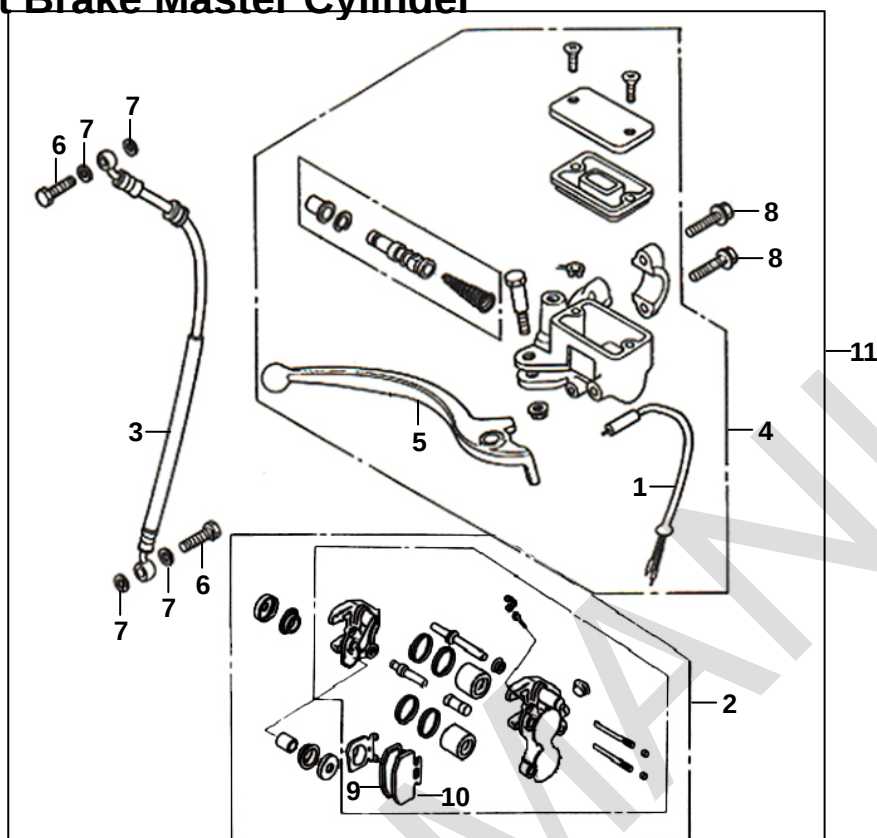


Ref. No	Part Number	Description	Reqd. No
1	35340-M92-0001	FR. stop SW. ASSY 前刹车开关总成	1
2	45100-T6R-9002	Caliper ASSY 夹具组	1
3	45126-AAA-0000	FR. brake hose ASSY 前刹车导管总成	1
4	45500-AAA-0000	FR. master cylinder 前碟刹泵	1
5	53178-T6V-0000	L. STRG. lever handle 右把手拉杆	1
6	90145-M9Q-0000	Oil bolt M10x22 螺栓 M10X22	2
7	90545-M9Q-0000	Oil bolt washer 螺栓垫圈	4
8	95801-06022-07	Flange bolt 8*30 六角缘面螺栓 M8*30	2
9	45105-G22-9000	Pad A COMP 刹车片 A	1
10	45106-G22-9000	Pad B COMP 刹车片 B	1
11	4550A-AAA-0003	FR. master cylinder ASSY 前碟刹泵	1

F-06 Handle Pipe • Handle Cover

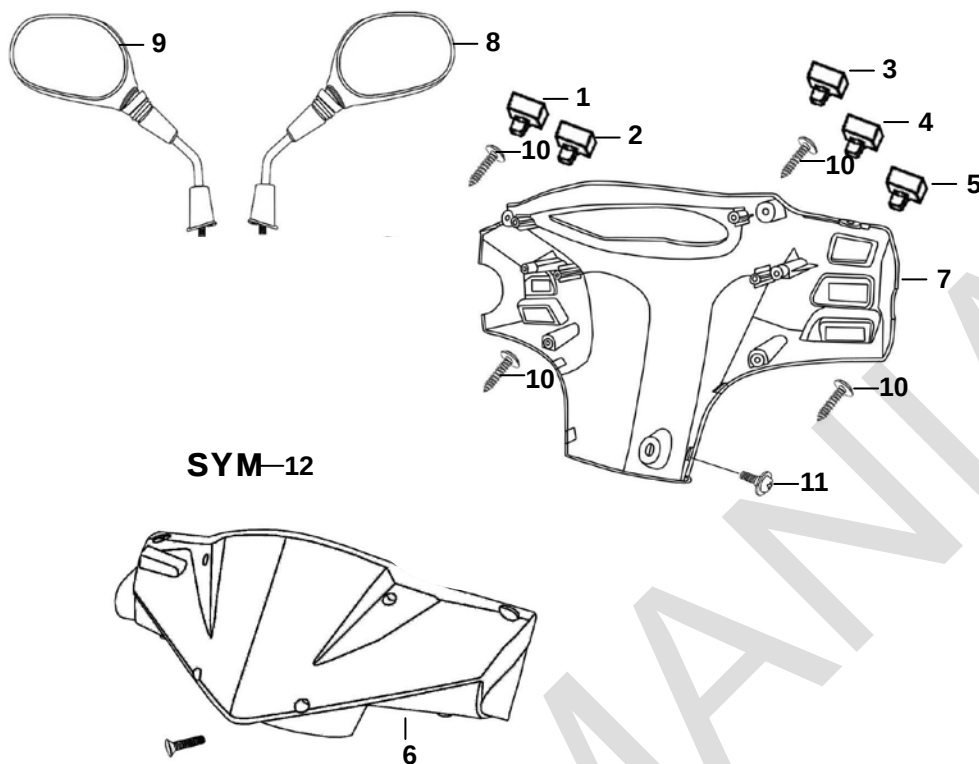


Ref. No	Part Number	Description		Reqd. No
1	35150-M9F-A000	Lighting SW. UNIT	大灯开关	1
2	35160-M9Q-0002	Start SW. UNIT	起动开关	1
3	35170-M9Q-0002-E2	Dimmer and open SW. UNIT	远近灯开关	1
4	35180-M9Q-0002	Horn SW. UNIT	喇叭开关	1
5	35200-M9Q-0001	Winker SW. UNIT	方向灯开关	1
6	53205-ABA-0001	FR. handle cover ASSY	前把手盖总成	1
7	53206-AAA-0001	RR. handle cover	后把手盖	1
8	88110-KAA-0000	R. back mirror ASSY	右后视镜总成	1
9	88120-KAA-0000	L. back mirror ASSY	左后视镜总成	1
10	90109-48168	Tapping screw 4.8X16	螺丝 4.8X16	4
11	90105-M40-0000	Pan screw 4.2*12	盘头螺栓 4.2X12	1
12	87170-AKA-A000	SYM stripe(60mm)	SYM 貼飾	1

F-07 Front Cover • Front Inner Box

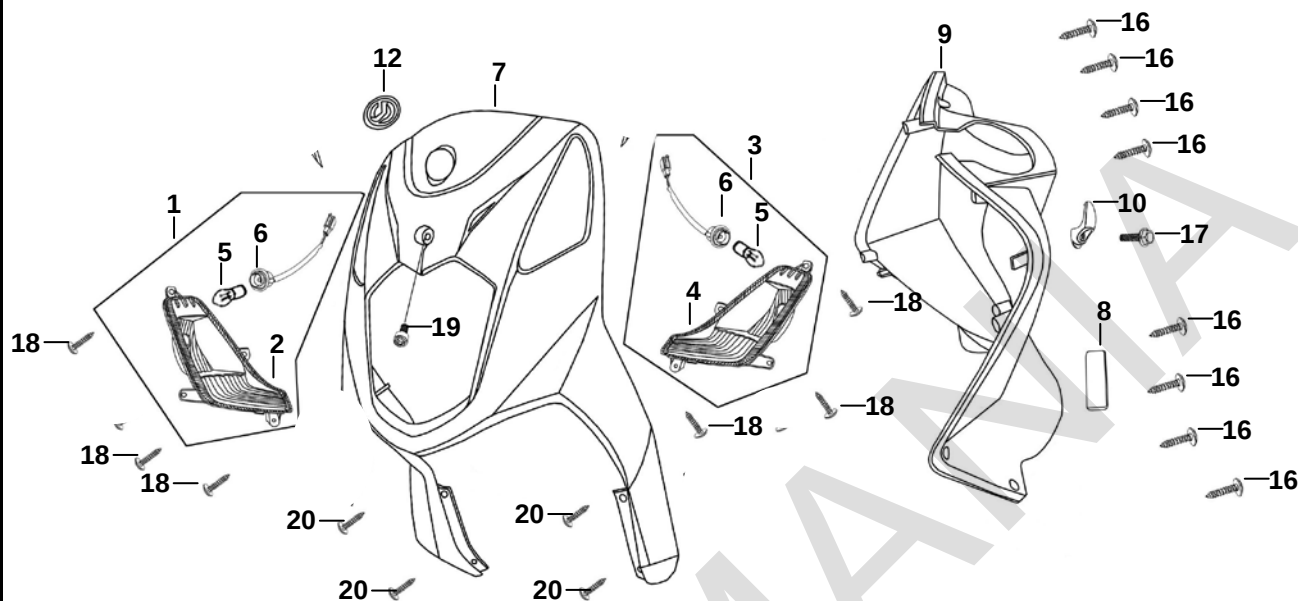


Ref. No	Part Number	Description	Reqd. No
1	33400-ABF-0000	FR. R. winker ASSY	1
2	33402-ABF-0000	FR. R. winker lens	1
3	33450-ABF-0000	FR. L. winker ASSY	1
4	33452-ABF-0000	FR. R. winker lens	1
5	34905-A8D-0000	Winker bulb(12V 10W)	2
6	34906-ABF-0000	FR. R/L. winker socket COMP.	2
7	64301-ABF-0000-RD	FR cover (RED)	1
8	64318-ALA-0000	Frame number lid	1
9	81131-ABF-0000	Inner cover	1
10	81133-H12-0000	Luggage stopper	1
12	87123-H85-0000	S logo(40 POLY)	1
16	90109-42128	Tapping scre2 4.2*12	8
17	90115-ATA-0000	Bolt 6*16	1
18	93903-35380	Tapping screw 5*16	6
19	90110-H6T-0001	Special screw 6*14	1
20	93903-45380	Tapping screw 5X16	4

F-08 Floor Panel • Center Cover

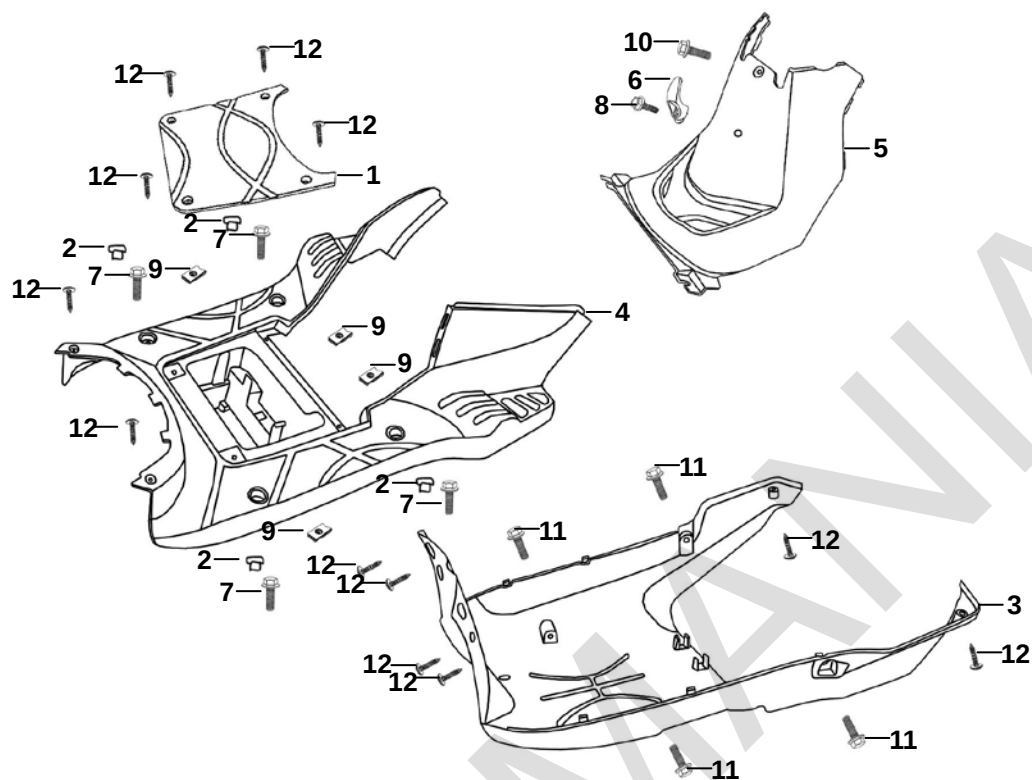


Ref. No	Part Number	Description		Reqd. No
1	50326-AAA-0000	Battery cover	电瓶盖	1
2	50612-AAA-3000	Cap b flr step	脚踏垫	4
3	50613-AWR-0000	Under cover	下盖	1
4	64310-ABF-0001	Floor panel	脚踏板	1
5	80151-AAA-0000	Center cover	中盖	1
6	81132-H12-0002	Luggage hook	挂钩	1
7	90111-AAA-0000	Flange bolt 6MM	缘面螺栓 6MM	4
8	90115-G02-0000	Bolt 6X16	螺栓 6X16	1
9	90308-X04-0000	Spring nut	弹簧垫片	4
10	90115-G02-0000	BOLT 6X16	螺栓 6X16	1
11	93404-06016-00	Washer bolt 6X16	垫片螺栓 6X16	4
12	90109-42168	Tapping screw 4.2X16	螺丝 4.2X16	12

F-09 Body Cover

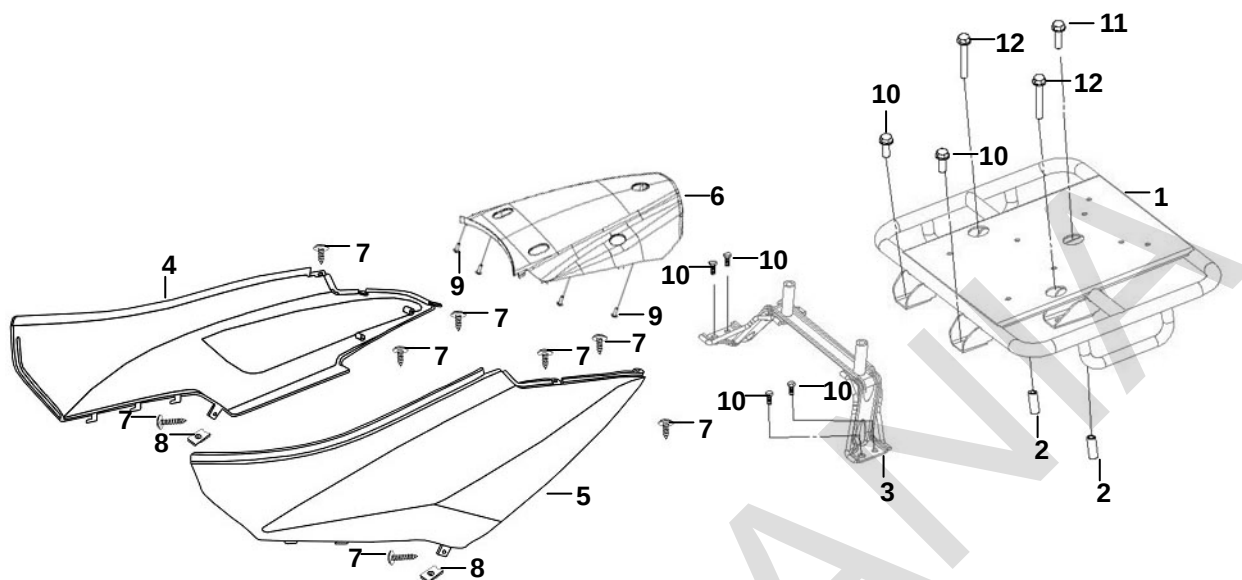


Ref. No	Part Number	Description		Reqd. No
1	81200-AWR-0001	Rear carrier	后货架	1
2	81203-AWR-0000	Rear carrier collar	后货架衬套	2
3	81270-AWR-0000	Rear cross plate	后横管	1
4	83500-AAA-0002	RH body cover	右车体盖	1
5	83600-AAA-0001	LH body cover	左车体盖	1
6	83750-AWR-0001	RR center cover	后中央盖	1
7	90109-48168	Tapping screw 4.8X16	螺丝 4.8X16	8
8	90302-M92-0000	Spring nut 5MM	弹簧垫片 5MM	2
9	93903-24380	Tapping screw 5X12	攻丝螺钉 5X12	4
10	95801-08016-04	Flange bolt 8x16	缘面螺栓 8*16	6
11	95801-08040-04	Flange bolt 8*40	缘面螺栓 8*40	1
12	95801-08060-04	Flange bolt 8*60	缘面螺栓 8*60	2

F-10 Steering Stem • Front Cushion

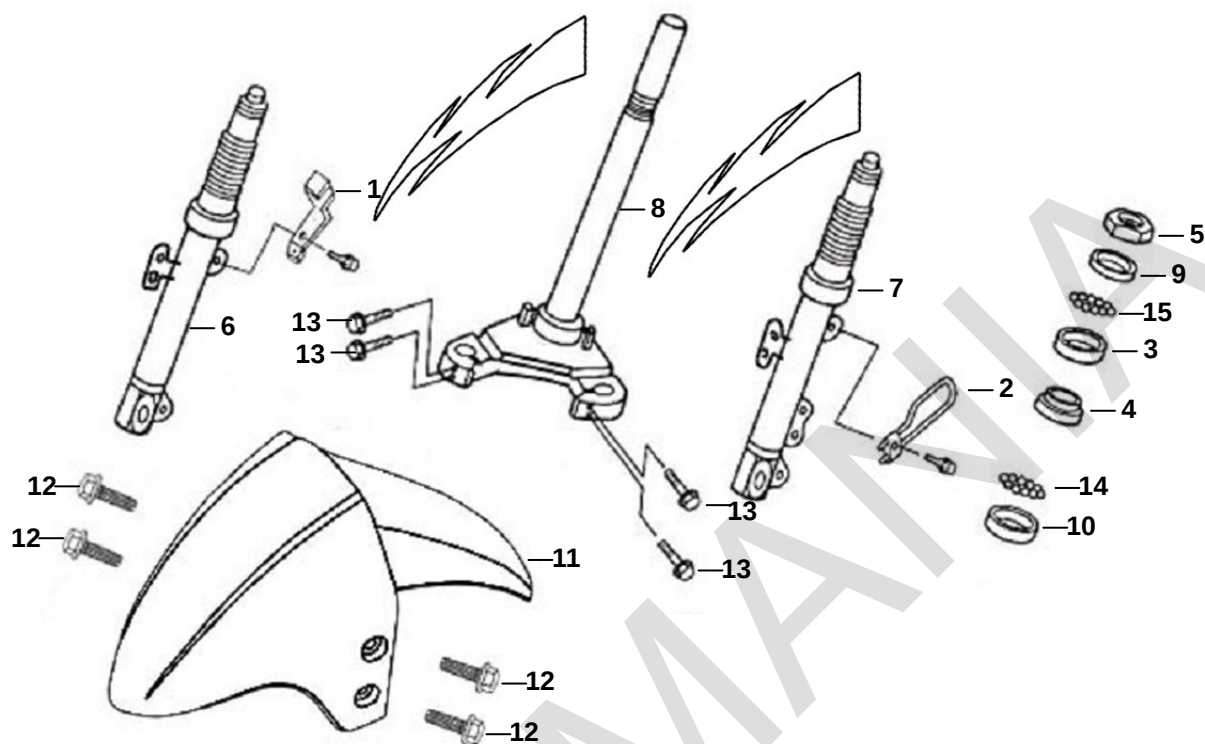


Ref. No	Part Number	Description	Reqd. No
1	45156-AAA-0000	FR. brake cable	1
2	45465-AAA-0000	Cable guide	1
3	50301-M9Q-0002-CN2	STRG.up ball race	1
4	50302-M9Q-0000-CN2	Race STRG.bot ball	1
5	50306-M9Q-0000-CN2	STRG. stem lock nut	1
6	51400-ATA-0002	R.FR. cushion	1
7	51500-ATA-0002	L.FR. cushion	1
8	53200-AAA-0003f	Steeting stem	1
9	53211-M9Q-0000-CN2	STRG. top cone	1
10	53212-M9Q-0000-CN2	Cone STRG. bottom	1
11	61100-AAA-0000-KG	FR. Fender (BLACK)	1
12	90111-AAA-0000	FLANGE BOLT 6MM	4
13	95801-08040-04	Flange bolt 8X40	4
14	50303-AAA-0000	Steel ball 5#	1
15	50304-AAA-0000	Steel ball 8#	1

F-11 Front Wheel

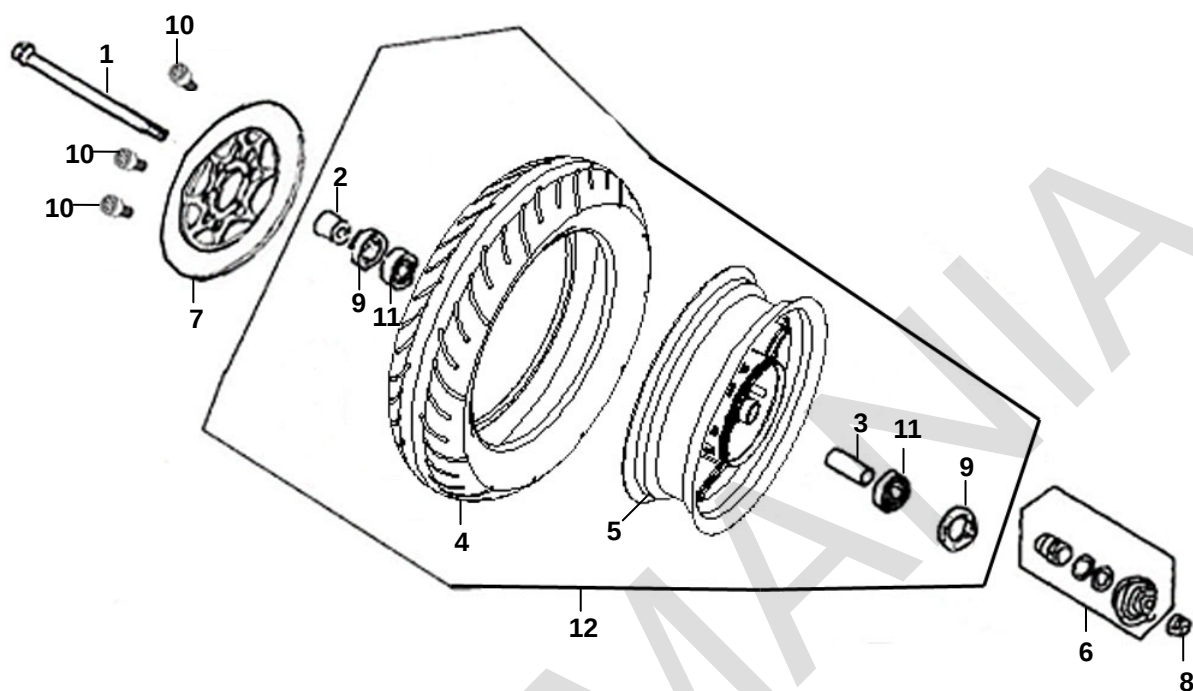


Ref. No	Part Number	Description	Reqd. No
1	44301-AAA-0000	FR. wheel axle	1
2	44311-AAA-0000	FR. wheel side collar	1
3	44620-AAA-0000	FR. distance collar	1
4	44710-ABF-0000	FR. wheel tire ASSY	1
5	44601-AAA-0003	FR. CAST WHEEL	1
6	44800-ATA-0000	Speed box gear	1
7	45121-AAA-0000	FR. brake disk	1
8	90306-M9Q-0001	Self lock nut 12MM	1
9	90754-M9Q-0000-M1	Oil seal 23x32x5	2
10	90106-N02-0002	FR. disk bolt 8*26	3
11	90912-M9Q-0000-CN1	Radial ball bearing 6301	2
12	44600-ABF-0001	FR wheel	1

F-12 Rear Wheel

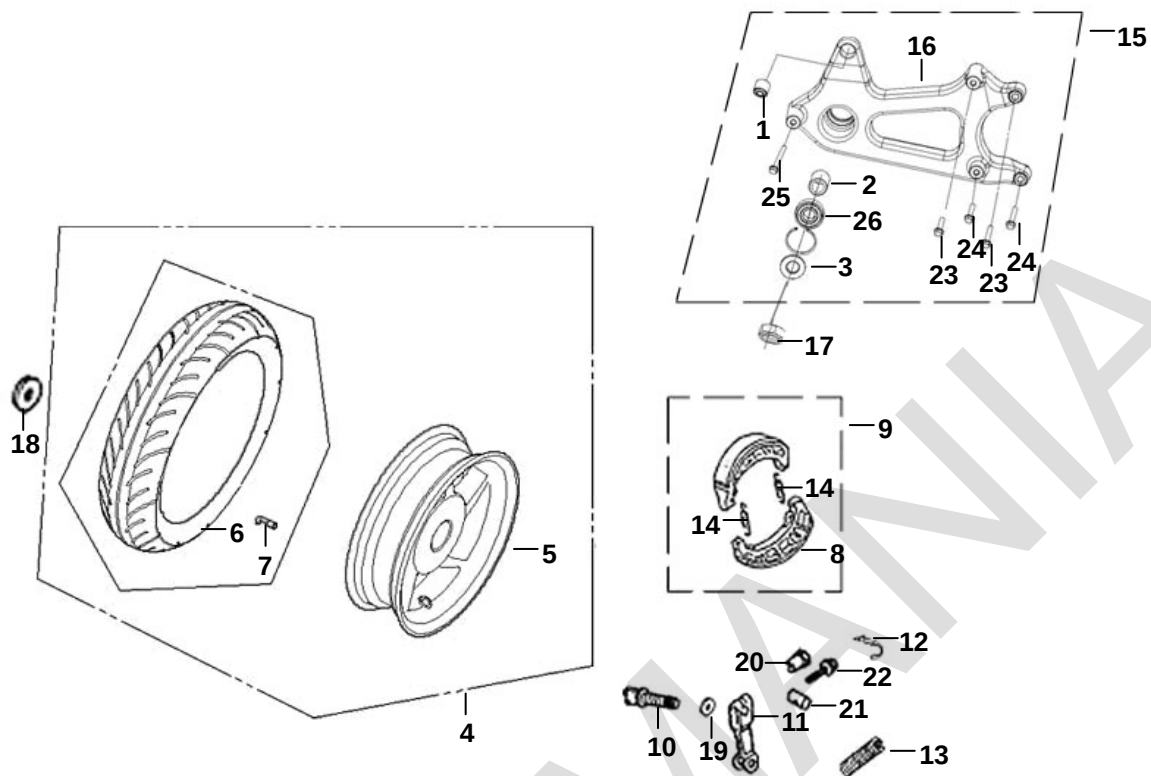


Ref. No	Part Number	Description		Reqd. No
1	11203-M9Q-3000	RR. cush. UN. rubber bush	后避震下悬吊橡胶衬套	1
2	42311-AWR-0000	Rear axle collar inside	后轮内轴套	1
3	42312-AWR-0000	Rear axle collar (outside)	后轮轴外轴套	1
4	42600-ABA-0003	RR wheel ASSY	后轮总成	1
5	42601-ABA-0003	RR. wheel hub COMP	后轮圈	1
6	42710-ABA-0000	RR. tire ASSY	后轮胎	1
7	42753-ABA-0000	Rim valve	气门嘴	1
8	43120-E18-0002	Brake shoe COMP	刹车皮	1
9	4312A-H1A-0000	RR. brake shoe ASSY	刹车皮总成	1
10	43141-KAA-0001	RR. brake cam	后刹车凸轮	1
11	43410-ALG-0000	RR. brake arm	后刹车臂	1
12	43452-M9Q-1000	Brake cable clamp	刹车线夹	1
13	43472-ABA-0000	RR. BRK. Arm return SRG.	后刹车臂回位弹簧	1
14	45133-B08-0005	Brake shoe spring	后刹车皮弹簧	2
15	5210A-AEF-0000	Rear fork ASSY	后叉总成	1
16	52100-AEF-0000	Rear fork	后叉	1
17	90305-M9Q-9001	Self-lock nut 16MM	自锁螺母 16MM	1
18	90501-M9Q-0000	16MM washer	垫片 16MM	1
19	91352-M9Q-0000-M1	O ring 11.3X1.3	O 环 11.3X1.3	1

F-12-1 Rear Wheel

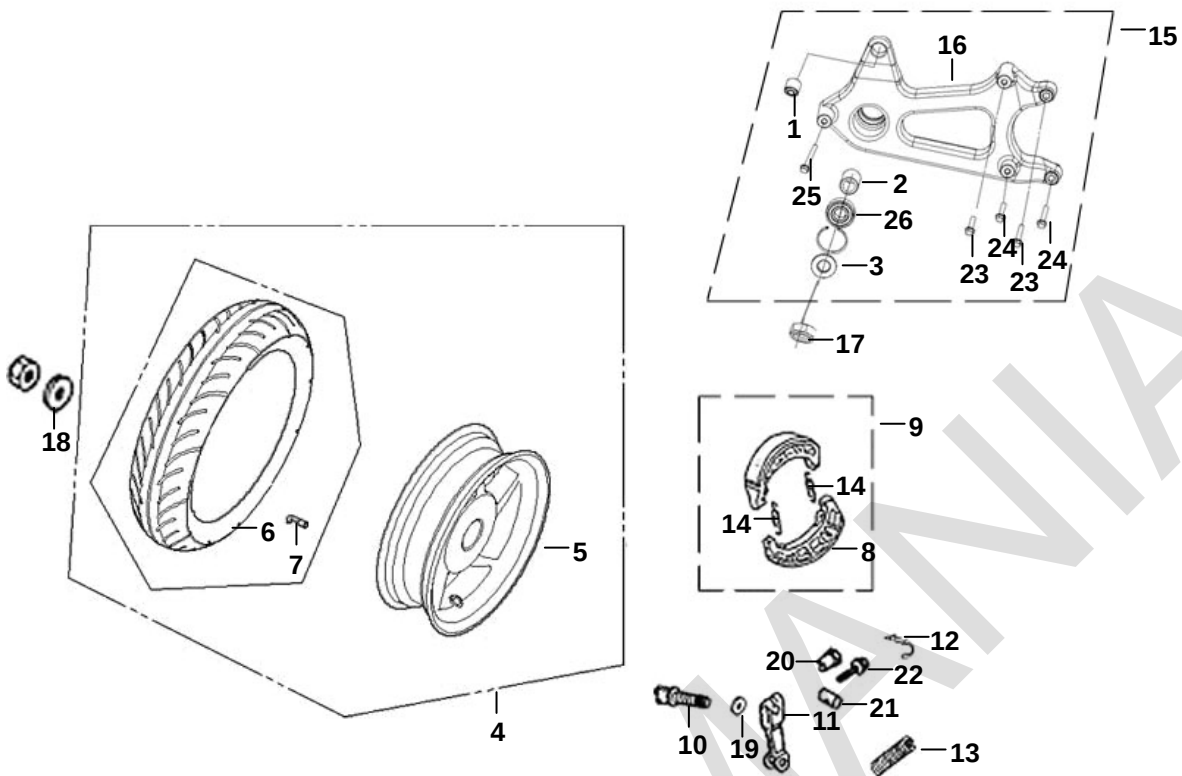


Ref. No	Part Number	Description		Reqd. No
20	95015-32001	Brake arm joint B	后刹车臂接头 B	1
21	95015-42000	Adjust nut B	调整螺母 B	1
22	95801-08035-00	Flange bolt 6X32	缘面螺栓 6X32	1
23	95801-08040-04	Flange bolt 8*40	缘面螺栓 6X32	2
24	95801-08050-04	Flange bolt 8*50	缘面螺栓 6X32	2
25	95801-08065-04	Flange bolt 8*65	缘面螺栓 6X32	1
26	96150-62030-10	Radial ball bearing 6203LLU	轴承 6203	1

F-13 Seat • Rear Grip

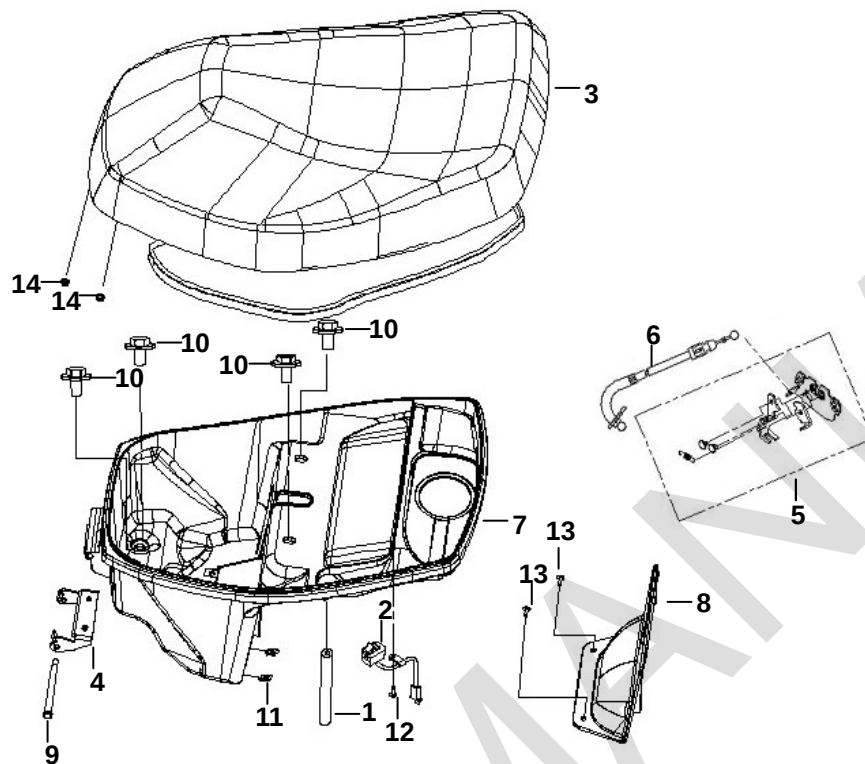


Ref. No	Part Number	Description		Reqd. No
1	17508-AWR-0001	Fuel drain tube	泄油管	1
2	36600-A1A-0101	ENG. start control SW.	引擎熄火开关	1
3	77200-AWR-0002	Double seat COMP	坐垫	1
4	77201-AAA-0000	Seat hinge COMP	坐垫合页	1
5	77230-APA-0006	Seat catch COMP.	坐垫锁组	1
6	77240-Z7C-0000	Seat lock cable	坐垫锁导线	1
7	81250-AWR-0002	Luggage box	行李箱	1
8	81251-Z7C-0000	Maint. COVER	中央盖	1
9	90105-HHA-0000	Seat hinge screw	坐垫合页螺丝	1
10	90115-ATA-0000	Flange bolt 6*16	缘面螺栓 6*16	4
11	90302-M92-0000	Spring nut 4MM	弹簧垫片 4MM	2
12	93903-34340	Tapping screw 4*12	攻丝螺钉 4*12	1
13	93903-44440	Tapping screw 4*16	攻丝螺钉 4*16	2
14	94050-06080	Flange nut 6MM	缘面螺帽 6MM	2

F-14 Fuel Tank

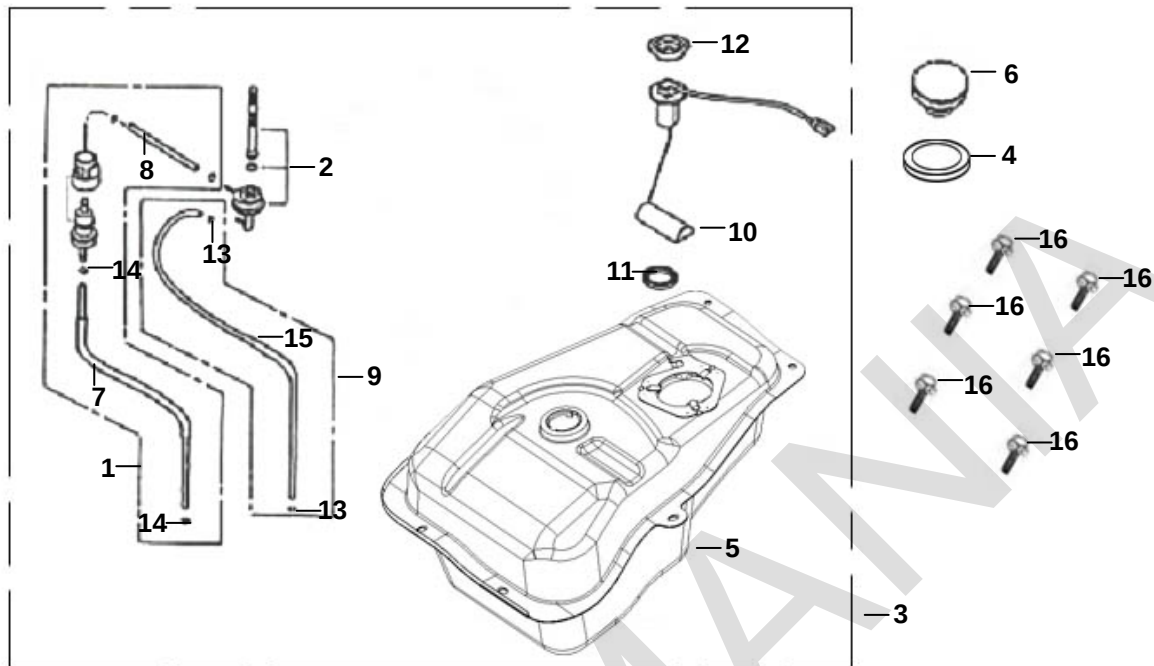


Ref. No	Part Number	Description		Reqd. No
1	1690A-AWR-0001	Fuel strainer ASSY	滤油器总成	1
2	16950-M9Q-0001	Fuel cock ASSY	油杯总成	1
3	1750A-AWR-0005	Fuel tank ASS'Y	油箱总成	1
4	17506-APA-0004	Fuel guide rubber	挡油环	1
5	17500-AWR-0002	Fuel tank COMP	油箱组	1
6	17620-CT1C-A000	Fuel filler cap COMP	油箱盖组	1
7	17682-AWR-0001	Fuel tube (400MM)	前油管	1
8	17683-AWR-0001	Fuel tube (170MM)	后油管	1
9	17684-AWR-0001	Vacuum tube ASSY	真空管总成	1
10	37800-AWR-0000	Fuel unit	汽油油量表	1
11	37801-M9Q-0001	Base packing	油量表垫圈	1
12	37802-M9Q-0000	Ret fuel unit	油量表压板	1
13	95002-02070	Tube clip B7	负压管卡簧 B7	2
14	95002-02070	Tube clip B8	油管卡簧 B8	4
15	95003-21025-20	Vacuum tube	真空管	1
16	95701-06025-00	Flange bolt 6X12	六角缘面螺栓 6*12	6

F-15 Battery • Tool Box

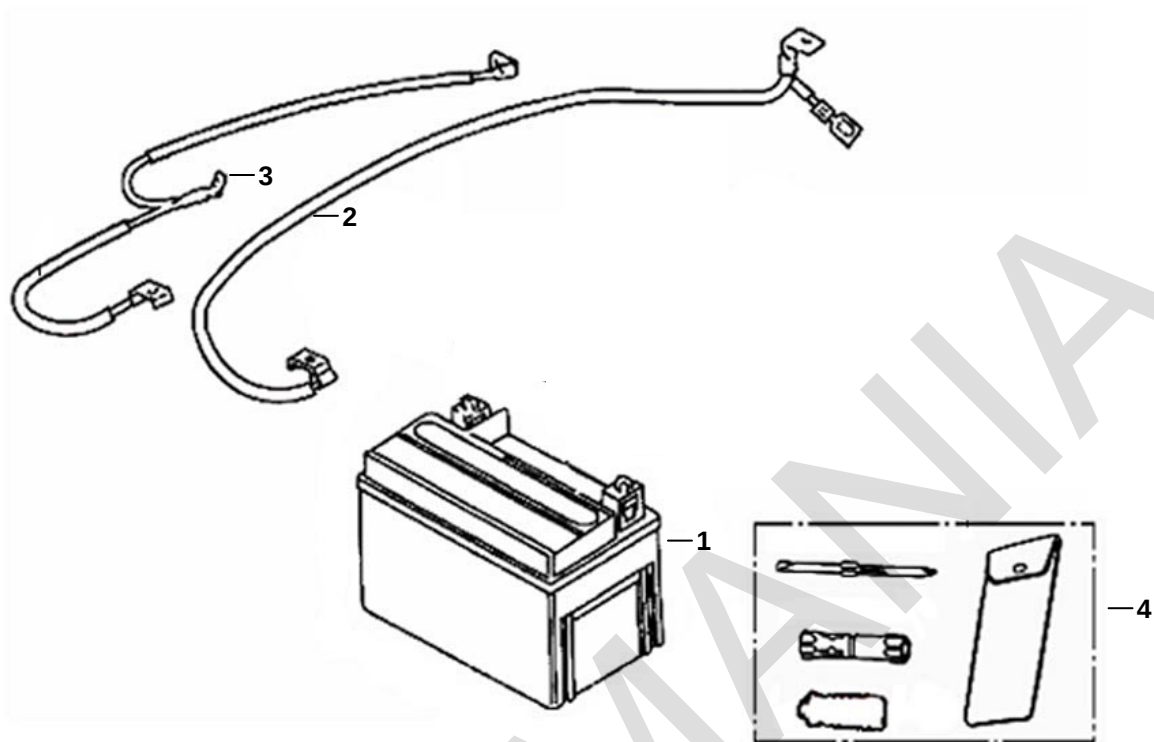


Ref. No	Part Number	Description		Reqd. No
1	31500-EG13-P000	Battery ASSY	电瓶总成	1
2	32411-ABA-0100	Battery cable	电瓶火线	1
3	32412-ABA-0001=	Earth cable	电瓶接地线	1
4	89010-V1F-A001	Tool set	工具组	1

F-16 Air Cleaner

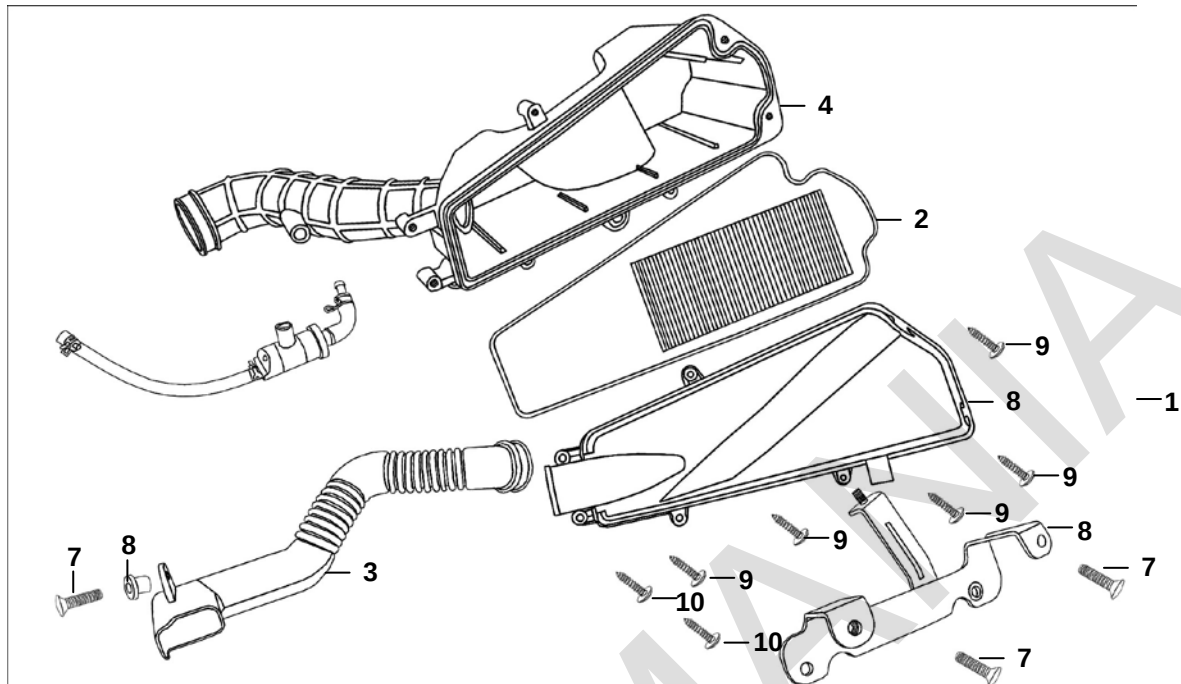


Ref. No	Part Number	Description		Reqd. No
1	17200-ALA-0001	Air cleaner ASSY	空气滤清器总成	1
2	17211-M9Q-0001	AIR/C. element COMP	空滤芯	1
3	17216-ABA-0001	AIR/C. inlet tube	空滤进气管	1
4	17231-ABA-0101	AIR/C. case	空滤盖	1
5	95801-06012-04	Flange bolt 6X12	缘面螺栓 6X12	3
6	18295-F3E-0001	Collar M6	M6 衬套	1
7	61114-AKA-0002	AIR/C PRATE	空滤器连接支架	1
8	17231-ABA-0101	AIR/C. COVER	空滤盖	1
9	90109-48168	Tapping screw 4.8*16	十字大盘头自攻螺钉 4.8*16	5
10	90109-48168	Tapping screw 4.8*18	十字盘头自攻螺钉 4.8*18	2

F-17 Exhaust Muffler

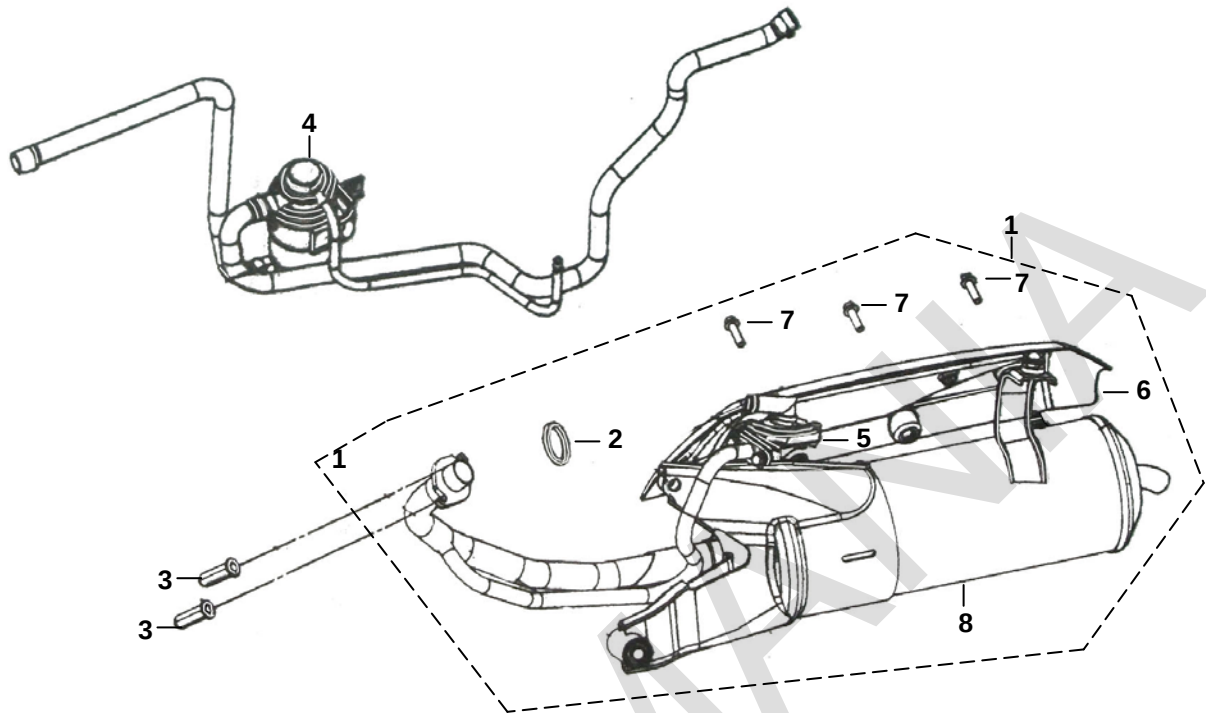


Ref. No	Part Number	Description		Reqd. No
1	18000-AEG-0000	EXH. muffler ASSY	排气管总成	1
2	18292-A6A-0001	EXH. pipe gasket	排气管接头垫片	1
3	90301-M9Q-0002	Nut muffler joint M7	排气管螺母	2
4	1865A-ANA-0002	A.I.C.V. unit	AI	1
5	18601-MJ1-7901	Reed valve COMP	簧片阀组	1
6	18317-KAA-0000	Muffler protector COMP	护热盖	1
7	96001-06022-49	Flange bolt SH 6*22	缘面螺栓 6X22	3
8	18300-AEF-0000	Exhaust muffler COMP	排气管本体	1

F-18 Main Stand • Kick Starter Arm

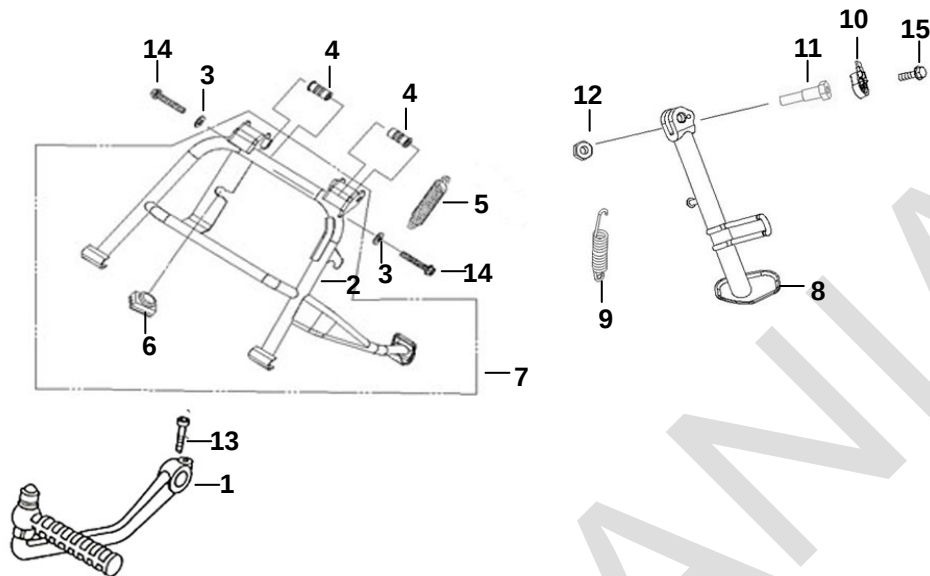


Ref. No	Part Number	Description	Reqd. No
1	28300-F6C-0000	Kick starter arm ASSY	1
2	50500-ANA-0005	Main stand COMP	1
3	50503-F6B-0000	Main stand washer	2
4	50504-Z6A-0000	Main stand collar	2
5	5052A-APA-0001	Main stand SPG. ASSY (GREEN)	1
6	50506-ABA-0000	Stand stop rubber A	1
7	5050A-ANA-0005	Main stand ASSY	1
8	50530-AWR-0002	Side stand COMP	1
9	50535-Z7C-0000	Side stand SPG. ASSY	1
10	35270-Z7C-0000	Side stand SW. ASS'Y	1
11	90108-Z7C-0100	Side stand pivot screw	1
12	94030-08000	HEX. nut 8MM	1
13	95701-06025-04	Flange bolt 6X25	1
14	95801-08050-04	Flange bolt 8X50	2
15	96001-06016-02	Flange bolt 6*16	1

F-19 Tail Light • RR. Cushion

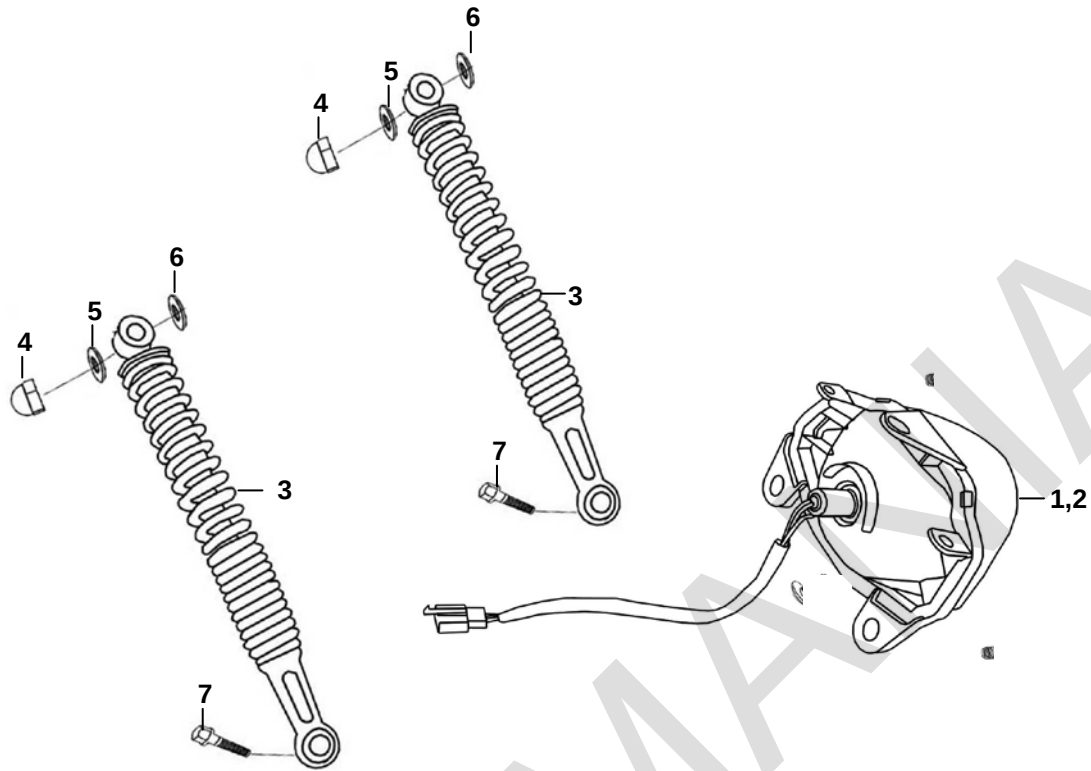


Ref. No	Part Number	Description	Reqd. No
1	33700-ABA-0000	Tail light ASSY	1
2	34906-ABF-0000	Tail & stop bulb	1
3	52400-AWR-0001	RR. cushion ASSY	2
4	94050-10080	Flange nut 10MM	2
5	94101-10800	Plain wansher 10MM	2
6	94101-12800	Plain wansher 12MM	2
7	95801-08035-04	Flange bolt 8X35	2

F-20 Rear Fender • Rear Inner Fender

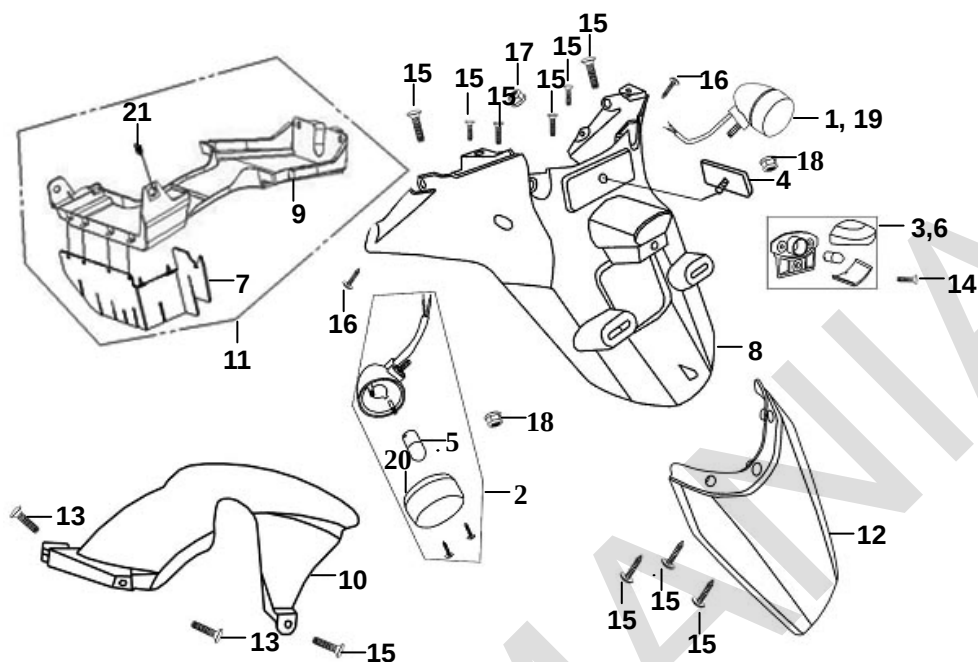


Ref. No	Part Number	Description	Reqd. No
1	33600-ABA-0000	RR R winker ASSY	1
2	33650-ABA-0000	RR L winker ASSY	1
3	33740-ABA-0000	License light ASSY	1
4	33741-ABA-0000	RR. reflex reflector	1
5	34905-A8D-0000	Winker bulb	2
6	34908-M9Q-2000	Position bulb	1
7	80104-AAA-0000	Splash board plate	1
8	80105-ABA-0001	RR. fender	1
9	80106-AWR-0002	RR. inner fender	1
10	80107-AWR-0000	RR. mudguard	1
11	8010B-AWR-0002	Inner fender ASSY	1
12	80110-AAA-0000	RR. fender mudguard	1
13	90111-AAA-0000	Flange bolt 6MM	2
14	93891-05010-00	Washer screw 5X14	1
15	90109-42168	Tapping screw	10
16	90109-48168	Tapping screw 4X12	2
17	94050-05070	Flange nut 5MM	1
18	94050-05080	Flange nut 5MM	2
19	33602-ABA-0000	RR. R. winker lens	1
20	33652-ABA-0000	RR L. winker lens	1
21	90305-M9Q-0000	Clip nut 6mm	1

F-21 Wire Harness

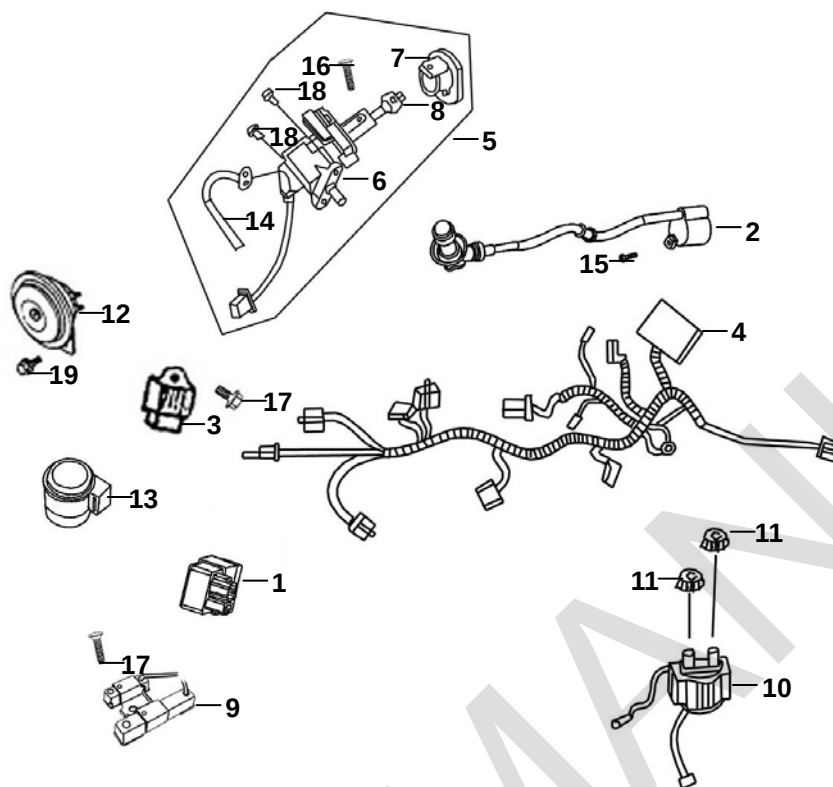

Ref. No	Part Number	Description		Reqd. No
1	30410-M92-0004	CDI. UNIT COMP	CDI	1
2	3051A-T7A-0000	IGN. COIL. ASSY	高压包总成	1
3	31600-ZDA-0001	REG. REC. COMP	整流器	1
4	32100-AEF-0001	Wire harness	电路主线	1
5	35010-ABA-0000	Key set	套锁	1
6	35100-ABA-0000	Comb sw and lock ASSY	锁组	1
7	35110-ABA-0000	Ring	主开关盖	1
8	35111-TAA-1000	Key	钥匙	1
9	35400-T3D-A001	Resistor COMP	电阻	1
10	35850-35A-A000	MAG. SW. COMP	启动继电器	1
11	35856-35A-A000	Start MAG. SW. NUT	起动磁性开关	2
12	38110-ABA-0001	Horn COMP	喇叭	1
13	38300-KAA-0000	Ap winker relay ASSY	闪光器	1
14	77240-Z7C-0000	Seat lock lable	坐垫导线锁	1
15	90112-AAA-0000	Flange bolt 5X22	缘面螺栓 5X22	1
16	93891-05010-00	Screw washer 5X8	垫片螺丝 5X8	1
17	95801-06016-04	Flange bolt 6X16	缘面螺栓 6X16	2
18	95801-06016-08	Flange bolt 6X18	缘面螺栓 6X18	2
19	95801-08012-08	Flange bolt 8X12	缘面螺栓 8X12	1

F-22 Frame Body • Engine Hanger

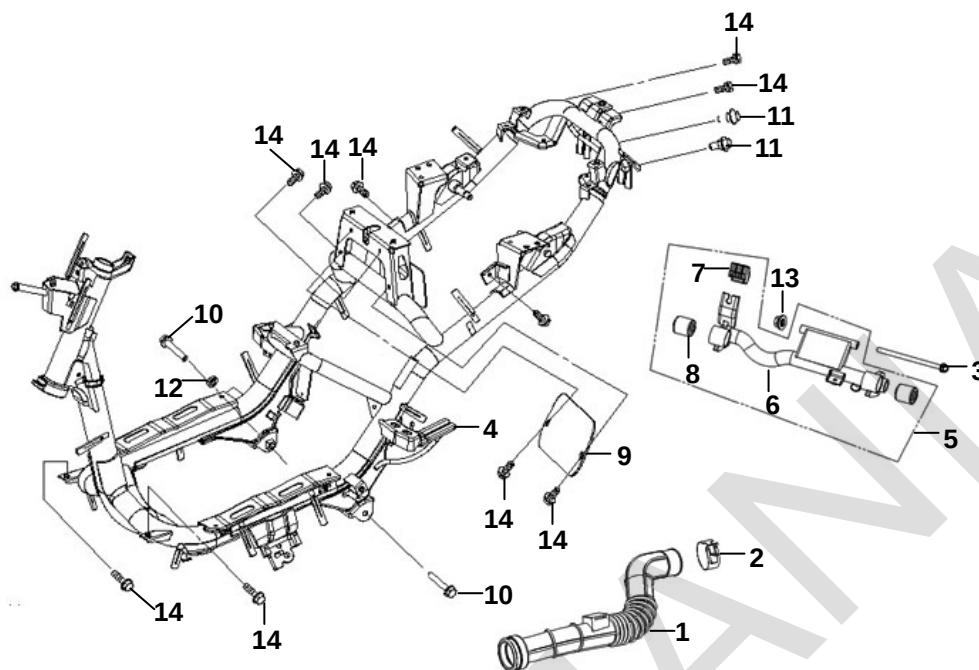

Ref. No	Part Number	Description		Reqd. No
1	11345-ABA-0005	L. cover duct	左盖冷却导管	1
2	11346-M9Q-0000	L. cover duct band	左盖冷却导管夹	1
3	44301-AAA-0000=	Flange bolt10*172	缘面螺栓 10*172	1
4	50100-AWR-0003	Frame body COMP.	车架	1
5	50350-ANA-0100	Eng hanger link ASSY.	引擎悬吊总成	1
6	50351-ANA-0100	Eng hanger link	引擎悬吊	1
7	50352-A1A-0000	Link stopper. rubber	制止橡皮	1
8	50353-M9Q-0000	Swing lock bush	锁付衬套	2
9	77250-AWR-0000	Seat catch protect plate	坐垫锁防护盖	1
10	90106-ABA-0000	Flange bolt 10*55(green)	缘面螺栓 10*55	2
11	90111-N7K-0000	Flange bolt 6MM	缘面螺栓 6 MM	2
12	90121-M9Q-0001	Distance collar	衬套	1
13	90304-M9Q-0000	Flange. u nut 10mm	缘面螺母 10mm	1
14	95801-06012-04	Flange bolt 6x12	缘面螺栓 6x12	9

MOTOMANIA